

SCS-1R PRINTER TERMINATOR PLUG

Installation Note

 **Note:** UL central station applications must use a serial printer listed for Fire Protective Signaling Applications.

When installing an SCS-1R without a printer, use a Printer Terminator Plug to avoid receiving the following print error message:

- Activity Log Error - See Operations Manual

There are two DB-25 pin connectors on the SCS-1R rear convenience panel. To connect the printer terminator plug, firmly press the plug into the ACTIVITY LOG DB-25 pin connector on the convenience panel.

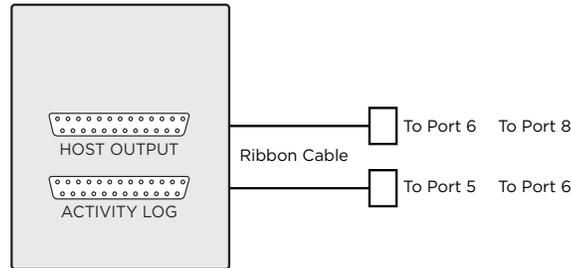


Figure 1: DB-25 pin connectors on SCS-1R convenience panel