

## XT30 and XT50 Series

October 2009

### Version 103 Software Update

Effective October 2009, all XT30 and XT50 Series panels are being manufactured with Version 103 (10/6/09) software. This version is an update from the Version 102 (6/16/09) software previously shipped and contains the following new features:

- Receiver 1 and 2 Programming
- Zone Audit Days
- Auxiliary Zone Routing
- Dialer Trouble Display

XT30 and XT50 software updates are available for download free of charge on the DMP Dealer Direct Website at <http://dmp.com/dealer>.

Remote Link Version 1.51 (10/8/09) or higher is **required** to support the new features of panel Version 103. Remote Link Version 1.51 is available for download on the DMP Dealer Direct Website at <http://dmp.com/dealer>.

### Features

#### Communications

The XT30 and XT50 central station communications have been enhanced to allow separate Receiver 1 and Receiver 2 programming. Alarm reports, Supervisory and Trouble reports, Open and Close reports and a Test report can now be sent to two different receivers. Each receiver may be programmed with a telephone number or IP address for cellular or network communication.

RECEIVER 1 PROG

#### Receiver 1 Programming

Allows you to set the options for the first receiver the XT30/XT50 panel attempts to contact when sending reports. The XT30/XT50 supports communication to two receivers.

ALARM NO YES

#### Alarm Reports

YES enables Abort, Alarm, Alarm Restoral, Alarm Bell Silenced, Ambush, Exit Error, and System Recently Armed reports to be sent to this receiver. Default is YES.

SPV/TRBL NO YES

#### Supervisory/Trouble Reports

YES enables Supervisory, Trouble, Trouble Restoral, Force Armed, Late to Close, and Fault reports to be sent to this receiver. Default is YES.

O/C USER NO YES

#### Opening/Closing and User Reports

YES enables Opening/Closing, Door Access, Schedule and Code Changes, Bypass, and Sensor Reset reports by user to be sent to this receiver. Default is YES.

TESTRPT NO YES

#### Test Report

Enter YES to enable the Recall Test report to be sent to this receiver.

RECEIVER 2 PROG

#### Receiver 2 Programming

Allows you to set the same options for the second receiver the XT30/XT50 panel attempts to contact when sending reports. The XT30/XT50 software version 103 supports communication to two receivers. If you select YES for any of the Receiver 2 options, you must have at least one phone number or IP address programmed in Receiver 2 programming. Receiver 2 defaults are set to NO.



## Zone Audit Days

A new option has been added in Zone Information that allows a zone fault message to be sent to the receiver programmed to receive Supervisory/Trouble Reports. This option is available for all zone types except fire (FI) and fire verify (FV).

ZONE AUDIT DAYS:
00

### Zone Audit Days

Enter the number of days (0 to 99) allowed to elapse without the zone being tripped before a fault message is sent. The message is sent to the receiver(s) programmed to receive Supervisory/Trouble Reports at 10:00 am following the expiration of the timer. Each time the zone is tripped, the Zone Audit Days timer restarts and begins to countdown the number of days programmed. After the countdown expires, a fault message is sent and the Zone Audit Days timer restarts and begins to countdown the number of days programmed. Available for all zone types except fire and fire verify. Enter 0 (zero) to disable this function. Default is 0 (zero).

## Auxiliary Zones

A new option has been added in Zone Information for Auxiliary 1 and 2 type zones that allows each Auxiliary zone to be routed to Receiver 1, Receiver 2 or Both.

RECEIVER ROUTING
NORMAL

### Receiver Routing

This option displays if Zone Type is set for Auxiliary 1 or Auxiliary 2. Press any top row key to select the Receiver Routing for the selected zone.

NORM	1	2	BOTH
------	---	---	------

Select NORM to send Alarm and Supv/Trbl messages from this zone to receiver 1 or receiver 2 as programmed within the receiver.

Select 1 to send Alarm and Supv/Trbl messages from this zone to receiver 1 only, regardless of the programming for that receiver.

Select 2 to send Alarm and Supv/Trbl messages from this zone to receiver 2 only, regardless of the programming for that receiver.

Select BOTH to send Alarm and Supv/Trbl messages from this zone to both receivers, regardless of the programming for either receiver.

## Dialer Trouble Display

For Area Arming systems, the keypad displays DIALER -TRBL after the panel has made ten unsuccessful dial attempts to contact the central station receiver. The display clears from the keypad when a successful dialer communication occurs with the receiver. This operation occurs for panels programmed for DD or CID communication.

Dialer trouble does not display for systems that use Home/Sleep/Away or All/Perimeter arming.

## Obtaining the New Software

The XT30 and XT50 Series software update and Remote Link update are available for download free of charge on the DMP Dealer Direct Website at <http://dmp.com/dealer>.

TU-0538 © 2009 Digital Monitoring Products, Inc.



800-641-4282

[www.dmp.com](http://www.dmp.com)

Made in the USA

INTRUSION • FIRE • ACCESS • NETWORKS

2500 N. Partnership Boulevard

Springfield, Missouri 65803-8877