

XT and XTL Series Panels

February 2014

Version 117 Software Update

XT and XTL Series Version 117 (1/17/14) software is now available for download on the DMP Dealer Direct Website at <http://dmp.com/dealer>.

Effective March 8, 2014, all XT and XTL Series Control Panels are being manufactured with updated Version 117 (1/17/14) software. As of April 14, 2014, inventory for the XT and XTL Series Control Panels will be completely updated to Version 117 (1/17/14) software.

Feature

Virtual Keypad™ App User Code Management

Version 117 (1/17/14) software supports the User Code Management feature in Version 3.5.0 of the Virtual Keypad App for Apple iPad/iPhone systems. App users (Master Level only) can now Add, Edit and Delete users of XT and XTL Series Control Panels from the Users tab of the Virtual Keypad App.

To add a user, select Add in the top left corner of the Users tab. Enter the user's information in the User Settings screen.

- User Name - Up to 16 Characters
- User Number - 1-30 for XTL/XT30 Series, 1-99 for XT50 Series. The next available user number is displayed by default. The user may enter a different number. Leading zeros are not required.
- User Code - Four digits
- Areas to Arm/Disarm - Select the arrow to choose areas by name. Select User Settings to return. This option only displays for Area systems.
- Master user - Standard user if OFF
- Temporary Code - The user is automatically deleted in seven days.
- Arm Only - No disarm authority

Selecting Save creates the user in the control panel.

To edit, select the Users tab and choose a user name to edit in the Users Settings screen.

To delete, select the Users tab, choose a user name and choose Delete in the Users Settings screen.

To retrieve an updated list of users from the control panel, select Refresh in the top right corner of the Users tab (Master Level only).

For additional information on User Code Management refer to TU-0722 for the release of the Virtual Keypad App for Apple iPad/iPhone systems, Version 3.5.0.

Disarm Disable

Version 117 (1/17/14) software now supports Disarm Disable for 1103 Wireless Universal Transmitters that are using Version 107 (1/21/14) or higher software. When Disarm Disable is set to YES (default) in Zone Information, the 1103 will not send a zone tripped message to the wireless receiver when the system is disarmed unless the zone remains tripped for longer than 20 seconds. Supervision, low battery and tamper messages are always sent.

Obtaining the New Software

XT and XTL Series software updates are available for download free of charge on the DMP Dealer Direct Website at <http://dmp.com/dealer>.

