

## 1106 Universal Transmitter

May 2017

### Firmware Update

1106 Universal Transmitters with firmware Version 108 (3/14/17) will feature the Disarm/Disable operation to save battery life. Updated devices began shipping on May 1, 2017.

#### Disarm/Disable Operation

Turning on the Disarm/Disable operation disables the 1106 Universal Transmitter from sending Zone Tripped messages to the panel if the zone trips while the system is disarmed. When the system is disarmed, the 1106 still sends Supervision, Tamper, and Low Battery messages to the panel.

By disabling Zone Tripped messages, the Disarm/Disable operation extends the battery life of 1106 Universal Transmitters.

**Note:** If the Disarm/Disable operation is enabled, then the 1106 Universal Transmitter will not send traffic reports or sensor activity notifications to the panel. Additionally, the Zone Monitor feature (or Chime) will be disabled for the transmitter.

The Disarm/Disable operation is enabled during panel programming, while zones are being programmed into the panel.



Figure 1: 1106 Universal Transmitter

### Obtaining the New Firmware

New 1106 Universal Transmitters with firmware Version 108 (3/14/17) can be ordered by contacting DMP Customer Service at 1-800-641-4282 or by visiting [buy.dmp.com](http://buy.dmp.com).