

1142BC Two-Button Wireless Transmitter

November 2017

Plastic Housing Update

1142BC-W (white) Two-Button Wireless Transmitters are now being manufactured with an updated case and belt clip design. Updated devices will begin shipping immediately. 1142BC-B (black) will also be getting an updated plastic design at a later date.

Updated Case Design

The 1142BC case features a streamlined and more durable plastic design. The belt clip now has a vertical orientation, allowing for more secure belt clip attachment. Follow these directions to install the 1142BC:

1. Open the 1142BC by inserting a 3/16" slotted tip screwdriver in **Tab 1**, then twist clockwise.
2. Insert the screwdriver in **Tab 2** and twist counterclockwise until the housing completely opens. See Figure 1.
3. Set aside the cover containing the PCB, battery, and LED.
4. Align the belt clip spacer with the housing indentation, then use the supplied screw to secure the belt clip to the housing.
5. Align the cover and LED cut out with the base and LED cut out, then snap into place.

Firmware features remain the same.

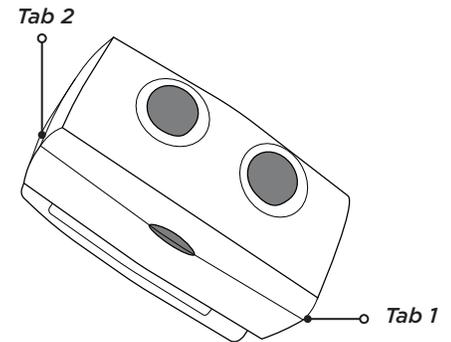


Figure 1: Open the 1142BC

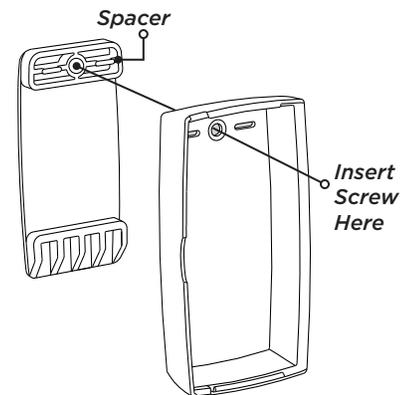


Figure 2: Install the Belt Clip