

## 1142 and 1142BC Two-Button Wireless Transmitters

December 2017

### Plastic Housing Update

Black 1142 and 1142BC Two-Button Wireless Transmitters are now being manufactured with an updated case and belt clip design. Updated devices will begin shipping immediately.

#### Updated Case Design

The 1142 and 1142BC cases feature a streamlined and more durable plastic design.

#### Assemble the 1142BC

The 1142BC now has a vertical orientation, allowing for more secure belt clip attachment. Follow these directions to attach the belt clip:

1. To open the 1142BC, insert a 3/16" slotted tip screwdriver in Tab 1 and twist clockwise.
2. Insert the screwdriver in Tab 2 and twist counterclockwise until the housing completely opens. See Figure 1.
3. Set aside the cover containing the PCB, battery, and LED.
4. Align the belt clip spacer with the housing indentation, then use the supplied screw to secure the belt clip to the housing. See Figure 2.
5. Align the cover and LED cut out with the base and LED cut out, then snap them into place.

Firmware features remain the same.

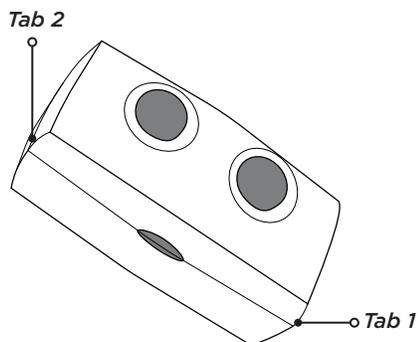


Figure 1: Open the 1142BC

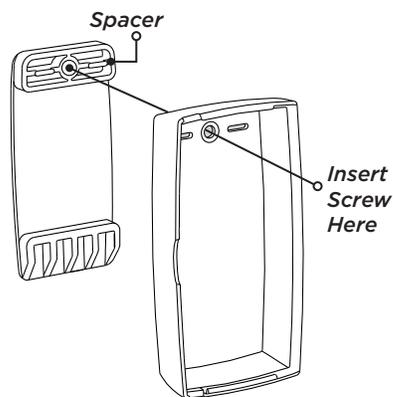


Figure 2: Install the Belt Clip