

FEATURE UPDATE | SEPTEMBER 2019

Version 2.15.0 Update

Effective September 4th, 2019, VirtualKeypad.com is updated to Version 2.15.0. The following feature is available:

Feature

Arming in Admin (Virtual Keypad Access)


View arming status and arm or disarm multiple systems from the **Admin** page. Arming must be enabled in Dealer Admin before the feature can be used in Virtual Keypad. To enable and use this feature, complete the following steps.

Enable Arming in Dealer Admin

1. Log in to [Dealer Admin](#).
2. On the **Customers** page, find the customer and select their name.
3. The **Customer Summary** page opens. In **App Users**, find the user's row and select the More icon, then select **Edit**.
4. In **Authority Level**, select **Administrator**.
5. In the system permissions area, select **Arming** for the applicable systems.
6. To keep your changes, press **Save**.

Access Arming in Virtual Keypad

To access **Arming** in admin tools, log in to VirtualKeypad.com and select **Admin**. In the menu, select **Arming**. The arming page contains a list of systems. The arming status of each system is displayed next to the system name. To view the arm/disarm pane and related actions for a particular system, select the system name.

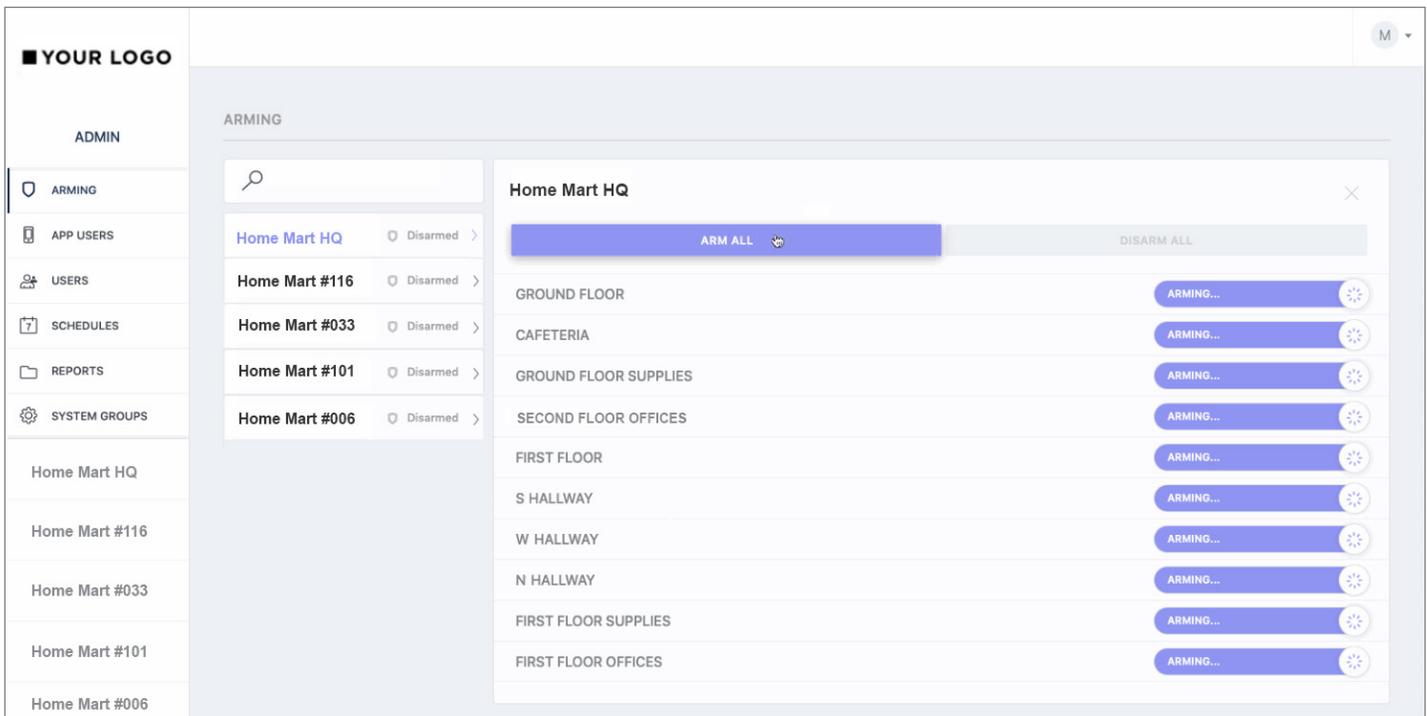

The screenshot shows the 'ADMIN' section of the Virtual Keypad interface. The 'ARMING' menu item is selected. The main content area displays a list of systems, all of which are 'Disarmed'. A modal window titled 'Home Mart HQ' is open, showing a detailed view of the system's arming status. The modal includes a search bar, a list of areas (GROUND FLOOR, CAFETERIA, GROUND FLOOR SUPPLIES, SECOND FLOOR OFFICES, FIRST FLOOR, S HALLWAY, W HALLWAY, N HALLWAY, FIRST FLOOR SUPPLIES, FIRST FLOOR OFFICES), and 'ARMING...' buttons for each area. The 'ARM ALL' button is highlighted in blue.

Arming in Virtual Keypad