

### Version 8.4.1 (10/17/19) Update

Effective November 1st, 2019, all Entré Security & Access Management software will be manufactured as Version 8.4.1 (10/17/19).

To use any of the following features, panels must be updated to firmware Version 172 or higher.

### Updated Functionality

#### Updated Fire Zone Type

Fire Panel Slave is an available option for Fire (FI) zones. This option allows a fire zone the ability to provide slave communication to a separate fire alarm panel. If enabled, this zone will transmit a restoral immediately when restored by the fire panel being monitored without requiring a sensor reset. If disabled, this zone will operate as a standard fire type zone and a sensor reset is required before the zone will return to normal.

#### Improved Keyfob Control Interface

In Entré 8.4.1, improvements have been made to the keyfob control interface concerning the display of press time and output assignment.

#### Improved Badge Design Preview

Improvements have been made to the functionality of the badge design preview window.

#### Updated Workstation Views for Operators

Workstations can be hidden from the Hardware Tree when using partitions. This functionality enables central station administrators to hide workstations in unassigned partitions from operators.

#### Improved Performance

Program architecture and frameworks have been adjusted to improve the overall performance of Entré.

### Obtaining the New Software

Entré Security & Access Management software Version 8.4.1 is provided to dealers who have previously purchased an Entré license, are current with their Entré support agreement, and who have an Entré Certified Technician.

To upgrade to Entré Version 8.4.1 (10/17/19), please complete the [Pre-Upgrade Checklist \(LT-1782\)](#) before contacting the Software Support Team in DMP Technical Support at 888.436.7832.

For more information about Entré, visit [DMP.com/Entre](http://DMP.com/Entre).