Entré Security & Access Management Software



FEATURE UPDATE | MARCH 2022

Version 9.0 (3/10/22) Feature Update

Effective March 14, 2022, all Entré Security & Access Management software will be manufactured with updated Version 9.0 (3/10/22).

Entré 9.0 works with panel firmware Versions 181 to 202.

Features

Secure Lightweight Directory Access Protocol (Secure LDAP) Integration for Entré NOC Entré 9.0 (3/10/22) provides the ability to use Microsoft's Active Directory and LDAP 3 Directory Services. With this new feature, NOC operators can view and edit the data in their active directories across multiple systems and locations. This includes managing and validating user information and passwords. For more information on this process, see Entré Single Sign-On, Active Directory, and LDAPS Guide (LT-2455).

Change Zone Type

Zones can be changed from area to 24-hour zones and vice versa. when changing zone types, download changes to the panel. Clear any active alarms, then go to **Edit Panel** > **Edit Zones** to make changes as necessary. When changing zone types, be sure to download changes to the panel so that the changes do not delete themselves.

Add Multiple Panels Simultaneously

Multiple operators can add panels to Entré at the same time.

Improvements

Faster Driver Startup

Improvements have been made to the Entré driver, allowing it to start up faster.

Obtaining the New Software

Entré Security & Access Management software Version 9.0 (3/10/22) is provided to dealers who have previously purchased an Entré license, are current with their Entré support agreement, and who have an Entré Certified Technician.

To upgrade to Entré Version 9.0 (3/10/22), please complete the <u>Pre-Upgrade Checklist (LT-1782)</u> before contacting the Software Support Team in DMP Technical Support at 888.436.7832. Before upgrading, DMP recommends that you reindex and reorganize the SQL database after upgrading Entré. It is recommended to make this part of your standard database maintenance as described in the <u>Entré Best Practices: Server Maintenance Guide (LT-1658)</u>.

For more information about Entré, visit the Entré Software page.