

Version 9.1 (10/24/22) Feature Update

Effective November 2, 2022, all Entré Security & Access Management software will be manufactured with updated Version 9.1 (10/24/22).

Entré 9.1 is compatible with Version 213 firmware and lower, but only features found in Version 202 firmware and lower are available.

Features

Entré NOC API

With Version 9.1 (10/24/22), Entré NOC supports the new Entré NOC API (Application Programming Interface) which allows a third party software to perform the following tasks:

- Create, update, and delete personnel
- Create, update, and delete badges
- Create and update operators
- Email user code changes to personnel

TLS 1.2 Support for Client, Application Server, Web, and SQL Communication

Entré Version 9.1 (10/24/22) now supports TLS Version 1.2 to meet current industry standards.

Support for High Availability Connection to SQL

To meet requirements for current access control platforms and general site security, Entré utilizes a Microsoft driver for SQL connectivity rather than JDBC. For more information on this topic, see Microsoft's article on [JDBC Driver Support for High Availability, Disaster Recovery](#).

Ability to Select Window's or SQL Authentication During Installation

With Entré Version 9.1 (10/24/22), you can select a Window's or SQL Authentication during the Entré installation.

Obtaining the New Software

Entré Security & Access Management software Version 9.1 (10/24/22) is provided to dealers who have previously purchased an Entré license, who are current with their Entré support agreement, and who have an Entré Certified Technician.

To upgrade to Entré Version 9.1 (10/24/22), please complete the [Pre-Upgrade Checklist \(LT-1782\)](#) before contacting the Software Support Team in DMP Technical Support at 888.436.7832.

Before upgrading, perform a backup of your SQL database using Microsoft SQL Server Management Studio. DMP recommends that you reindex and reorganize the SQL database after upgrading Entré. It is recommended to make this part of your standard database maintenance as described in the Server Maintenance section of the [Entré Installation, Setup, and Server Maintenance Guide \(LT-2494\)](#).

For more information about Entré, visit the [Entré Software](#) page.