# Dealer Admin™ and Virtual Keypad™



## FEATURE UPDATE | JUNE 2025

### **New Features**

Dealer Admin and Virtual Keypad have been updated to include Single Sign-On (SSO).

#### Single Sign-On

A single set of credentials can now be used to access multiple applications, including Dealer Admin and Virtual Keypad (IOS, Android, Browser).



Note: SSO for Dealer Admin and Virtual Keypad requires a valid subscription to these services. To enable SSO, contact your DMP Regional Sales Manager or Inside Sales.

#### Dealer Admin

To access SSO on Dealer Admin, complete the following steps:

- Navigate to the Dealer Admin home page (<a href="http://dealer.securecomwireless.com">http://dealer.securecomwireless.com</a>).
- 2. Select **SSO Login**. A pop-up appears requesting an SSO email.
- 3. Enter your email address and select Continue.
- 4. You are sent to your company log in page to put in your email and password.
- 5. If the email and password are valid, you are automatically returned to Dealer Admin and logged in.

#### Virtual Keypad (IOS, Android, Browser)

To access SSO on Virtual Keypad, complete the following steps:

- 1. Navigate to the Virtual Keypad login page.
- 2. Select SSO Login. A pop-up appears requesting an SSO email.
- 3. Enter your email address and select Continue.
- 4. You are sent to your company log in page to put in your email and password.
- 5. If the email and password are valid, you are automatically returned to Virtual Keypad and logged in.

# More Information

To learn more, refer to the following documentation:

- Dealer Admin Help: Get Started
- Dealer Admin Help: Single Sign-On
- Virtual Keypad App Help: Log In
- VirtualKeypad.com Help: Login



