

Updated Supporting Products

- ▶ [DMPDealerAdmin.com](#)
Version 2.9.1
- ▶ Tech APP
Version 2.0 (Update not required to get these features)
- ▶ Remote Link
Version 1.86

Features

- ▶ Additional Receiver 2 functionality
- ▶ Removal of APN 2
- ▶ Enhanced communication
- ▶ Checkin messages and Entry Delay
- ▶ Keypad Quick Key Operation

⊕ Receiver 2 Backup

You now have the option to program Receiver 2 exclusively as a backup receiver. If programmed this way, Receiver 2 will start receiving messages when Receiver 1 fails, and will return to its backup state when Receiver 1 returns to its normal state. You will continue to have the option to allow Receiver 2 to continue to operate as it always has, to report dual messages to the central station with Receiver 1.

Upon upgrading your existing panel to Version 182, if Receiver 1 is currently programmed with IP 1 and IP 2 addresses, Communication programming will change so that Receiver 1 has only an IP 1 address and Receiver 2 has only an IP 1 address with the option of enabling the Receiver 2 Backup. Use the steps below to program this new feature from a keypad, [DMPDealerAdmin.com](#), and Remote Link.

Programming Keypad

1. Enter **6653** (PROG) and **CMD** to enter the Programmer menu.
2. In **COMMUNICATION** programming, navigate to **RECEIVER 2 PROG**.
3. Select **YES** at **RECEIVER 2 BACKUP?** to allow Receiver 2 to start receiving messages when Receiver 1 fails. Select **NO** to allow Receiver 2 to report dual messages with Receiver 1.
4. Press **CMD** until **STOP** displays and press a top row select key or area to save programming.

DMPDealerAdmin.com

1. Log into [DMPDealerAdmin.com](#).
2. Select a system and click **Full Programming** in the navigation menu.
3. In **Communication**, enable **Receiver 2 Backup** in the Receiver 2 programming section and click **Save**.

Remote Link

1. Log into Remote Link.
2. Select a system and click **Program** in the top menu then select **Communication**.
3. Enable **Receiver 2 Backup** in the Receiver 2 Programming section.

⊕ APN 2

With Version 182, you will no longer have the option to program an APN 2 in Communication programming. This saves time in panel programming since APN 2 has the same functionality as APN 1.

⬆ Communication Enhancements

Communication programming has been enhanced so that the XT Series panel family has improved speed at which the panel attempts various communication methods.

⊕ **Checkin Message and Entry Delay**

XT Series panels running Version 182 will now send Checkin messages to the receiver if an entry zone is activated when a system is armed. If the system is disarmed before the entry delay timer expires, the Checkin message is canceled. If the system isn't disarmed and is unable to communicate to the central station by the time the entry delay timer expires, the receiver will notify the central station that the panel is not responding. Use the steps below to program this new feature from a keypad, DMPDealerAdmin.com, and Remote Link.

Programming Keypad

1. Enter **6653** (PROG) and **CMD** to enter the Programmer menu.
2. In **System Reports** programming, navigate to **Entry Checkin Protection**.
3. Select **YES** to allow the panel to send a Checkin Message when an Entry Delay begins.
4. Press **CMD** until **STOP** displays and press a top row select key or area to save programming.

DMPDealerAdmin.com

1. Log into DMPDealerAdmin.com.
2. Select a system and click **Full Programming** in the navigation menu.
3. In **System Reports**, enable the **Entry Checkin Protection** option and click **Save**.

Remote Link

1. Log into Remote Link.
2. Select a system and click **Program** in the top menu and select **System Reports**.
3. Check the **Entry Checkin Protection** box and click **OK**.

⊕ **Additional Sensor Activity Zones**

When enabled in DMPDealerAdmin.com, users who use the Virtual Keypad App to control their system will now have the ability to allow up to 50 night or exit type zones to report to them as activity occurs on their system. Follow the steps below to enable this feature in DMPDealerAdmin.com and in the Virtual Keypad App.

DMPDealerAdmin.com

1. Log into DMPDealerAdmin.com.
2. Select a system and click **Edit** to edit the system information page.
3. In the Activity Sensors section, enable up to 50 sensors for the user to view in the Virtual Keypad App.

Virtual Keypad App

1. Log into the Virtual Keypad App.
2. Select a system and tap **Settings** in the navigation menu.
3. Tap **Push Notifications**.
4. In the **Sensor Activity** section, enable the sensors that will send push notifications when activity occurs from that sensor.

⊕ **Quick Key Operation**

With Version 182, the 0 (zero) key can now be used as a shortcut to the zone bypass menu. Simply press and hold **0** on a Thinline Icon keypad to choose which zone you would like to bypass.

Obtaining the New Software and Firmware

Tech APP updates are available for download, free of charge, from the Google Play Store and the App Store. Firmware updates are available, free of charge, at DMP.com/Dealer_Direct.