

## Entré Security & Access Management Software

February 2018

### Version 7.9.9 Update

Effective February 5, 2018, all Entré Security & Access Management software is being manufactured as Version 7.9.9 (2/1/18). If your current Entré software is previous to Version 7.9.5, update to Version 7.9.5 before updating to Version 7.9.9 (2/1/18).

### Features

#### Temporary Schedules

With Version 7.9.9 (2/1/18), Entré allows you to program temporary schedules. To create a temporary schedule, navigate to **Panel Schedules** in the **Configuration** menu and click **Add**. Check the **Temporary Schedule** box and enter a **Begin** and **End Date**. See Figure 1. Enter any other necessary information and click **Save and Close**. A temporary schedule expires at the set end date and is automatically deleted from the panel.

	Start time	End time	End day
Sunday:			Sunday
Monday:	7:00	17:00	Monday
Tuesday:	7:00	17:00	Tuesday
Wednesday:	7:00	17:00	Wednesday
Thursday:	7:00	17:00	Thursday
Friday:	7:00	17:00	Friday
Saturday:			Saturday
Holiday A:			
Holiday B:			
Holiday C:			

Figure 1: Temporary Schedule Option

#### Entré Reports

For XR150/XR550 Series panels with Version 172 or higher, you can now decide which types of reports you would like to have sent to Entré. In the Remote Options section of panel programming, select from the following reports. All Entré reports are enabled by default.

- **Entré Arm/Disarm Reports** - Sends arming, disarming, and Late to Close events. Includes the area number, name and action, the user number and name, and the time and date the event occurred.
- **Entré Zone Reports**- Sends changes in the status of active zones. Includes the zone number, name, type, the action (alarm, trouble, bypass, etc.), user number (if applicable), and area name. During a Walk Test, Verify and Fail messages are sent for each zone.

- **Entré User Command Reports** - Sends user code changes, schedule changes, and door access denied events.
- **Entré Door Reports** - Sends door access activity, door number, user number and name, and time and date the event occurred.
- **Entré Supervisory Reports** - Sends system monitor reports, such as AC and battery, and system event reports. If this feature is enabled, the panel also sends Abort, Exit Error, Ambush, System Recently Armed, Alarm Bell Silenced, Unauthorized Entry, and Late to Close reports.

### Inactive User Audit Days *(XR550 only)*

You can now enable Inactive User Code Audit Days on a per-profile basis through Entré. This feature allows you to choose the number of days a user code can remain unused before the panel sends an Inactive User Code message to the receiver and changes the user code to inactive. The range is 0-425 days.

To enable Inactive User Code Audit Days on a specific profile, navigate to the **Management** menu and select **User Code Profile**. Add a profile or select an existing profile to edit. Enter the desired number of days in the **Inactive User Code Audit Days** field and check the **Enabled** box. See Figure 2. Enter any other necessary information and click **Save and Close**.

The screenshot shows a software window titled "Add - User Code Profile". At the top, there are buttons for "Save and Close" and "Report...". Below these are several input fields: "Name" (Profile Name 01), "Location" (with a dropdown menu and "Choose" and "Clear" buttons), and "Re-arm delay" (0). The "Inactive User Audit Days" field is highlighted with a blue border and contains the value "120". Below this field is a note: "(Only applies to panels with 172 or higher firmware.)" and a checked checkbox labeled "Enabled". A "Compatibility" dropdown menu is set to "XR150/XR350/XR550". Below this is a "Properties" section with a grid of 16 checkboxes for various system features: Arm, Disarm, Alarm Silence, Sensor Reset, Door Access, Armed Areas, Toggle Outputs, Zone Status, Bypass Zones, Monitor Zones, System Status, System Test, Edit Profiles, Edit User Codes, Edit Schedules, Set Time, Display Events, Request Service, Fire Drill, Extend, Temp Code, Anti-passback, Easy Arm, Use Secondary Lang., Lockdown, Door Lock/Unlock, Card + PIN, and Technician User. At the bottom, there are four sections: "Access areas", "Arm/disarm areas", "Output groups", and "Time schedules", each with a text input field and "Choose" and "Clear" buttons.

Figure 2: Inactive User Audit Days Option

### 1136 Wireless Remote Chime

Entré now supports the 1136 Wireless Remote Chime.

## Improved DVR Compatibility

With Version 7.9.9 (2/1/18), Entré supports the following DVR drivers:

- **Verint:** NetDVR I (Version 6.47.x or higher), NetDVR II (Version 8.7.x or higher), and EdgeVR (all versions)
- **3VR:** E-Series, P-Series, S-Series, and ServerClass
- **exacqVision**

Previously supported units from Dedicated Macros and March Networks are no longer being supported by their manufacturers.

## Updated Functionality

### Inactive User Alarm Notification

Now, when a user code reaches the end of its programmed Inactive User Audit Days, an alarm notification is displayed in Entré. See Figure 3. This alarm is designed to inform the operator that the user code is now inactive. At this point, the operator can choose to set the user's badge to inactive in Entré.

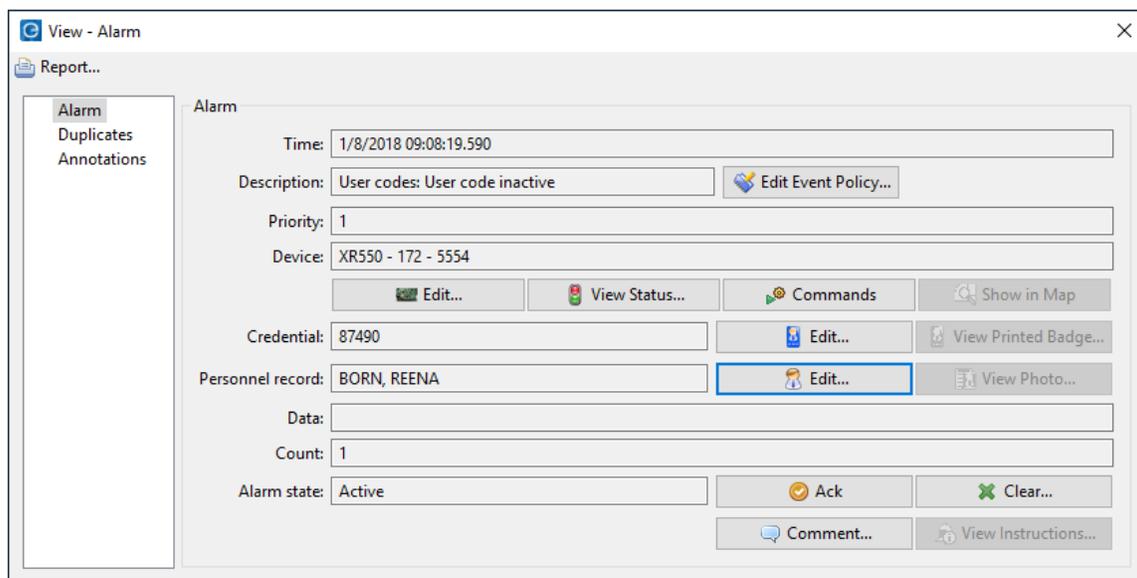


Figure 3: Inactive User Code Alarm Notification

## Upgrading or Ordering Software

Entré Security & Access Management Software Version 7.9.9 (2/1/18) is automatically provided to dealers who have previously purchased an Entré license and are current with their Entré support agreement.

Additional Entré information and documentation can be found at [DMP.com/Entre](http://DMP.com/Entre).