# **695-7800-WLNX-W BACKBOX**

# Installation Guide

 


Figure 1: 695-7800-WLNX-W Backbox

#### DESCRIPTION

The 695-7800-WLNX-W Backbox is a mounting option for the 7873/7873H Series Graphic Touchscreen Keypads and WaveLynx Ethos 10 Mullion Reader.

### Compatibility

- 7873/7873H Series Graphic Touchscreen Keypads
- WaveLynx ET10 Mullion Reader

#### What is Included?

- One 695-7800-WLNX-W Backbox
- Four #6 1" Screws
- Two 6-32 0.5" Machine Screws

# Kovr

# CHOOSE THE ORIENTATION OF THE KEYPAD AND READER

You can install the backbox to display the keypad above or below the reader. Refer to Figure 2 for display options.

#### Keypad Above Reader

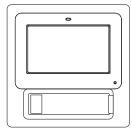





Figure 2: Display Options

# MOUNT THE BACKBOX

- Secure the template in Figure 7 or 8 to the wall. Ensure the height of the reader will comply with ADA standards once installed.
- Cut along the wiring cutout line to create a hole in the wall for the wires.
- 3. Drill holes in the wall at the mounting hole marks.
- 4. Remove the mounting template and secure the backbox to the wall with the four #6 1" provided screws. Use wall anchors as needed. Refer to Figure 3.
- 5. Route the wires from the wall through the wiring cutout in the backbox.

# Keypad Above Reader

# Keypad Below Reader

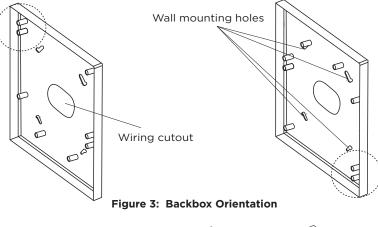

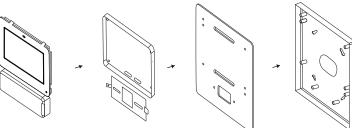


Figure 4: Installation Overview (From Right to Left)



#### ATTACH THE MOUNTING PLATE TO THE BACKBOX

Refer to Figure 5 as needed to complete the following steps:

- Route the wires from the wall through the wiring cutouts in the mounting plate.
- 2. Secure the mounting plate to the backbox with the two 6-32 0.5" provided machine screws.

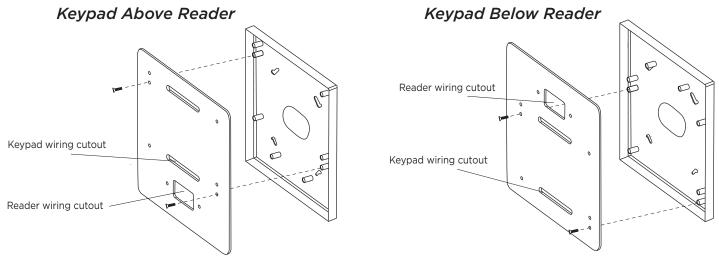


Figure 5: Mounting Plate Diagram

#### MOUNT THE KEYPAD TO THE MOUNTING PLATE

Refer to the keypad installation and programming guide as needed.

- Remove the front cover of the keypad.
- Route the keypad wires through the wiring cutouts on the keypad base.
- Secure the keypad base to the mounting plate using the screws provided with the keypad. Refer to Figure 6.
- 4. Wire the keypad, then push the wires back into the wall.
- 5. Snap the keypad cover onto the keypad base.

#### MOUNT THE READER TO THE MOUNTING PLATE

Refer to the reader installation guide as needed.

- Secure the reader metal wall plate to the mounting plate using the screws provided with the reader. Refer to Figure 6.
- Wire the reader, then push the wires back into the wall.
- Slide the reader onto the plate and secure it with the screw provided with the reader.

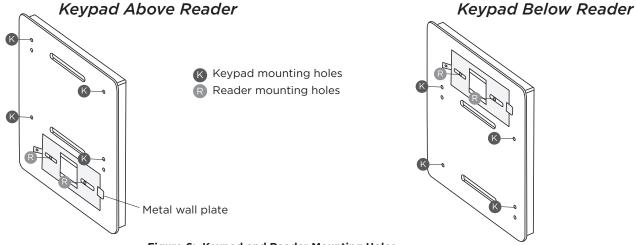


Figure 6: Keypad and Reader Mounting Holes

# PRINT TEMPLATE ACTUAL SIZE.

# Keypad Above Reader

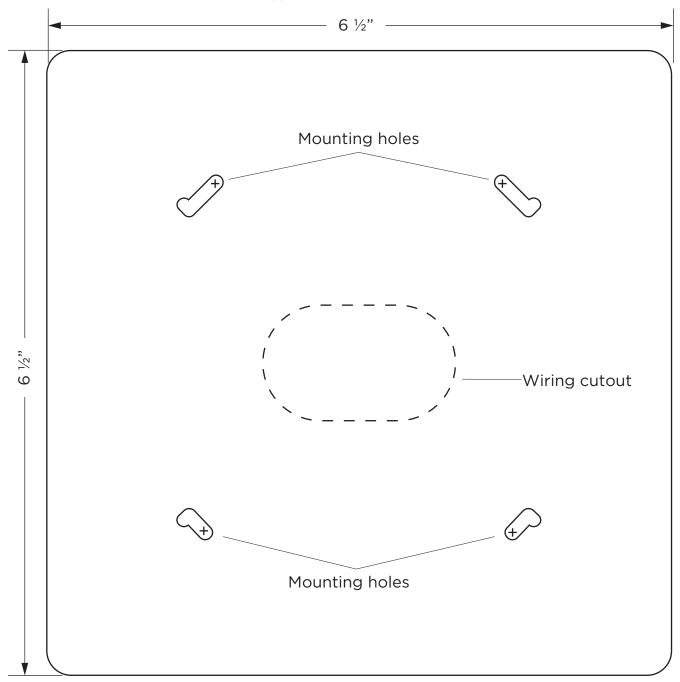


Figure 7: Mounting Template Option 1

#### PRINT TEMPLATE ACTUAL SIZE.

Keypad Below Reader

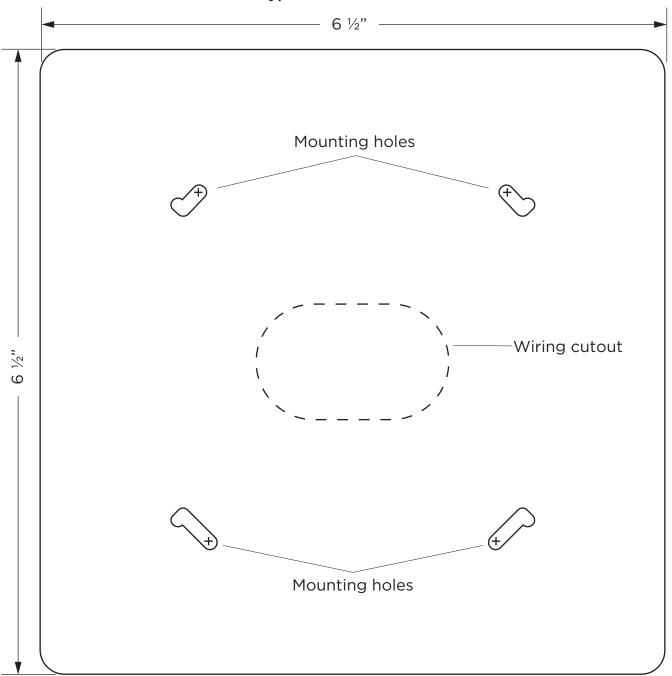


Figure 8: Mounting Template Option 2

# 695-7800-WLNX-W **BACKBOX**



#### **Specifications**

Dimensions (assembled backbox)

7.045" W x 7.045" H x 0.9" D 17.894 cm W x 17.894 cm H x 2.286 cm D Dimensions (backbox only) Dimensions Material

6.48" W x 6.48" H x 0.775" D 16.459 cm W x 16.459 cm H x 1.967 cm D 7.045" W x 7.045" H x 0.125" D (mounting plate) 17.894 cm W x 17.894 cm H x 0.318 cm D Steel backbox and Acrylic Plastic mounting plate

## Ordering Information

695-7800-WLNX-W



Designed, engineered, and manufactured in Springfield, MO using U.S. and global components.

LT-2846 24142

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard Springfield, Missouri 65803-8877 800.641.4282 | DMP.com