



Thank you for your purchase!

# INCLUDES

- Full System User Guide QR Code
- How to Handle an Alarm
- Arm an All/Perimeter System
- Disarm an All/Perimeter System





To view the full XT30/XT50 System User Guide, scan this QR code or visit DMP.com.



#### **HOW TO HANDLE AN ALARM**

Enter your user code or present your credential to the keypad if it has a built-in proximity reader. You will see:

# IS THIS A FALSE ALARM? YES NO

#### **ARM AN ALL/PERIMETER SYSTEM**

Thinline Keypads

- Press CMD until ARM DISARM displays. Select ARM.
- Enter your user code and the keypad displays PERIM ALL.
- Select ALL to arm all areas. The keypad displays ALL SYSTEM ON. Select PERIM to arm only the perimeter. The keypad displays PERIMETER ON.

#### Touchscreen Keypads

- 1. Press and release the shield to open the arming options screen. Select **ARM**.
- Enter your user code if prompted and the keypad displays **PERIM ALL**.
- Select ALL to arm all areas. The keypad displays ALL SYSTEM ON. Select PERIM to arm only the perimeter. The keypad displays PERIMETER ON.

#### **Real Alarm**

Press **NO** to notify the emergency monitoring center. Your system will remain armed.

### **False Alarm**

Press **YES** to cancel the alarm. Your system will disarm.

# DISARM AN ALL/PERIMETER SYSTEM

Thinline Keypads

- Press CMD until ARM DISARM displays.
- 2. Select **DISARM**. The keypad displays **ALL? NO YES.**
- To disarm all areas, select YES. To disarm individual areas, select NO. The keypad displays each area you have access to. Select YES to disarm the areas and NO to leave the area unarmed.

#### Touchscreen Keypads

- Press and release the shield to open the arming options screen. Select **DISARM**.
- 2. Enter your user code and the keypad displays **ALL? NO YES**.
- To disarm all areas, select YES. To disarm individual areas, select NO. The keypad displays each area you have access to. Select YES to disarm the areas and NO to leave the area unarmed.