## MODEL XR6 WIRING DIAGRAM

Refer to the XR6 Installation Guide (LT-0229) for a complete description of wiring connections. Refer to the XR6 Programming Guide (LT-0230) for complete programming instructions.

## **NFPA 72**

This equipment should be installed in accordance with Chapter 2 of the National Fire Alarm Code, ANSI/NFPA 72-1996, (National Fire Protection Association, Batterymarch Park, Quincy, MA 02269). Printed information describing proper installation, operation, testing, maintenance, evacuation planning, and repair service is to be provided with this equipment. Warning: Owner's supplementary devices. instruction notice, not to be removed by anyone except occupant.

## Household Fire Warning

UL Recognized limited energy cable must be used for connection of all initiating, indicating, and

## POWER LIMITED

All circuits on the Model XR6 comply with the requirements for inherent power limitation and are Class 2.

