

**OPERATING INSTRUCTIONS  
MODEL 1912XR PANELS**

**NORMAL STANDBY CONDITION**

When the system is in the normal standby condition, the keypad shows either the time of day or a blank display.

**ALARM CONDITION**

When the system is in an alarm condition, the keypad display shows the violated zone name(s) followed by an alarm display.

**ALARM SILENCE**

To silence the alarm while the bell or siren is sounding, enter your code number and press the COMMAND key. This silences the alarm but does *not* cancel any alarm reports to the central station.

**RESETTING DETECTORS**

To reset a smoke or other detector, enter the User Menu by pressing the COMMAND key until **MENU? NO YES** appears in the display. Press the top row key under **YES**. The display shows **ENTER CODE: -**. Enter your code number and press COMMAND. The keypad display now shows **ALARM SILENCE?**. Press the COMMAND key until **SENSOR RESET?** appears in the display. Press any top row key.

**TROUBLE CONDITION**

When a device is in a trouble condition, the keypad tones and displays the zone or device name followed by **TRBL**. Press any top row key to silence.

**SYSTEM TESTING**

You should test the security system periodically to ensure proper operation. You can do this through a function in the User Menu. After entering the User Menu, press the COMMAND key until **SYSTEM TEST?** displays. Press any top row key. The system bell, battery, and communication to the central station receiver system is then tested.

**ALARM SERVICE**

If service is required for this system, please contact:

Company \_\_\_\_\_

Address \_\_\_\_\_

Telephone \_\_\_\_\_

The operating instructions above should be attached to the front, or framed and located adjacent to, the panel or a Security Command keypad with an alphanumeric display.