

Model XR1000T / XR000T Series Ratings

For more information on our products, visit our website at www.dmp.com.
 For more information on our products, visit our website at www.dmp.com.
 For more information on our products, visit our website at www.dmp.com.

Digital Monitoring Products, Inc.
 2351 Oak Ridge Road, Suite 100
 Raleigh, North Carolina 27607

Mounting Style	Panel
Mounting Location	Panel
Panel Size	10.5" x 10.5"
Weight	1.5 lbs (0.7 kg)
Operating Temperature	-40 to 70 °C (-40 to 158 °F)
Humidity	5% to 95% (non-condensing)
Dimensions	10.5" x 10.5" x 1.5"
Material	Aluminum

Date of this document: 08/12/19

INTERNATIONAL SERIES PROGRAMMING GUIDE



DIGITAL MONITORING PRODUCTS, INC.

MODEL XR150INT/XR550INT SERIES PROGRAMMING GUIDE

Contains programming instructions for use with the
Model XR150INT/XR550INT Series Control Panels.

When using the XR150INT/XR550INT Series panel for any listing organization's approved methods, refer to the Compliance Listing Guide ([LT-1330INT](#)). This document outlines the installation and programming requirements of all applications for which XR150INT/XR550INT Series control panels are approved.

© 2024 Digital Monitoring Products, Inc.

Information furnished by DMP is believed to be accurate and reliable.
This information is subject to change without notice.

INTRODUCTION.....1

XR International Series Programming Information	1
Getting Started	1
Accessing the User Menu.....	1
Encrypted Communications (XR550INT with Encryption Only)	1
Programmer Operation.....	2
Programmer Lockout Codes.....	2
Reset Timeout	2
Keypads	3
Special Keys.....	3
Entering Alpha Characters	3
Entering Non-Alpha Characters	4
Keypad Displays Current Programming	4
Multiple Displays.....	4
Asterisks in Programming.....	4
Compliance Instructions.....	4

INITIALIZATION.....5

Initialization	5
Clear All Memory.....	5
Clear All Codes.....	5
Clear All Schedules.....	5
Clear Display Events Memory.....	5
Clear Zone Information.....	5
Clear Area Information.....	5
Clear Output Information.....	5
Clear Communication and Remote Options.....	5
Clear Wi-Fi	5
Set to Factory Defaults.....	5

COMMUNICATION6

Communication.....	6
Account Number	6
Transmit Delay	6
Communication Path	6
Communication Type.....	6
Test Report	7

Test Frequency	7
Test Day.....	7
Test Time.....	7
Check In	7
Fail Time.....	7
Encryption (XR550INT with Encryption Only).....	7
IPV6 Address	8
Receiver IP	8
Receiver Port	8
First Telephone Number	8
Second Telephone Number.....	8
APN.....	8
Fail Test Hours	8
Protocol.....	8
Retry Seconds	8
Substitution Code	9
893A	9
Alarm Switch.....	9
Duplicate Alarms	9
Alarm Reports	9
Supervisory/Trouble Reports	9
Opening/Closing and User Reports.....	10
Door Access Report	10
Panic Test (Network Only).....	10
Send Communication Trouble.....	10
Send Path Information	10

NETWORK OPTIONS.....11

Wi-Fi Setup.....	11
WPS	11
List.....	11
Manual	11
Test.....	12
Wireless Security Type.....	12
Wireless Network Key	12
IPV6	12
DHCP.....	12

Local IP Address	12
Gateway Address	12
Subnet Mask.....	12
DNS Server.....	12
Passphrase (XR550INT with Encryption Only)	13

Activate Zone 2 Bypass	20
Zone 2 Bypass Time.....	20
Relock on Zone 2 Change?.....	20
Activate Zone 3 Request to Exit	20
Zone 3 REX Strike Time	20

DEVICE SETUP14

Device Setup	14
Custom Card Definitions	14
Wiegand Code Length.....	14
Site Code Position.....	14
Site Code Length.....	14
User Code Position.....	14
User Code Length.....	14
Require Site Code	14
Number of User Code Digits.....	15
Device Number	15
Device Name	16
Device Type.....	16
Private Door	16
Device Communication Type.....	16
Serial Number	16
Supervision Time	17
Access Areas.....	17
Egress Areas.....	17
Display Areas	17
Strike Time	18
Strike Delay.....	18
Fire Exit Release	19
Public Door	19
Output Group	19
Schedule Override	19
Auto Force Arm Device?	19
Door Real-Time Status?	19
PIN Disarm?	19
Send Door Forced Message?	19
Program 734INT Options	20

REMOTE OPTIONS21

Remote Options.....	21
Remote Key	21
Remote Disarm.....	21
Armed Answer Rings.....	21
Disarmed Answer Rings	21
Alarm Receiver Authorization.....	21
Service Receiver Authorization	21
Manufacturer Authorization.....	22
Allow Network Remote.....	22
Network Programming Port.....	22
Encrypt Network Remote	22
Allow Cellular Remote.....	22
APN.....	22
Encrypt Cellular Remote	22
Entré Connection	22
Entré Incoming TCP Port.....	22
Entré IP Address.....	22
Entré Outbound TCP Port.....	22
Entré Backup Connection.....	23
Entré Backup TCP Port	23
Entré Reports.....	23
Arm and Disarm Reports	23
Zone Reports	23
User Command Reports	23
Door Access Reports	23
Supervisory Reports	23
Video Reports.....	23
Entré Checkin	23
Entré Passphrase	23
Integrator Connection.....	24

Integrator Incoming TCP Port	24
Integrator IP Address.....	24
Integrator Outbound TCP Port	24
Integrator Backup Connection.....	24
Integrator Backup TCP Port.....	24
Integrator Reports	24
Arm and Disarm Reports	24
Zone Reports	24
User Command Reports	24
Door Access Reports	24
Supervisory Reports	25
Integrator Passphrase.....	25
Remote Change IP	25
Remote Change Port	25
Remote Telephone Number	25
App Key	25
Activate Onboard Speaker	25
Card Options.....	26
Require Site Code (If Card Format is Set to DMP)	26
No Communication with Panel	26

Cross Zone Time	30
Zone Retard Delay	30
Power Fail Delay	30
Swinger Bypass Trips.....	30
Reset Swinger Bypass	30
Zone Activity Hours	30
Time Zone Changes.....	31
Latch Supervisory Zones.....	31
Programming Menu Language.....	31
User Menu and Status List Language.....	32
Bypass Limit	32
House Code	32
Wireless Encryption	32
Enter Passphrase	32
Detect Wireless Jamming.....	33
Trouble Audible Annunciation	33
Enable Keypad Panic Keys	33
Occupied Premises.....	33
Enhanced Zone Test.....	33
Send 16 Character Names.....	33
Keypad Armed LED.....	34
Use False Alarm Question.....	34
Allow Own User Code Change	34
Panic Supervision.....	34
EOL Selection	34
Celsius Temperature Option	34
Intruder Confirmation Time.....	35
Hold Up Confirmation Time	35

SYSTEM REPORTS27

System Reports.....	27
Abort Report.....	27
Restoral Reports	27
Bypass Reports	27
Schedule Change Reports	27
Access Keypads	27
Ambush.....	27
Late To Open.....	28
Early To Close	28

SYSTEM OPTIONS29

System Options.....	29
System	29
Instant Arming.....	29
Closing Wait	29
Entry Delay 1.....	29

BELL OPTIONS.....36

Bell Options.....	36
Bell Cutoff Time	36
Automatic Bell Test	36
Bell Output.....	36
Bell Action.....	36
Fire Bell Action.....	36
Burglary Bell Action	36

Supervisory Bell Action	36
Panic Bell Action.....	36
Emergency Bell Action	36
Auxiliary 1 Bell Action	36
Auxiliary 2 Bell Action	36
Carbon Monoxide (CO).....	36
Strobe	36

OUTPUT OPTIONS.....37

Output Options.....	37
Cutoff Output	37
Output Cutoff Time	37
Communication Trouble Output	37
Fire Alarm Output.....	37
Fire Trouble Output.....	37
Panic Alarm Output.....	38
Ambush Output	38
Entry Output	38
Begin Exit Output	38
End Exit Output	38
Ready Output	38
Armed Output	38
Disarmed Output.....	38
Telephone Trouble Output.....	38
Late To Close Output.....	38
Device Fail Output	39
Sensor Reset Output	39
Closing Wait Output	39
Arm-Alarm Output.....	39
Supervisory Alarm Output	39
Heat Saver Temperature	39
Cool Saver Temperature	39
Carbon Monoxide Alarm Output.....	39
Lockdown Output Alarm Output.....	39

OUTPUT INFORMATION40

Output Number.....	40
--------------------	----

Output Name	40
Output Real-Time Status.....	40
Serial Number	40
Supervision Time	40
Trip with Panel Bell Option.....	40

OUTPUT GROUPS.....41

Output Groups	41
Group Number.....	41
Group Name	41
Output Number.....	41

MENU DISPLAY42

Menu Display	42
Armed Status.....	42
Time	42
Arm/Disarm.....	42

STATUS LIST43

Status List.....	43
Display Keypads	43
System Monitor Troubles.....	43
Fire Zones.....	43
Burglary Zones.....	43
Supervisory Zones	44
Panic Zones	44
Emergency Zones	44
Auxiliary 1 Zones.....	44
Auxiliary 2 Zones.....	44
Carbon Monoxide Zones	44
Communication Trouble	44

PC LOG REPORTS.....45

PC Log Reports.....	45
Net IP Address.....	45
Net Port.....	45
Arm and Disarm Reports	45
Zone Reports	45
User Command Reports	45

Door Access Reports	45	Number of EOL	52
Supervisory Reports	45	Fire Bell Output.....	53
PC Log Real-Time Status.....	46	Arming Zone Area Assignment.....	53
AREA INFORMATION.....	47	Style.....	54
Area Information	47	Expander Serial Number	54
Exit Delay	47	Next Zone.....	54
Closing Check.....	47	Wireless.....	54
Closing Code.....	47	Serial Number Entry.....	55
Any Bypass	47	Contact.....	55
Area Schedules	47	Supervision Time	55
Early Morning Ambush (Network Panels Only)	48	LED Operation.....	55
Area Number.....	48	Disarm/Disable.....	55
All/Perimeter Programming.....	48	PIR Pulse Count	56
Home/Sleep/Away Programming.....	48	PIR Sensitivity.....	56
Area Name	48	Pet Immunity.....	56
Account Number	48	Next Zone.....	56
Opening/Closing Reports	48	Alarm Action	56
Automatic Arming	49	Disarmed Open	56
Bad Zones	49	Report to Transmit.....	56
Automatic Disarming.....	49	Output Number.....	57
Burglary Bell Output.....	49	Output Action.....	57
Armed Output Number	49	Disarmed Short, Armed Open, and Armed Short.....	57
Late Output Number.....	49	Swinger Bypass.....	57
Late Arm Delay	49	Prewarn Keypad Addresses	58
Bank Safe & Vault (XR550INT with Network or Encryption Only).....	50	Chime	58
Common Area	50	Entry Delay	58
Arm First Area.....	50	Zone Retard Delay	58
Dual Authority (XR550INT with Network or Encryption Only).....	50	Presignal Keypad Addresses	58
Card Plus Pin (XR550INT with Network or Encryption Only).....	50	Fast Response	58
ZONE INFORMATION.....	51	Cross Zone.....	58
Zone Information.....	51	Priority.....	58
Zone Number.....	51	Fire Panel Slave Input.....	59
Zone Name	51	Area Follower.....	59
Area Assignment.....	52	Zone Real-Time Status	59
		Traffic Count.....	59

Zone Audit Days	59	Zone Types	71
Report with Account Number for Area	59	Trip Counter For Walk Test.....	72
Lockdown.....	59	Trip Counter For DMP Wireless Check-in Test (WLS)	72
1144INT Series Key Fobs	60	Test End Warning	72
Key Fob User Number	60	Wireless Check-in and Supervision Definitions	73
Key Fob Serial Number	60	Keypad Speaker Operation	73
Key Fob Supervision Time	60	Cross Zoning	73
Number of Key Fob Buttons.....	60	User Profiles	73
Key Fob Button Selection (Four Buttons).....	60	User Profiles Record.....	74
Key Fob Button Selection (Two Buttons).....	60	Zone Type Descriptions.....	75
Button Action	61	Common Keypad Messages.....	76
Button Press Time.....	61	Area Account Number Messages.....	77
Arm/Disarm Area Selection.....	61		
Output Number.....	61	SPECIFICATIONS.....	78
Output Action.....	62	INTERNATIONAL CERTIFICATIONS	78
STOP.....	63	Intertek (ETL) Listed.....	78
Stop	63		
SET LOCKOUT CODE	64		
Set Lockout Code	64		
FEATURE UPGRADE.....	65		
Feature Upgrade	65		
Encryption.....	65		
All No Yes Option.....	65		
Service User Authentication	65		
32 Door Add On A/ 32 Door Add On B	65		
EN 50131 GRADE	66		
EN 50131 Grade	66		
APPENDIX.....	67		
False Alarm Reduction.....	67		
Anti-masking feature	67		
Diagnostics Function	67		
Keypad Displays	71		
Using the Walk Test.....	71		
Walk Test	71		

INTRODUCTION

XR INTERNATIONAL SERIES PROGRAMMING INFORMATION

This guide provides programming information for the DMP XR150INT/XR550INT Series panel. Before starting to program, we recommend that you read through the contents of this guide.

In addition to this guide, you should also read and be familiar with the following documents:

- XR150INT/XR550INT Series Installation Guide ([LT-1233INT](#))
- XR150INT/XR550INT Series Programming Sheet ([LT-1234INT](#))
- XR150INT/XR550INT Series Users Guide ([LT-1278INT](#))

Internal Programmer

The panel contains all of its programming information in an on-board processor and does not require an external programmer. You can perform all programming tasks through a 32-character DMP alphanumeric keypad set to address one, or through Dealer Admin.


GETTING STARTED

Before starting to program the panel, make sure the panel is properly grounded and AC and battery power is applied to the appropriate panel terminals. All wiring connections and grounding instructions are detailed in the XR150INT/XR550INT Series Installation Guide ([LT-1233INT](#)).

ACCESSING THE USER MENU

XR International Series panels ship with a unique five-digit default master code that is used to access the user menu for the first time. This code can be modified or deleted. In order to revert back to the default master code, use the initialize code option found in panel programming. To access the User Menu:

1. Press the **CMD** key until **MENU? NO YES** displays.
2. Select **YES**. The keypad displays **ENTER CODE**. Enter your user code. You can now scroll down through the list of system features available to you.

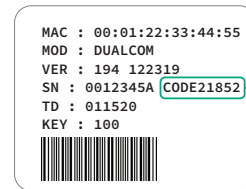

Example Default Master Code

BEGIN A PROGRAMMING SESSION

1. Momentarily place the Reset jumper over both of the RESET pins to reset the panel.
2. Enter the code **6653 (PROG)** and press **CMD**.
3. The keypad displays: **PROGRAMMER**.

ENCRYPTED COMMUNICATIONS (XR550INT WITH ENCRYPTION ONLY)

Some installations require secure data communications. Use a unique passphrase to enable encrypted communications and provide a secure means for data communications. See Network Options.

An XR550INT panel with encryption communicates using 128-bit or 256-bit AES encryption. If you currently have an XR550INT panel with network installed, you may purchase a separate feature key to activate encrypted communications using the Feature Upgrade process. Encrypted communication cannot be enabled on a standard XR550INT panel. For more information on the Feature Upgrade process see Section 21 in this document.

PROGRAMMER OPERATION

There are 20 programming sections to choose from:

Programming Item	Section in This Manual	Programming Item	Section in This Manual
Initialization	2	Output Groups	12
Communication	3	Menu Display	13
Network Options	4	PC Log Reports	14
Device Setup	5	Area Information	15
Remote Options	6	Zone Information	16
System Reports	7	Stop	17
System Options	8	Set Lockout Code	18
Bell Options	9	Feature Upgrade	19
Output Options	10	EN 50131 Grade	20
Output Information	11		

To choose a section for programming, press any select key or area when the keypad displays the name of that section. Sections 2 through 20 contain detailed instructions for each programming step.

PROGRAMMER LOCKOUT CODES

The panel allows you to enter the programming function without entering a lockout code using steps 1 to 4 listed in Getting Started. We recommend, however, that you install a Lockout Code to restrict programming to only those persons your company authorizes. You can do this by using the SET LOCKOUT CODE feature in the Programmer. The Lockout Code restricts any unauthorized panel programming.

After resetting the panel and entering the code 6653, the keypad displays PROGRAMMER. Press **CMD** to advance through the programming sections until SET LOCKOUT CODE displays (after STOP). Press any select key or area. The keypad displays ENTER CODE: -. Enter a 3 to 5 digit Programmer Lockout Code and press **CMD**. The keypad displays ENTER AGAIN followed by ENTER CODE: -. Enter the same 3 to 5 digit code a second time and press **CMD**. The keypad displays CODE CHANGED. The panel does not accept a 5-digit Lockout Code higher than 65535.

Before accessing programmer functions enter the new code number. Write the Lockout Code number down and keep it in a secure place with access limited to authorized persons only. Lost Lockout Codes require the panel to be sent back to DMP for repair. You may cancel a Lockout Code by entering 00000 at the Set Lockout Code command.

RESET TIMEOUT

The panel has a feature that requires you to enter the Programmer within 30 minutes of resetting the panel. After 30 minutes, if you attempt to program by entering the 6653 (PROG) code, the keypad displays: RESET PANEL. You must reset the panel and enter the program code then begin programming within the next 30 minutes.

If you are already in the Programmer and do not press any keys on the programming keypad for 30 minutes, the panel terminates programming. All data entered up to that time is not saved unless you run the Stop routine.

Use the Stop routine to exit panel Programming. Ensure the keypad displays "SAVING PROGRAM" to save all programming changes entered.

POWER UP

When the panel is powered up after an AC power failure, any zone transitions are not recognized for 60 seconds. Normal zone processing resumes at the end of the 60 seconds.

KEYPADS

DMP offers multiple keypads in a variety of styles that provide programming capabilities.

SPECIAL KEYS

The following special keys/areas are common to all DMP keypads.

COMMAND (CMD) Key

Pressing **CMD** allows you to go forward through the programming menu and through each step of a programming section. As you go through the programming, the keypad display shows any current programming already stored in the panel memory. If no change is required for an option, press **CMD** to advance to the next step.

CMD is also used to enter information into the panel's memory such as phone numbers or zone names. Press **CMD** after entering information.

Back Arrow (←) Key

Use the Back Arrow key to back up one step while programming. The Back Arrow key is also used when an error is made while entering information. Press the Back Arrow key once to erase the last character entered.

Select Keys or Areas

The top row of keys are called the select keys on Thinline and Aqualite keypads or select areas on Graphic Touchscreen keypads. Each time you need to press a select key or area, the keypad displays the function or options above one of the keys or in the select area. Displaying choices above individual select keys or in select areas allows them to be used for many different applications. For example, you can enter AM or PM when programming the automatic test time or answer **YES** or **NO** for a system option.

During programming, the select keys or areas also allow you to change information currently in panel memory by pressing the appropriate select key or area under or on the display. You then enter the new information using the keypad data entry digit keys.

When there are more than four response options available, press **CMD** to display the remaining options. Pressing the Back Arrow key allows you to review the previous four choices.

The select keys or areas are also used for choosing a section from the programming menu. Press any select key or touch the select area when the programming section name you want displays.

On Wireless, Thinline and Aqualite keypads, when instructed to press the first select key, press the far left select key; the second select key is the second from the left; third select key is second from the right; and the fourth select key is the far right key.

On Graphic Touchscreen Keypads, when instructed to press the first select key, touch select area 1; the second select key touch select area 2; third select key touch select area 3; and the fourth select key touch select area 4.

ENTERING ALPHA CHARACTERS

Some options during programming require you to enter alpha characters. To enter an alpha character, press or touch the key that has that letter written below it. The keypad displays the number digit of the key. Next, press the select key or area that corresponds to the location of the letter under the key. Pressing a different select key or area changes the letter. When another digit key is pressed, the last letter displayed is retained and the process starts over.

ENTERING NON-ALPHA CHARACTERS

To enter a space in an alpha entry, press the 9 digit key followed by the third select key or area. The three characters on the 9 digit key are Y, Z, and space. You can also enter the following characters: - (dash), . (period), * (asterisk), and # (pound sign) using the 0 (zero) key and the four select key or area from left to right. For example, to enter a - (dash), press the 0 (zero) key and then the left select key or area. A dash now appears in the keypad display. The table below shows the character locations for DMP keypads.

Key Number	Select Key or Area 1	Select Key or Area 2	Select Key or Area 3	Select Key or Area 4
1	A	B	C	(
2	D	E	F)
3	G	H	I	!
4	J	K	L	?
5	M	N	O	/
6	P	Q	R	&
7	S	T	U	@
8	V	W	X	,
9	Y	Z	space	_
0	-	.	*	#

KEYPAD DISPLAYS CURRENT PROGRAMMING

Each programming option displayed at the keypad shows the currently selected option in the panel memory. These options are either shown as a number, a blank, or a NO or YES. To change a number or blank to a new number, press any select key or touch any select area. The current option is replaced with a dash.

Press the number(s) on the keypad you want to enter as the new number for that option. It is not necessary to enter numbers with leading zeros. The panel automatically right justifies the number when you press **CMD**.

To change a programming option that requires a NO or YES response, press the select key or touch the select area for the response not selected.

For example, if the current option is selected as **YES** and you want to change it to **NO**, on Thinline or Aqualite keypads press the third select key. On Graphic Touchscreen keypads touch select area 3. The display changes to **NO**. Press **CMD** to display the next option.

MULTIPLE DISPLAYS

For many programming and user options, such as Area selections, Menu Displays, and Status Lists, there are several displays containing programming. For example, when programming Menu Displays, keypads 1 through 16 display on two separate displays. First, keypads 1 through 8 display. Press **CMD** to display keypads 9 through 16. This same scheme is used for areas 1 through 32. Areas not pre-programmed at installation to display at this keypad cannot be viewed.

ASTERISKS IN PROGRAMMING

Asterisks display next to a programming option that is already selected. As shown in the example, options that are selected to display the current programming selection have an asterisk next to the number. Those that are not selected simply display the number. In the Devices example, keypads 3, 8, 9, and 15 are not selected. In the Areas example, areas 3, 8, 9, 15, 19, 23, 25, and 31 are not selected. In both examples the numbers with asterisks are selected.

To select or deselect a number, simply enter the number using the digit keys on the keypad. This same scheme is used when viewing the panel armed status and other programming and operational functions. Remember to press **CMD** to display the rest of the device or area numbers.

COMPLIANCE INSTRUCTIONS

This product incorporates field-programmable software. Refer to the XR150INT/XR550INT Compliance Listing Guide ([LT-1330INT](#)) for additional compliance information.

INITIALIZATION

INITIALIZATION

Initialization

This function allows you to clear selected parts of the panel program back to the factory defaults.

INIT ALL?	NO	YES
-----------	----	-----

Clear All Memory

NO leaves existing programming intact then displays Clear All Codes.

YES clears all memory then displays Reset Panel. Reset the panel by shorting the reset jumper and re-enter programming mode to continue.

CODES?	NO	YES
--------	----	-----

Clear All Codes

NO leaves existing codes intact.

YES clears the user code and user profile memory and assigns user code number 99 to the highest user number.

SCHEDES?	NO	YES
----------	----	-----

Clear All Schedules

NO leaves existing schedules intact.

YES clears all shift and output schedules.

EVENTS?	NO	YES
---------	----	-----

Clear Display Events Memory

NO leaves existing event memory intact.

YES clears the events memory.

ZONES?	NO	YES
--------	----	-----

Clear Zone Information

NO leaves existing zone information intact.

YES clears the zone information for all zones.

AREAS?	NO	YES
--------	----	-----

Clear Area Information

NO leaves existing area information intact.

YES clears the area information for all areas.

OUTPUTS?	NO	YES
----------	----	-----

Clear Output Information

NO leaves existing output information intact.

YES clears all programmed output names and any output cutoff assignment.

COM/RMT?	NO	YES
----------	----	-----

Clear Communication and Remote Options

NO leaves existing communication and remote options intact.

YES reset communication and remote options programming to factory defaults.

WIFI?	NO	YES
-------	----	-----

Clear Wi-Fi

NO leaves existing Wi-Fi programming intact.

YES reset Wi-Fi programming to factory defaults.

DEFAULTS	NO	YES
----------	----	-----

Set to Factory Defaults

NO leaves existing panel programming intact.

YES sets the panel's programming back to factory default selections and clears all Favorites, Device Setup, System Options, and Remote Options programming from the panel. Selecting YES does not clear the panel's event memory, zone, user code information, or schedules.

COMMUNICATION

COMMUNICATION

Communication

Configure the communication options for the panel. The information you program varies with the Communication Type you select.

ACCOUNT NO: **12345**

Account Number

The Account Number is a 1 to 5 digit number used to identify which panel is sending a message. Enter the account number sent to the SCS-1R or SCS-VR Receiver. The default is 12345.

The range of valid account numbers for a panel is 1 to 65535. For accounts of four digits or less, do not enter leading zeros.

XMIT DELAY: **30**

Transmit Delay

Enter the number of seconds (15 to 45) the panel waits before sending burglary zone (Night, Day, or Exit) reports to the receiver. Other zone type reports are sent immediately. Alarm bells and relay outputs are not delayed during this period. Program Burglary Outputs for pulsed or steady, and set Abort Reports to YES if Opening and Closing reports are not being sent. Enter 0 (zero) to disable this function. The default is **30**.

If the area where the alarm occurred is disarmed during the Transmit Delay time, only an Abort Report (S45) message is sent to the receiver. If the area where the alarm occurred is disarmed after the alarm message is sent to the receiver but before the Bell Cutoff time expires even if the alarm was silenced, an Alarm Cancelled (S49) message is sent. Otherwise the alarm is sent at the end of the delay.

PATH: -

Communication Path

Up to eight communication paths may be programmed. Each path is designated as a primary or backup communication route. Path 1 is always Primary but other paths may be programmed as additional primary or backup.

Each primary path establishes a new path group. A path group is made up of the primary path and its subsequent backup paths. Typical communication takes place on the primary path with backup paths being used only when the primary path fails or when the backup path is programmed to duplicate messages. There is no option to backup path 8.

COMM TYPE: **NONE**

Communication Type

Specifies the communication method the panel uses on this path to report system events to DMP SCS-1R or SCS-VR Receivers. Default is **NONE** for Path 1-8.

NONE - For local systems. Selecting NONE ends communication programming.

DD - Digital Dialer communications to a DMP SCS-1R Receiver.

NET - Network communication using the panel onboard network connection. The DMP Network/Output reporting format is transmitted over a data network to the SCS-1R or SCS-VR Receiver.

CID - This option allows the panel to communicate to DMP and non-DMP receivers using the Contact ID format.

CELL - This option allows communication over the cellular network using the 263LTE Cellular Communicator.

WIFI - Network communication to DMP Model SCS-1R or SCS-VR Receivers.

CELL WIFI

PATH TYPE: **BACKUP**
PRIMARY BACKUP

Path Type

The Path Type defines if the path is Primary or Backup. Because Path 1 is Primary, this option only displays for paths 2-8. Default is **BACKUP**.

If the Primary Communication Type is CELL, then the backup Communication Type can only be NET.

TEST RPT: **YES**
NO **YES** DEFER

Test Report

Test Report determines if test reports (Automatic Recall Test OK or Unrestored System) are sent on this path. Reports are sent according to the programming in Test Frequency and Test Time. Default is **YES**.

Select **YES** to allow the programmed test report to be sent on the path currently being programmed.

Select **DEFER** to not send a test report if the panel communicates any message to the receiver within the time set in Test Frequency.

Select **NO** to not send test reports on this path.

TEST FREQ: **1 DY**

Test Frequency

Test Frequency determines the frequency of the test report. Enter a number from 1 to 60 and select **DY** (Day) or **HR** (Hour) by pressing the far right select key or area. Default is **1 Day**.

TEST DAY: **SUN**

Test Day

Use this option to set the day of the Test Report. This option appears only when Test Report is Yes, Test Frequency is Day and a multiple of seven. Press **CMD** to display the first four days of the week. Press **CMD** to display the last three days. Select the day of the week to send the test report. Default is **SUNDAY**.

TEST TIME: **0:00 AM**

Test Time

Use this option to select the time of day for Test Reports. Select the hour, minute and AM/PM. Enter 0:00 AM to disable this feature. Default is **0:00 AM**.

TEST DAY: **SUN**

Check In

This option displays if the COMM TYPE is NET, WIFI, or CELL. Check-in reports are a method of supervising the panel for communication with the receiver. For NET the default is **YES**. For CELL the default is **YES**.

CHECKIN
NO YES RND ADPT

Select **RND** (Random) for the panel to check-in at random times from 6 to 60 minutes when all areas are disarmed. If any area is armed a check-in is sent every 6 minutes.

Select **ADPT** (Adaptive) for a backup path to adapt to the check-in programming from this groups primary path if the primary path becomes unavailable. Check-in programming includes Check-in and Fail Time.

CHECKIN
ADP3

Select **ADP3** (Adaptive 3) for a backup path to adapt using a 3 minute Check-in and Fail Time if the primary path becomes unavailable. This option also indicates a Communication Trouble (S10) if the cell tower is unavailable for 3 minutes.

CHECKIN MINS: **200**

When **YES** is selected, enter the number of minutes between check-in reports, from 2 to 240 for NET or 3 to 240 for CELL, when the panel is armed or disarmed. For CELL the default is **0**. For NET the default is **200**.

FAIL MINS: **240**

Fail Time

This option displays if CHECKIN is set to YES. Entering a FAIL TIME allows the receiver to miss multiple check-ins before logging that the panel is missing. The maximum fail time is 240 minutes. For example, if CHECKIN is 10 and FAIL TIME is 30, the receiver only indicates a Panel Not Responding after 30 minutes. The FAIL TIME must be equal to or greater than the CHECKIN time. Default is equal to **CHECKIN** for CELL. Default is **240** for NET.

ENCRYPT: **NO**
NO 128 256

Encryption (XR550INT with Encryption Only)

This option displays if the Communication Type is NET or CELL. Select 128 or 256 to enable the encryption level for the path currently being programmed. Default is **NO**.

256-bit encrypted messages to the SCS-1R receiver only communicate when using SCS-104 Receiver Line Cards with Version 102 or higher software.

USE IPV6: **NO** YES

IPV6 Address

This prompt determines if the network path uses IPV6 for communication. Default is **NO**.

RECEIVER IP
000.000.000

Receiver IP

This option displays if the Communication Type is NET or CELL. Enter the Receiver IP address where the panel sends network messages. The Receiver IP Address must be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 192168000250. The periods display automatically. If IPV6 is selected the receiver IP will need to be an IPV6 address. If changing from IPV6 YES to IPV6 NO, you will need to modify their IP address to IPV4.

RECEIVER PORT
2001

Receiver Port

Enter the receiver port number. Valid range is 1 to 65,535. Default is **2001**.

FIRST PHONE NO:

First Telephone Number

This option displays only if the Communication Type is DD or CID.

This is the first number the panel dials when sending reports to the receiver. Phone numbers can have two lines of 16 characters each to equal up to 32 characters.

SECOND PHONE NO:

Second Telephone Number

The panel dials the second number when two successive tries using the first number fail. If the panel cannot reach the receiver after two attempts using the second number, it returns to the first number and makes two additional attempts. A total of ten dialing attempts are made using the first and second phone numbers.

ADVANCED? NO YES

Advanced Programming

Select **YES** to enter the Advanced Programming menu for the communication path currently being programmed. Selecting NO ends programming of the current communication path and takes users back to the Communication Path option to program a secondary path.

APN
SECURECOM400

APN

Enter the first APN (Access Point Name). This allows an access point for cellular communication and is used to connect to a DNS network. The APN may contain two lines of 16 characters to equal 32 characters. Default is set to **SECURECOM400**.

FAIL TEST HRS: **0**

Fail Test Hours

This option sets the frequency for a Backup or Adaptive path to send a test report when the closest previous path fails within its path group.

If Fail Test Frequency is set to 0, test reports are sent only according to Test Report programming. Range is 0 to 24 hours. Default is **0**.

PROTOCOL: **TCP**

Protocol

This option displays only if Communication Type is NET.

Select TCP to communicate over the network using TCP protocol. Select UDP to communicate using UDP protocol. Default is **TCP**.

RETRY SECONDS: **6**

Retry Seconds

This option displays only when Communication type is NET.

Enter the number of seconds (between 6 and 15) the panel should wait before retrying to send a message to the receiver if an acknowledgment was not received. The panel retries as many times as possible for a period of one minute before sending a network trouble message. The default Retry Time is **6 seconds**.

SUB CODE: **NO**
NO YES SHARED

Substitution Code

This option displays when the Communication Type is NET or CELL. The Panel Substitution Code increases the level of security by helping to ensure that the panel sending the message to the receiver has not been substituted by another panel. The default is **NO**. Select YES to send a substitution code with every message. Select SHARED (SHR) to use the same substitution code that was used in the previous path.

893A: **NO** YES

893A

This option displays when the Communication Type is DD or CID. The 893A option allows reports to be sent to the receiver on a second DD line using the 893A module. Default is **NO**. When using an 893A, Test Report messages (S07 Automatic Recall Test or S88 Unrestored System Recall Test) are sent to the receiver at the frequency programmed in Test Frequency, alternating between the first and second phone line.

ALARM SWITCH: **1**

Alarm Switch

This option displays only if using the DD or CID Communication Types. Enter the number of attempts to send an alarm message before switching to the next path. Range is from 1 to 10. All non-alarm messages are sent for 10 attempts on the dialer before a switch is initiated. If the path immediately following this channel is not a backup path, this option has no effect. Default is **1**.

DUPLICATE ALARMS
NO YES

Duplicate Alarms

This option displays for BACKUP paths. If Yes is selected, the current backup path duplicates all alarms occurring on its group primary path. Default is **NO**.

ALARM **YES**

Alarm Reports

This option displays when the Path Type is Primary. All backup paths within the group follow the same programming for Alarm Reports. Default is **YES**.

When YES is selected, the following reports are sent to the receiver for all zone types:

- Alarm
- Bypass
- Reset
- Restore

NO YES FIRE

When FIRE is selected, the following reports are sent for Fire, Fire Verify and Supervisory Zones:

- Alarm
- Bypass
- Reset
- Restore

SPV/TRBL **YES**

Supervisory/Trouble Reports

This option displays when the Path Type is Primary. All backup paths within the group follow the same programming for Supervisory/Trouble Reports. Default is **YES**.

When YES is selected, the following reports are sent for all zone types:

- Trouble
- Low Battery
- Missing
- Fault
- Restorals
- System Troubles
- System Restoral

When FIRE is selected, the following reports are sent for Fire, Fire Verify, and Supervisory Zones:

- Trouble
- Low Battery
- Missing
- Fault
- Restorals
- System Troubles
- System Restoral

Serviceman reports are sent regardless of the selection made for Supervisory/Trouble reports.

O/C USER	NO	YES
----------	----	------------

Opening/Closing and User Reports

This option displays when the Path Type is Primary. All backup paths within the group follow the same programming for Opening/Closing and User Reports. Default is **YES**.

When YES is selected, the following reports by user are sent to this receiver.

- Opening
- Code changes (including adding, deleting, changing)
- Closing
- Schedule changes (temporary, permanent, shift)
- Bypass
- Holiday date changes
- Reset

DOOR ACS	DENY
----------	-------------

Door Access Report

This option displays when the Path Type is Primary. All backup paths within the group follow the same programming for Door Access Reports. Default is **DENY**.

NO	YES	DENY
----	-----	-------------

Select YES to enable Door Access Granted and Denied reports to this receiver whenever a door access is granted to a user. The Door Access Granted report is only sent if the keypad number has also been selected in Access Keypads under the **SYSTEM REPORTS** programming.

Select DENY to enable Door Access Denied reports only to this receiver when a door access is denied to a user.

PANIC TST	NO	YES
-----------	-----------	-----

Panic Test (Network Only)

YES allows the panic zone test verification and failure results to be sent to the central station receiver. NO disables the panic test report. The default setting is **NO**. The system test start, stop, panic zone verification, and panic zone failure messages sent to the central station and the trips count operation are the same as used under the Walk Test. See Using the Walk Test section in the Appendix.

SEND COMM TRBL:
NO YES

Send Communication Trouble

This option displays for each path and determines if and how communication trouble on the path is sent to the receiver. A trouble message indicates both the path number and communication type that failed. Default is **YES**.

SEND PATH INFO:
NO YES

Send Path Information

This option displays for each path and if YES, each panel message includes path information such as path number, communication type, and path type. Default is **NO**.

NETWORK OPTIONS

Network Options are provided to define the network configuration for the panel. This information will be used during communication of messages via network. A 763 Wi-Fi Module is required in order to send alarm signal communication. IP addresses and port numbers may need to be assigned by the network administrator. When entering an IP, Gateway, or Subnet Mask address be sure to enter all 12 digits and leave out the periods.

WPS LIST MANUAL
TEST

Wi-Fi Setup

This option is for connecting to the desired Wi-Fi network and will display only when Comm Type is set to Wi-Fi. Press any select key or area to select.

WPS LIST MANUAL
TEST

WPS - Automatically connects to a WPS enabled router.
LIST - Displays the names and signal strength of any Wi-Fi routers in range.
MANUAL - Enter the name of the Wi-Fi router you wish to connect to.
TEST - Verifies connection of your system to the Wi-Fi network.

SEARCHING

WPS

When WPS is selected, SEARCHING displays. Press the WPS button on the Wi-Fi network router to which you are attempting to connect. SEARCHING displays for up to two minutes or until connected to the WPS enabled router. Refer to the router's instruction manual for sending a security key to the XR150INT/XR550INT Series panel.

If the panel fails to connect to the WPS enabled router, WPS FAILED RETRY? NO YES displays. Press the fourth select key or area to RETRY or press the third select key or area to display WPS LIST MANUAL.

WPS LIST MANUAL
SEARCHING

List

When LIST is selected, SEARCHING displays until any Wi-Fi networks are found in range. Once available Wi-Fi networks are found the keypad displays the name of the SSID (Wi-Fi Network name) and signal strength of each network. Press **CMD** to scroll through the list of available Wi-Fi networks. When the desired network is displayed, press any select key or area to connect.

SIGNAL XXXXXX
HOMENET123

WPS LIST MANUAL

Manual

This option allows you to enter the desired network name using the keypad. When MANUAL is selected, the current settings display. Press **CMD** to continue with no change. **SecureCom** is the default.

WIFI SETUP
ENTER SSID

Once the SSID is entered, press **CMD** and SEARCHING displays. When an SSID is entered for the first time or changed, the panel searches for the SSID entered to ensure communication. The keypad displays SSID FOUND or SSID NOT FOUND. When the SSID is found, the security type is also detected.

SSID
SSID FOUND

Enter up to 32 characters for the SSID from the network router to identify the network LAN. The SSID is blank by default. Use the chart below to enter lowercase or special characters. Each successive press of the select key or area gives additional options.

Key Number	Select Key or area 1	Select Key or area 2	Select Key or area 3	Select Key or area 4
1	A, a,	B, b	C, c	(, [, {
2	D, d	E, e	F, f),], }
3	G, g	H, h	I, i	!, ^, ~
4	J, j	K, k	L, l	?, ",
5	M, m	N, n	O, o	/, \, `
6	P, p	Q, q	R, r	&, \$
7	S, s	T, t	U, u	@, %
8	V, v	W, w	X, x	, =
9	Y, y	Z, z	space, :	, ;
0	-, +	., '	*, <	#, >

SSID
SSID NOT FOUND

If the 763 is unable to connect to the desired network and SSID NOT FOUND displays, press **CMD** to return to the main menu and WPS LIST MANUAL displays. Press **CMD** again to display TEST.

TEST

Test

Press the first select key or area to select TEST and the 763 Wi-Fi module will attempt to verify connection of your system to the selected Wi-Fi network.

W/L SECURITY
WPA-PSK

Wireless Security Type

When successful, W/L SECURITY displays. Select the security type based on the network router programming. The default network security type is WPA-PSK. Press any select key or area to display the other security options. The available options are WEP, WPA, and NONE.

W/L SECURITY
WEP WPA NONE

Press the first select key or area to choose WEP, press the second select key or area for WPA, press the third select key or area for NONE.

W/L KEY

Wireless Network Key

This option displays only if Comm Type is set to Wi-Fi and Security option is not set to NONE. Enter the key provided from the network router's programming. WEP requires a network password of 10 characters (WEP64) or 26 characters (WEP128), using a combination of the number 0-9 and the letters A-F (See the chart above to enter lowercase or special characters).

WPA/WPA-PSK uses a custom key that allows 8 to 32 characters.

When connecting to the Wi-Fi network the panel also detects the security type in use and W/L KEY: ***** displays.

Enter the W/L KEY and the panel performs a connection test and CONNECTING displays. When successful, CONNECTED displays on the keypad. If the panel does not connect to the Wi-Fi network, NOT CONNECTED displays. Press **CMD** to return to the Wi-Fi SETUP main screen.

Depending on the security type, the key might take several seconds to process.

USE IPV6:
NO YES

IPV6

At the IPV6 prompt, select YES to use an IPV6 address. The default is **NO**. IPV6 is DHCP only.

DHCP
NO YES

DHCP

If the panel uses a dynamic IP address select YES. When set to YES, the panel operates using DHCP and does not use the Local IP Address number. When the DHCP option is set to NO, the panel uses the IP address entered in Local IP Address. The default value for DHCP mode is **YES**.

LOCAL IP ADDRESS
192.168.0.250

Local IP Address

Enter the local IP address for the panel. The Local IP Address must be unique and cannot be duplicated. The default local IP address is **192.168.0.250**.

GATEWAY ADDRESS
192.168.0.1

Gateway Address

Enter the local gateway address. The Gateway IP Address is needed to exit your local network. The default gateway address is **192.168.0.1**.

SUBNET MASK
255.255.255.000

Subnet Mask

Enter the local subnet mask assigned to the panel. The default subnet mask address is **255.255.255.000**.

DNS SERVER
192.168.0.1

DNS Server

Enter the IP address of the DNS (Domain Name System) used by the panel to resolve domain names into IP addresses. The default address is **192.168.0.1**.

On systems with hardwired network connection, the DNS address can be changed even if the panel has DHCP enabled.

PASSPHRASE

-

Passphrase (XR550INT with Encryption Only)

To enable encryption, type an 8 to 16-character Passphrase using alphanumeric characters. If you leave the Passphrase blank, the panel communicates with the SCS-1R or SCS-VR Receiver, but the data is not encrypted. The Passphrase is **blank** by default.

An XR550INT panel with encryption is capable of communicating 128-bit or 256-bit encrypted data to an SCS-104 line card installed at the receiver. The XR550INT panel with encryption and the receiver SCS-104 line card must have the same password called a Passphrase.

An XR550INT panel with encryption communicates using AES encryption. If you currently have an XR550INT panel with network installed, you may purchase a separate feature key to activate encrypted communications using the Feature Upgrade process described in the Feature Upgrade Section. Encrypted communication cannot be enabled on a standard XR550INT panel. 256-bit encrypted messages to the SCS-1R receiver only communicate when using SCS-104 Receiver Line Cards with Version 102 or higher software.

DEVICE SETUP

DEVICE SETUP

Device Setup

This section allows you to define the panels physical configuration. You can install and address up to sixteen supervised devices on the keypad bus. Devices can also be added to available LX-Busses. Programmable devices are Keypad, Door, Fire, and Expander.

CARD OPTIONS DMP CUSTOM ANY

Custom Card Definitions

Select the slot number (1-8) that you would like to program a custom non-DMP card format into. The format that is programmed into slot 1 is the default format. In the event that a card with an unrecognized format is used, that card will be read in the format that is programmed in slot 1. To restrict card reads to specific formats, only program slots 2-8. For a chart of commonly used card formats and their defaults, refer to the 734INT Installation Guide ([LT-0737INT](#)).

Select **DMP** to allow credentials that use a 26 - 45 bit data string.

Select **CUSTOM** to disable DMP format and program slots 1-8 as needed.

Select **ANY** to allow all card reads to activate the door strike relay. No user code information is sent to the panel.

If you select slot 1 and are updating an XR International Series panel with firmware Version 182 or earlier, Format Name will automatically be named Single Card Format and Wiegand Code Length will default to 45.

WIEGAND CODE LENGTH: 26

Wiegand Code Length

When using a custom credential, enter the total number of bits to be received in Wiegand code including parity bits. Press any select key or area to enter a number between 1-255 to equal the number of bits. Default is **26 bits**.

The starting position location and code length must be determined and programmed into the 734INT Module.

SITE CODE POSITION: 1

Site Code Position

Enter the site code start position in the data string. Press any select key or area to enter a number between 0-255. Default is **1**.

SITE CODE LENGTH: 8

Site Code Length

Enter the number of characters the site code contains. Press any select key or area to enter a number between 1-16. Default is **8**.

USER CODE POSITION: 9

User Code Position

Define the User Code start bit position. Press any select key or area to enter a number between 0-255. Default is **9**.

USER CODE LENGTH: 16

User Code Length

Define the number of User Code bits. Press any select key or area to enter a custom number. On a 734INT module, custom numbers can only be between 16-40. The default is **16**.

REQUIRE SITE CODE: NO YES

Require Site Code

Press the select key or area under YES to use a site code.

In addition to User Code verification, door access is only granted when any one site code programmed at the SITE CODE ENTRY option matches the site code received in the Wiegand string.

SITE CODE 1: -

Site Code Display

734INT Module: You can program up to 8 eight-digit site codes. Site code range is 0-16,777,214. Any previously programmed site codes display. Dashes represent blank site codes. Default is **blank**.

NO. OF USER CODE
DIGITS **5**

Number of User Code Digits

The 734INT module recognizes user codes from 4-12 digits in length. Press any select key or area to enter a user code digit length. This number must match the user code number length being used by the panel. Default is **5**. For an Area System, use 4 to 12 digits. For all other XR International Series panel configurations, use 4 digits.

Any selection above 5 digits require entry of the custom card definitions with custom site and user code positions for the Wiegand string. When searching the bit string for the user code, the digits are identified and read from left to right.

DEVICE NO: -

Device Number

Enter the address of the device you are programming. After you program each option for the first device, repeat these programming steps for each additional device. Programmable devices are KEYPAD, DOOR, FIRE, and EXPANDER. The available addresses are 1 - 16 on the panel keypad bus, and 500 - 999 on the LX-Bus. The valid range for KEYPAD, FIRE, and EXPANDER type devices is 1 - 16 on the panel keypad bus. The valid range for DOOR type devices is 1 - 16 on the panel keypad bus and 501 - 961 on the AX-Bus.

See the AX Bus Addresses and 734INT Zone Numbers chart on the next page. Wireless keypads and network door controllers are not able to occupy address 1.

AX-Bus Operation for 734INT Access Control Modules

Once a 734INT address has been programmed for the bus, the LX-Bus is automatically converted from a hardwire zone expansion bus to a hardwire Access Expansion Bus (AX-Bus) and the bus begins to operate as shown below.

- Each 734INT module provides one door relay and four protection zones to connect switches such as door and window contacts.
- 16 doors of access can be programmed per AX-Bus to a maximum of eighty (80) 734INT modules. Please see the table below for available addresses.
- Any unused AX-Bus zone numbers may be programmed as wireless zones. Hardwired zone expansion modules such as the 711, 714, 715-16 and others are incompatible with bus operation and cannot be used.
- Device Setup programming for AX-Bus address are automatically programmed as a door type. Device Type, Communication Type and Display Areas are not shown. Only 734INT module programming is shown.

An AX-Bus operation is compatible with 734INT modules and XR550INT Series control panels. AX-Bus operation is incompatible with XR150INT Series control panels.

Device Addresses and 734INT Zone Numbers

Keypad Bus		LX/AX Bus									
Device/Door	Zones	Device/Door	Zones	Device/Door	Zones	Device/Door	Zones	Device/Door	Zones	Device/Door	Zones
1	11-14	501	501-504	601	601-604	701	701-704	801	801-804	901	901-904
2	21-24	505	505-508	605	605-608	705	705-708	805	805-808	905	905-908
3	31-34	509	509-512	609	609-612	709	709-712	809	809-812	909	909-912
4	41-44	513	513-516	613	613-616	713	713-716	813	813-816	913	913-916
5	51-54	517	517-520	617	617-620	717	717-720	817	817-820	917	917-920
6	61-64	521	521-524	621	621-624	721	721-724	821	821-824	921	921-924
7	71-74	525	525-528	625	625-628	725	725-728	825	825-828	925	925-928
8	81-84	529	529-532	629	629-632	729	729-732	829	829-832	929	929-932
9	91-94	533	533-536	633	633-636	733	733-736	833	833-836	933	933-936
10	101-104	537	537-540	637	637-640	737	737-740	837	837-840	937	937-940
11	111-114	541	541-544	641	641-644	741	741-744	841	841-844	941	941-944
12	121-124	545	545-548	645	645-648	745	745-748	845	845-848	945	945-948
13	131-134	549	549-552	649	649-652	749	749-752	849	849-852	949	949-952
14	141-144	553	553-556	653	653-656	753	753-756	853	853-856	953	953-956
15	151-154	557	557-560	657	657-660	757	757-760	857	857-860	957	957-960
16	161-164	561	561-564	661	661-664	761	761-764	861	861-864	961	961-964

* UNUSED *

Device Name

A device name must be given to each device in the system. To add a device name, press any select key or area. The default device name (DEVICE X) displays. Select **CMD** to accept the default name or press any select key or area to enter a new name up to 32 alphanumeric characters. Press **CMD**.

To remove a device from the system, delete the device name by pressing any select key or area, then press **CMD**. The panel automatically programs the name as * UNUSED *.

TYPE: **KEYPAD**
DOOR KPD FI EXP

Device Type

This section allows you to select a device type for the selected device number.

VPX

DOOR - The device is an access control device and is either a keypad using door strike functions or a Wiegand Interface Module. Devices with an address higher than 16 are automatically assigned as a DOOR device type.

KEYPAD - The device type is a non-fire, non-access keypad.

FIRE - The device type is a fire device.

EXPANDER - A Zone Expansion Module.

PRIVATE DR **NO** YES

Private Door

Select **YES** to assign this address as a private door, which will not be assigned to an access area. The private door can then be added to a profile. Up to four private doors can be assigned to an individual profile.

Select **NO** to not allow a door to be designated as a private door. Default is **NO**.

DEVICE COMM TYPE
KPD-BUS AX-BUS

Device Communication Type

KEYPAD - Select KPD for devices that are connected to the keypad bus. Select AX-BUS for addresses 501-964.

DEVICE COMM TYPE
NETWORK WLS

DOOR - For wired devices, select KPD BUS for addresses 1-16 or select AX BUS for addresses 501-964. For network devices, select NETWORK.

SERIAL #:XXXXXXXX

Serial Number

This option only displays if Device Type is KEYPAD and Device Comm Type is WIRELESS. Enter the eight-digit serial number found on the wireless keypad.

SUPERVSN TIME: **240**

SELECT MINUTES:
0 60 240

Supervision Time

This option only displays if Device Type is KEYPAD and Device Comm Type is WIRELESS.

Press any select key or area to select the supervision time required for the device. Press **CMD** to accept the default time. Default is **240 minutes**.

Press the select key or area under the required number of minutes. The device must check in at least once during this time or a missing condition is indicated for that device. Zero (0) indicates an unsupervised wireless keypad.

ACCESS AREAS

Access Areas

Press **CMD** to program Access Areas. To select an area, enter the area number using the digit keys on the keypad. When an area is selected, an asterisk appears next to the area number. Enter the number again to deselect the area. Press **CMD** to display the next set of areas.

Users must have matching access area numbers assigned to their code to receive a door access at this device.

For an All/Perimeter, Home/Sleep/Away, or Home/Sleep/Away with Guest system, Access Areas should be left at factory default settings.

EGRESS AREAS

Egress Areas

Press **CMD** to program Egress Areas. To select an area, enter the area number using the digit keys on the keypad. When an area is selected, an asterisk appears next to the area number. Enter the number again to deselect the area. Press **CMD** to display the next set of areas.

Use this option to detect Anti-passback violations. Anti-passback requires a user to properly exit (egress) an area they have previously accessed. If users fail to exit through the proper card reader location they are not granted access on their next attempt.

DISPLAY AREAS

Display Areas

Press **CMD** to program Display Areas. To select an area, enter the area number using the keypad digit keys. When an area is selected, an asterisk appears next to the area number. Enter the number again to deselect the area. Press **CMD** to display the next set of areas. Default is **all area numbers**.

Display Areas allows the panels burglary activities to be segmented so that only specific area(s) and their associated operation appear at a particular keypad. Area number(s) selected in this field affect the way users interact with the system from this particular device. This allows specific area control from specific keypads, as well as annunciation of zones assigned to those area(s).

When Display Areas is left defaulted (all areas selected), Menu Display and Status List items determine whether zone alarms and troubles display at this device, regardless of area assignment. Also, all system areas may be armed and disarmed from this device.

For an All/Perimeter or Home/Sleep/Away system, Display Areas should be left at factory default settings.

For Home/Sleep/Away with Guest arming systems, the Display Areas selection determines which system the keypad arms and disarms. With areas 1, 2 or 3 being the first areas selected, the keypad is assigned to the Main system. With area 4, 5 or 6 being the first areas selected, the keypad is assigned to the Guest 1 system. With area 7, 8 or 9 being the first areas selected, the keypad is assigned to the Guest 2 system (Guest 2 only applies to XR550INT systems). Keypads can have additional areas assigned for Event Display.

User Action Allowed

When an area(s) is selected, the following user actions are allowed:

- Arming or Disarming of the area(s) selected from the ARM or DISARM menu
- Alarm Silence for the area(s) selected
- Zone Bypass of zones assigned to the area(s) selected
- Zone Monitor of zone assigned to the area(s) selected
- Shift schedule changes allowed for the area(s) selected
- Closing Check Schedule Extend is allowed for the area(s) selected
- Door Schedules changes are allowed for devices that have a matching area(s) as defined in Device Access Areas
- Door On/Off Menu operation is allowed for devices that have a matching area(s) as defined in Device Access Areas

The user actions also require the matching area(s) be programmed in User Profile: Arm/Disarm area(s).

Status Display Allowed

When an area(s) is chosen, the following displays are allowed:

- Armed Status of the selected area(s)
- Zone Alarms and troubles for burglary (NT, DY, EX, A1, A2) type zones assigned to the selected area(s)
- Late to Close status of the selected area(s)
- Zone Status (normal/fault) of zones that are assigned to the selected area(s)

Options and Actions Not Affected

The following options are not affected by the Display Areas operation. The User Code authority level controls access to these items.

- Sensor Reset Menu
- Outputs On/Off Menu
- System Status Menu
- System Test/Panic Test
- User Profiles
- Forgive Anti-Passback
- Service Request
- Set System Time and Date
- Fire Drill
- Display Events
- 24-hour zones display at keypads based on Status List programming only

STRIKE TIME: **5**

Strike Time

Enter a door access time, between 1 and 250 seconds, during which a keypad or access control device relay is activated. Magnetic locks or electric door strikes are connected to the relay and released for the length of the strike time. Default is **5 seconds**.

Enter 0 (zero) to activate the device relay with a toggle action. This allows the user to activate **or** deactivate the device relay each time a valid user code is entered. The device relay is activated **or** deactivated until a user code is entered again.

STRIKE DELAY: **0**

Strike Delay

Enter the number of minutes, 0 to 9, to delay a door strike after a valid code is entered or a card read occurs. When a valid code or card read is received, the activation of the door strike is delayed for the number of minutes programmed. The standard door strike message is sent to the Central Station receiver. During this delay, all subsequent codes entered or cards presented to the reader for a door strike are ignored and no record of the attempt is stored. Enter 0 (zero) to disable. Default is **0 (zero)**.

FIRE EXIT	NO	YES
-----------	-----------	-----

Fire Exit Release

Select **YES** to allow the door access relay at this address to be released whenever Fire panic keys are pressed or a Fire or Fire Verify zone alarm is in the Status List. The relay is reset whenever a Sensor Reset is performed to remove all Fire and Fire Verify zone alarms from the Status List. Select **NO** to not allow the door access relay at this address to be released.

PUBLIC DR	NO	YES
-----------	-----------	-----

Public Door

Select **YES** to allow the door access relay at this address to be locked whenever the Lockdown command is issued from the keypad User Menu or remote command. Select **NO** to not allow the door access relay at this address to be released. Default is **NO**.

OUT GROUP	NO	YES
-----------	-----------	-----

Output Group

Select **YES** to allow the output group (relays) assigned to the user profile to turn ON when the device relay is activated for the programmed strike time. Default is **NO**. See the **User Profiles** section in the Appendix of this document for more information about profiles.

OVERRIDE	NO	YES
----------	-----------	-----

Schedule Override

Use this option to allow door ON/OFF schedules to be overridden by the armed condition of the system. Selecting **YES** causes the on time for a door schedule to be ignored when all areas assigned to Access Areas for this device are armed. Should any area become disarmed after the door schedule on time, the device output turns on. A door output which is on during a disarmed period automatically turns off when all access areas assigned to the device become armed, even if the scheduled off time has not been reached. This feature can be used to keep doors locked when a factory opens late, or is forced to close early, due to a snow storm or other cause.

Select **NO** to allow door schedules to operate independent of system armed status. When OVERRIDE is YES and there are no areas programmed in ACCESS AREAS, the door schedule for that device does not work. Either set OVERRIDE to NO or enter an area number in ACCESS AREAS.

AUTO FORCE ARM DEVICE?	NO	YES
---------------------------	-----------	-----

Auto Force Arm Device?

Select YES to have all Display Areas assigned to this keypad automatically arm and force arm faulted zones at arming. The user is not prompted to select areas to arm or force arm faulted zones after choosing ARM at the keypad. If Closing Code is programmed as YES, only the matching areas between the Display Areas and the User Code's authorized areas arm. Also, when YES is selected, the user is not prompted to select areas to disarm after entering a code at Entry Delay or after choosing Disarm at the keypad. All matching areas assigned to the User Code and to this keypad are automatically disarmed. When NO is selected, the user is prompted to select areas (ALL NO YES) and choose to force arm or bypass at arming and disarming. Default is **NO**.

DOOR REAL-TIME STATUS?	NO	YES
---------------------------	-----------	-----

Door Real-Time Status?

Select YES to have real-time door status messages sent to the PC Log, Entré, and Dealer Admin accounts that are reporting for this device. Messages are sent anytime the panel turns the door relay on or off. Default is **NO**.

PIN DISARM?	NO	YES
-------------	-----------	------------

PIN Disarm?

Select NO to not allow PIN entry to disarm the system under any circumstance. Instead, access credentials, wireless key fobs, and remote disarm can be used to disarm the system. Select YES to allow PIN entry to disarm the system. Default is **YES**.

SEND DOOR FORCED MESSAGE?	NO	YES
------------------------------	-----------	-----

Send Door Forced Message?

Select YES to have the panel send a real-time door status message of Forced Open (FO) to PC Log reporting and Entré reporting when the door relay is off, but the door zone has transitioned from its normal state. Default is **NO**.

PROGRAM 734
OPTIONS? **NO** YES

Program 734INT Options

Select YES to program a 734INT Module. To program the 734INT, the Device Type must be set to DOOR and the Device Communication Type must be set to KPD-BUS or AX-BUS.

ACTIVATE ZONE 2
BYPASS? **NO** YES

Activate Zone 2 Bypass

Select YES to activate the Bypass option.

Selecting NO allows standard zone operation on Zone 2 and displays the ACTIVATE ZONE 3 REX option. Default setting is **NO**.

If the door being released by the 734INT module is protected (contact installed), you can provide a programmable Bypass entry/exit timer by connecting its contact wiring to the 734INT module Zone 2. When the on-board Form C relay activates and the user opens the door connected to Zone 2, the zone is bypassed for the number of seconds programmed in ZONE 2 BYPASS TIME allowing the user to enter/exit.

If Zone 2 does not restore (door closed) within the programmed bypass time, the 734INT piezo pulses during the last ten seconds. If Zone 2 restores prior to the end of the programmed time, the piezo silences. If the zone does not restore before the programmed time, the 734INT ends the bypass and indicates the open or short zone condition to the panel.

ZONE 2 BYPASS
TIME: **40**

Zone 2 Bypass Time

Enter the number of Bypass seconds to elapse before the Bypass timer expires. Range is from 20 to 250 seconds. Press any select key or area to enter the number of seconds. If the door remains open when the timer expires a zone open/short is sent to the panel for Zone 2. The default is **40 seconds**.

RELOCK ON ZONE 2
CHANGE? **NO** YES

Relock on Zone 2 Change?

Select NO to leave the relay on for the door access time when Zone 2 restores.

Select YES to turn the 734INT relay off and relocks the door when Zone 2 changes state. The default is **NO**.

ACTIVATE ZONE 3
REX? **NO** YES

Activate Zone 3 Request to Exit

Selecting YES activates the Zone 3 Request to Exit (REX) option.

Selecting NO allows standard zone operation on Zone 3 and displays the ACTIVATE ONBOARD SPEAKER option. Default setting is **NO**.

Optionally connect a PIR (or other motion sensing device) or a mechanical switch to Zone 3 to provide REX capability to the system. When Zone 3 **shorts**, the on-board Form C relay activates for the programmed number of seconds. During this time, the user can open the protected door to start the programmed Bypass entry/exit timer. After the programmed number of seconds, the relay restores the door to its locked state.

The 734INT module provides a bypass-only option for REX on Zone 3. When Zone 3 opens from a normal state, only a bypass occurs: the on-board relay does not activate. This bypass-only option uses two methods of REX. The first REX device provides the programmed Bypass entry/exit timer. The second REX device, or manual device such as a door knob, unlocks the door.

An example of the bypass-only configuration is a door to an office that is locked 24 hours a day. Users pass a REX motion detector positioned by the door to begin the programmed exit timer. Within the programmed number of seconds the user must then manually activate a second device, such as a REX device or manual door knob, to unlock the door. If the door is opened after the programmed number of seconds, the zone goes into alarm.

ZN 3 REX STRIKE
TIME: **5**

Zone 3 REX Strike Time

Enter the number of REX seconds to elapse. Range is from 5 to 250 seconds. Press any select key or area to enter the number of seconds. The default is **5 seconds**.

REMOTE OPTIONS

REMOTE OPTIONS

Remote Options

This section allows you to enter the information needed for Remote Command/Remote Programming operation.

REMOTE KEY

Remote Key

This option allows you to enter a code of up to 16 characters. Dealer Admin must give the correct key to the panel before being allowed any remote functions. All panels are shipped from the factory with the key preset as blank. This can be an optional or required option. To enter a remote key or change the current one, press a select key or area and enter any combination of up to 16 digits. Press **CMD**. The current key displays as asterisks.

REMOTE DISARM?

NO YES

Remote Disarm

YES allows the panel to be disarmed remotely. NO disables remote disarming. Default is **YES**.

ARMED ANSWER RINGS:

8

Armed Answer Rings

Enter the number of rings the panel counts before answering the phone line when all system areas are armed. Any number from 0 to 15 can be entered. If 0 (zero) is entered, the panel does not answer the phone when all system areas are armed. The default is **8**.

DISARMED ANSWER RINGS:

8

Disarmed Answer Rings

Enter the number of rings the panel counts before answering the phone line while any system areas are disarmed. Any number from 0 to 15 can be entered. If 0 (zero) is entered, the panel does not answer the phone when any system area is disarmed. The default number is **8 (eight)**.

ALR RCVR **NO** YES

Alarm Receiver Authorization

Select YES to enable remote commands and programming to be accepted from the alarm SCS-1R Receiver. The Remote Key option can also be required.

With YES selected, the panel requests the receiver key during its first communication with the first SCS-1R Receiver. The panel retains this alarm receiver key in memory and allows remote commands to be accepted from the alarm receiver. If an alarm occurs during a remote connect, the alarm report is immediately sent to this receiver only.

When NO is selected, remote commands and programming are not accepted from the alarm SCS-1R Receiver.

SVC RCVR NO **YES**

Service Receiver Authorization

YES enables remote commands and programming to be accepted from a secondary service receiver other than the alarm SCS-1R Receiver. The Remote Key option can also be required.

With YES selected, the panel requests the service receiver key the first time it is contacted by the service receiver. The panel retains this service receiver key in memory and accepts remote commands from the service receiver.

If an alarm occurs during a remote connect, the panel disconnects from the service receiver and calls the alarm receiver. Alarm reports are only sent to the alarm receiver. It is important that the alarm receiver key and the service receiver key programmed at the central station are NOT the same so the panel can determine the difference between receivers.

When NO is selected remote commands and programming are not accepted from a secondary service receiver.

MANUFACTURER
AUTH? **NO** YES

Manufacturer Authorization

Select YES to allow DMP Technical Support technicians to access the panel during system service or troubleshooting. This authorization automatically expires within one hour.

DMP remote service is provided on a read only basis: DMP technicians can look at the system programming and make suggestions only. Alterations can only be accomplished by installing company service personnel.

ALLOW NETWORK
REMOTE? **NO** YES

Allow Network Remote

This option displays only if the panel has network capability. YES allows remote programming over the network. Changing this option does not change any other network programming options. Default is **YES**.

NETWORK PROG
PORT: **2001**

Network Programming Port

Enter the programming port number. The programming port identifies the port used to communicate messages to the panel. The default Programming Port setting is **2001**.

ENCRYPT NETWORK
REMOTE? **NO** YES

Encrypt Network Remote

YES encrypts data sent over network. Default is **NO**.

ALLOW CELL
REMOTE? **NO** YES

Allow Cellular Remote

YES allows remote programming using cellular connection. Default is **YES**.

FIRST GPRS APN:
SECURECOM400

APN

Enter the first APN (Access Point Name). This allows an access point for cellular communication and is used to connect to a DNS network. The APN may contain two lines of 16 characters to equal 32 characters. Default is set to **SECURECOM400**.

ENCRYPT CELL
REMOTE? **NO** YES

Encrypt Cellular Remote

YES encrypts data sent over a cellular connection. Default is **NO**.

ENTRE
CONNECTION: **NONE**

Entré Connection

This option displays if the panel has network or cellular capability. Select NET to allow a dedicated network connection with Entré. Options are NONE, NET, or CELL. Default is **NONE**.

ENTRE INCOMING
TCP PORT: **2011**

Entré Incoming TCP Port

This option displays only if NET is chosen for the Entré connection. Enter the programming port number for the incoming Entré connection. The programming port identifies the port used to communicate messages to and from the Entré software. This port cannot be the same port as programmed in Network Programming Port. The default Programming Port setting is **2011**.

ENTRE IP

Entré IP Address

This option displays only if NET is chosen for the Entré connection. Enter the Entré IP address where the panel sends network messages. The Entré IP Address must be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 192168000250. The periods display automatically. Default is 0.0.0.0.

ENTRE OUTBOUND
TCP PORT: **2001**

Entré Outbound TCP Port

This option displays only if NET is chosen for the Entré connection. Enter the programming port number for the outbound Entré connection. The programming port identifies the port used to communicate messages to the Entré software. Default is **2001**.

ENTRE BACKUP
NONE NET CEL

Entré Backup Connection

This option displays if NET or CEL is chosen for the Entré connection. Enter the backup address where the panel sends network messages if the first Entré connection fails. The Entré connection must be unique and cannot be duplicated on the network. If the backup connection is NET, enter all 12 digits and leave out the periods. The periods display automatically. Default is **0.0.0.0**.

ENTRE BACKUP TCP
PORT: **2001**

Entré Backup TCP Port

This option displays only if NET or CELL is chosen for the Entré connection. Enter the backup programming port number for the outbound Entré connection in case the connection to the primary IP fails. Default is **2001**.

ENTRE REPORTS
000.000.000.000

Entré Reports

This option displays only if NET is chosen for the Entré connection. Choose which types of system reports are sent to Entré. Press CMD to view all of the Entré report options. Choose YES to enable arming/disarming, zone, user code, door access, or supervisory message reports. All Entré reports default to **YES**.

ARM/DIS **NO** YES

Arm and Disarm Reports

Sends arming, disarming and Late to Close events. Includes the area number, name and action, the user number and name, and the time and date.

ZONE: **NO** YES

Zone Reports

Sends changes in the status of active zones. Includes the zone number, name, type, the action (alarm, trouble, bypass, etc.), user number (if applicable), and area name. If performing a Walk Test, Zone Verify and Zone Fail messages are sent for each zone.

USER CMDS **NO** YES

User Command Reports

Sends user code changes, schedule changes, and door access denied events.

DOOR ACS: **NO** YES

Door Access Reports

Sends door access activity: door number, user number and name, and time and date.

SUPV MSG: **NO** YES

Supervisory Reports

Sends system monitor reports, such as AC and battery, and system event reports. Supervisory Reports also sends the following reports:

- Abort
- System Recently Armed
- Late to Close*
- Exit Error
- Alarm Bell Silenced
- Ambush
- Unauthorized Entry

* Only sent as a Supervisory Report if **Area Schedules** is not enabled, **Closing Check** is enabled, and an opening/closing schedule has been programmed.

To send these reports to the PC Log, you must enable SUPV MSG.

VIDEO: **NO** YES

Video Reports

Enabling this feature will allow the panel to send video system reports to Entré when an OpenEye® event message has been received from a camera.

ENTRE CHECKIN
MINUTES: **0**

Entré Checkin

Select the rate at which check-in messages are sent over the Entré connection. Select 0 (zero) to disable check in messages. Range is 0, 3-240 minutes. Default is **0**.

ENTRE PASSPHRASE
-

Entré Passphrase

To enable encryption enter an 8 to 16-character Passphrase using alphanumeric characters. If you leave the Passphrase blank, the panel communicates with Entré, but the data is not encrypted. The Passphrase is **BLANK** by default.

INTEGRATOR
CONNECTION: **NONE**

Integrator Connection

This option displays if the panel has network or cellular capability. Select NET to allow a dedicated network connection with the integrator. Options are NONE, NET, or CELL. Default is **NONE**.

INTGRTR INCOMING
TCP PORT: **8011**

Integrator Incoming TCP Port

This option displays only if NET is chosen for the integrator connection. Enter the programming port number for the incoming connection. The programming port identifies the port used to communicate messages to and from the integrator software. This port cannot be the same port as programmed in Network Programming Port. The default Programming Port setting is **8011**.

INTEGRATOR IP
000.000.000.000

Integrator IP Address

This option displays only if NET is chosen for the integrator connection. Enter the integrator IP address where the panel sends network messages. The integrator IP Address must be unique and cannot be duplicated on the network. The periods display automatically. Default is **0.0.0.0**.

INTGRTR OUTBOUND
TCP PORT: **8001**

Integrator Outbound TCP Port

This option displays only if NET is chosen for the integrator connection. Enter the programming port number for the outbound connection. The programming port identifies the port used to communicate messages to the integrator software. Default is **8001**.

INTGRTR BACKUP IP
NONE NET CELL

Integrator Backup Connection

This option displays if NET or CELL is chosen for the integrator connection. Enter the backup address where the panel sends network messages if the first integrator connection fails. The connection must be unique and cannot be duplicated on the network. If the backup connection is NET, enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 192168000250. The periods display automatically. Default is **0.0.0.0**.

INTGRTR BKUP TCP
PORT: **8001**

Integrator Backup TCP Port

This option displays only if NET is chosen for the integrator connection. Enter the backup programming port number for the outbound connection in case the connection to the primary IP fails. Default is **8001**.

INTGRTR REPORTS

Integrator Reports

This option displays only if NET is chosen for the integrator connection. Choose which types of system reports are sent to the integrator. Press CMD to view all of the integrator report options. Choose YES to enable arming/disarming, zone, user code, door access, or supervisory message reports. All reports default to **YES**.

ARM/DIS: **NO** YES

Arm and Disarm Reports

Sends arming, disarming and Late to Close events. Includes the area number, name and action, the user number and name, and the time and date.

ZONE: **NO** YES

Zone Reports

Sends changes in the status of active zones. Includes the zone number, name, type, the action (alarm, trouble, bypass, etc.), user number (if applicable), and area name. If performing a Walk Test, Zone Verify and Zone Fail messages are sent for each zone.

USR CMDS: **NO** YES

User Command Reports

Sends user code changes, schedule changes, and door access denied events.

DOOR ACS: **NO** YES

Door Access Reports

Sends door access activity: door number, user number and name, and time and date.

SUPV MSG: **NO** YES

Supervisory Reports

Sends system monitor reports, such as AC and battery, and system event reports. Supervisory Reports also sends the following reports:

- Abort
- System Recently Armed
- Late to Close*
- Exit Error
- Alarm Bell Silenced
- Ambush
- Unauthorized Entry

* Only sent as a Supervisory Report if **Area Schedules** is not enabled, **Closing Check** is enabled, and an opening/closing schedule has been programmed.

To send these reports to the PC Log, you must enable SUPV MSG.

INTGRTR PASSPHRASE

-

Integrator Passphrase

To enable encryption enter an 8 to 16-character Passphrase using alphanumeric characters. If you leave the Passphrase blank, the panel communicates with the integrator, but the data is not encrypted. The Passphrase is **blank** by default.

REMOTE CHANGE IP
000.000.000.000

Remote Change IP

This option displays when NET is selected for Send Local Changes. Enter the IP address containing up to 12 digits. The Net IP Address must be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods. Default is **0.0.0.0**.

REMOTE CHANGE
PORT: **2002**

Remote Change Port

This option displays when NET is selected for Send Local Changes. Enter the Port number. Valid numbers are from 0 to 65535. Default is **2002**.

REMOTE PHONE NO.

-

Remote Telephone Number

This option displays when DD is selected for Send Local Changes. Press **CMD** to enter the phone number the panel dials when sending programming changes. After entering a phone number, the panel sends any panel changes to TM.

The phone number can have two lines of 16 characters each to equal 32. Enter a P to program a two second pause in the dialing sequence. The P character counts as part of the 32 allowable characters. Enter *70P as the string first characters to cancel call waiting. Dial tone detect is an automatic panel function.

APP KEY:

App Key

Enter the 8-digit App Key obtained in your Dealer Settings tab at dealer.securecomwireless.com.

This option is a security feature of the Virtual Keypad iPhone/Android App used only when your Dealer Settings at dealer.securecomwireless.com have EASYconnect set as the Communication Type.

This communication option is only available for panels with onboard network and is used to eliminate the need for a static IP address programmed in Network Options. To enter a new App Key, press any select key or area and enter any combination of 8 digits. Press **CMD**.

ACTIVATE ONBOARD
SPEAKER? **NO** YES

Activate Onboard Speaker

Select YES to enable the onboard piezo speaker for local annunciation. Select NO to turn the piezo off for all operations. This does not affect remote annunciator open collector (RA) operation. The default is **NO**.

CARD OPTIONS
DMP CUSTOM ANY

Card Options

Select **DMP** to allow only the DMP card format for access. The menu advances to REQUIRE SITE CODE.

Select **CUSTOM** to disable DMP format and program slots 1-8 as needed. The menu advances to FORMAT NO. The format that is programmed into slot 1 is the default format. In the event that a card with an unrecognized format is programmed when adding a credential, that card will be read in the format that is programmed in slot 1. To restrict card reads to specific formats, only program slots 2-8.

Select **ANY** to allow all Wiegand card reads to activate the door strike relay. The relay is activated for the length of time programmed in ZN 3 REX TIME. No user code information is sent to the panel. The menu advances to NO COMM WITH PNL.

REQUIRE SITE
CODE: NO YES

Require Site Code (If Card Format is Set to DMP)

Press the select key or area under YES to use a site code.

In addition to User Code verification, door access is only granted when any one site code programmed at the SITE CODE ENTRY option matches the site code received in the Wiegand string.

NO COMM WITH PNL
OFF SITE ANY ON

No Communication with Panel

This option defines the relay action when communication with the panel has not occurred for approximately ten seconds. Press any select key or area to display relay action options. Press the Back Arrow key to return to the NO OF USER CODE DIGITS:.

NO COMM WITH PNL
OFF

Choose the action required:

Press the first select key or area to choose OFF [Default] (Relay Always Off) — The relay does not turn on when any Wiegand string is received. Off does not affect any REX operation.

NO COMM WITH PNL
SITE

Press the second select key or area to choose SITE (Accept Site Code) — Door access is granted when the Wiegand site code string received matches any site code programmed at SITE CODE ENTRY. For details refer back to the REQUIRE SITE CODE option.

NO COMM WITH PNL
ANY

Press the third select key or area to choose ANY (Any Wiegand Read) — Door access is granted when any Wiegand string is received.

NO COMM WITH PNL
ON

Press the fourth select key or area to choose ON (Relay Always On) — The relay is always on.

NO COMM WITH PNL
LAST

Press **CMD** to display the next action.

Press the first select key or area to choose LAST (Keep Last State) — The relay remains in the same state and does not change when communication is lost.

After choosing the action, the NO COMM WITH PNL option and the newly defined action display. Programming is now complete. Press **CMD** to display DEVICE NO.

SYSTEM REPORTS

SYSTEM REPORTS

System Reports

Select specific system reports the panel sends to the receiver.

ABORT	NO	YES
-------	-----------	-----

Abort Report

YES allows the panel to send an alarm abort report to the receiver any time an area is disarmed during Transmit Delay before an alarm report is sent and the Bell Cutoff Time has not expired. After disarming an area, if any other area remains armed and has zone(s) in alarm, the alarm abort report is not sent. Abort Reports are not sent for Fire, Fire Verify, or Supervisory type zones.

RESTORAL:	YES
-----------	------------

Restoral Reports

This option allows you to control when and if a zone restoral report is sent to the central station receiver. Press any select key or area to display the following options:

NO	YES	DISARM
----	-----	--------

NO - Disables the zone restoral report option. Zones continue to operate normally but do not send restoral reports to the receiver.

YES - Enables the zone restoral report option. Zone restorals are sent whenever a zone restores from a trouble or alarm condition.

DISARM - Causes the panel to send restoral reports for a non-24-hour zone whenever a zone that has restored from a trouble or alarm condition is disarmed. All 24-hour zones send restoral reports as they restore.

BYPASS	NO	YES
--------	----	------------

Bypass Reports

YES allows the panel to send all zone bypasses, resets, and force arm reports to the receiver. The bypass report includes the zone number, zone name, and the user name and number of the individual operating the system. Reports are only sent if O/C User in Communications is set **YES** for Receiver 1 or Receiver 2.

SCHD CHG	NO	YES
----------	----	------------

Schedule Change Reports

YES allows the panel to send all schedule changes to the receiver. The report includes the day, opening time, closing time, extend schedule time, and the user name and number of the individual making the change.

CODE CHG	NO	YES
----------	----	------------

Code Change Reports

YES allows the panel to send all code additions, changes, and deletions to the receiver. The code change report includes the user name and number added or deleted and the user name and number of the individual making the change. Reports are only sent if O/C User in Communications is set **YES** for Receiver 1 or Receiver 2. The default setting is **YES**.

ACCESS KEYPADS

Access Keypads

Select the keypad addresses (1 through 16) that send door access reports to the receiver. Enter the keypad number using the digit keys. An asterisk next to the number indicates that the keypad is selected. Press **CMD** to display the next set of keypads.

A report is sent with each door access made from the selected keypads. Keypads at addresses not selected still operate the door relay but do not send access reports. The report includes the user number, user name, keypad address, and device name.

AMBUSH	NO	YES
--------	-----------	-----

Ambush

YES allows an ambush report to be sent anytime user code number 1 is entered at a keypad. **NO** disables the ambush report and allows user number 1 to operate the same as all other codes.

LATE TO OPEN
MINUTES: 0

Late To Open

Enter 1-240 as the number of minutes to elapse that the system may remain armed after the opening time of a schedule without sending a Late To Open message. If the system continues to be armed after the Late to Open minutes expire, a Late To Open message is sent to the central station. Default is **0**, which disables the Late To Open option.

EARLY TO CLOSE
MINUTES: 0

Early To Close

Enter 1-240 as the number of minutes that the system can be armed prior to the scheduled closing time. If the system is armed prior to the Early to Close minutes, an Early To Close message is sent to the central station. Default is **0**, which disables the Early to Close option.

SYSTEM OPTIONS

SYSTEM OPTIONS

System Options

This section allows you to select system-wide parameters.

SYSTEM:	AREA
---------	------

System

This option allows you to program how the areas operate for arming and disarming. The system types are:

AREA	A/P	H/A	GST
------	-----	-----	-----

AREA - All 32 areas can be programmed and operated independently.

ALL/PERIMETER - Area 1 is the Perimeter and Area 2 is the Interior.

HOME/SLEEP/AWAY - Area 1 is the Perimeter, Area 2 is the Interior, and Area 3 is the Bedrooms. With the HOME/SLEEP/AWAY option, the user can:

1. Select HOME to arm just the perimeter.
2. Select SLEEP to arm the perimeter and interior (non bedroom areas).
3. Select AWAY to arm all three areas.

A Home/Sleep/Away system can be configured to use all three areas or only use the Home and Away areas.

HOME/SLEEP/AWAY WITH GUEST- This allows the alarm system to be divided into a main house HOME/SLEEP/AWAY system and two other guest houses that also are set up as HOME/SLEEP/AWAY systems.

Areas 1, 2, and 3 are the Perimeter, Interior, and Bedrooms for the Main house system. Areas 4, 5, and 6 are the Perimeter, Interior, and Bedrooms for the Guest 1 house system. Areas 7, 8, and 9 are the Perimeter, Interior, and Bedrooms for the Guest 2 house system. These areas are automatically assigned per system and cannot be changed. See Display Areas in Device Setup to assign keypads to a system. Zones are assigned to a system by assigning the system's area numbers to the zone in Zone Information programming.

When either All/Perimeter or Home/Sleep/Away is selected, the area names are automatically assigned and cannot be modified.

Areas 3-32 in an All/Perimeter system, areas 4-32 in a Home/Sleep/Away system, and areas 9-32 in a Home/Sleep/Away with Guest system are not available for use and are initialized.

INST ARM	NO	YES
----------	-----------	-----

Instant Arming

When YES is selected, the arming keypad displays INSTANT for selection during the exit countdown delay when arming fewer than all areas of the system. At the time instant arming is selected, any entry and exit delays programmed for the areas being armed are ignored. The entry delay for previously armed areas is not affected by instant arming. When NO is selected, INSTANT does not display during arming. Default is **NO** for an Area System, and **YES** for an All/Perimeter or Home/Sleep/Away system.

CLS WAIT	NO	YES
----------	-----------	-----

Closing Wait

When YES is selected, the keypad displays ONE MOMENT... while waiting for an acknowledgement from the receiver before arming the selected area(s) and performing a Bell Test (if selected). Exit delays begin after the Closing Wait. Opening/Closing reports must be YES to enable Closing Wait.

ENTRY DLY 1:	30
--------------	----

Entry Delay 1

ENTRY DLY 2:	60
--------------	----

ENTRY DLY 3:	90
--------------	----

ENTRY DLY 4:	120
--------------	-----

Enter the Entry Delay time for all Exit type zones programmed to use Entry Delay 1. When an armed Exit type zone is faulted, the keypad prewarn tone begins sounding. All keypads programmed to prewarn for that zone display ENTER CODE:- and the name of the zone causing the entry delay. Entry Delay times can be from 30 to 250 seconds. Repeat the above for each entry delay being used in the system. For UL Installations, the combined Transmit Delay (Abort Window) and Entry Delay must not exceed one (1) minute.

CRS ZONE TM: 4

Cross Zone Time

Enter the time allowed between zone faults. When zones are cross zoned, the same zone or a second cross zoned zone must fault within this time in order for an alarm report for both zones to be sent to the receiver. If the cross zone time expires without the second zone faulting, only a zone fault from the first zone is reported. Cross-zone time can be from 4 to 250 seconds. Entering 0 (zero) disables this function. Default is **4**. See the Appendix.

RETARD DELAY: 10

Zone Retard Delay

Enter the retard time assigned to Fire, Supervisory, Auxiliary 1, Auxiliary 2, Arming, and Panic type zones. The retard delay only functions when the zone is shorted. The zone must remain shorted for the entire length of the Retard Delay before being recognized by the panel. The Zone Retard Delay can be from 1 to 250 seconds. Entering a 0 (zero) disables this function.

PWR FAIL HRS: 1

Power Fail Delay

This option tracks the duration of an AC power failure. When the AC power is off for the length of the programmed delay time, an AC power failure report is sent to the receiver. The delay time can be from 1 to 15 hours. Entering a 0 (zero) sends the power failure report after a 15-second delay. The default setting is **1**.

SWGRBYP TRIPS: 2

Swinger Bypass Trips

Enter the number of times (1-6) a zone can go into an alarm or trouble condition within one hour before being automatically bypassed. Bypassed zones are automatically reset when the area they are assigned to is disarmed. All 24-hour zones are reset when any area of the system is disarmed. Entering 0 (zero) disables this function. Default is **2**. A Bypass Report is sent to the receiver if Bypass Reports is YES.

RST SBYP NO YES

Reset Swinger Bypass

When YES is selected, an automatically bypassed zone is reset if it remains in a normal condition for one complete hour after being bypassed. A report of the automatic reset is sent to the receiver if Bypass Reports has been selected as YES. Default is **NO**.

ZN ACTY HRS: 0

Zone Activity Hours

This option provides supervision of a person living alone for non-activity. Enter the number of hours, 0 to 9, allowed to elapse without a disarmed zone being tripped before a message is sent to the receiver. Default is **0 (zero)**.

When the system is disarmed, the timer begins to countdown the number of hours programmed. Each time activity occurs, the timer restarts the countdown. Before the countdown time expires, the keypad sounds a tone and PRESS ANY KEY displays to allow the user to restart the activity timer. The duration of the tone is the number of seconds programmed for Entry Delay 2. Select the SUPV/TRBL receiver option in communication programming to send S93 ALARM: User Activity Not Detected, S94 Alert: Activity Check Enabled, and S95 Alert: Activity Check Disabled messages.

TIME CHG NO **YES**

Time Zone Changes

This function allows the panel to request automatic time changes from the DMP SCS-1R Receiver on Path 1. For the receiver to send time changes, it must be programmed to send time changes and must be receiving time change updates from the network automation computer at least every 24 hours. Default is **YES**.

HRS FROM GMT: **6**

When time zone is programmed YES, enter the number (0-23) that indicates the difference between the Greenwich Mean Time (GMT) and where the panel is located. The default is **6**.

GMT	City/Time Zone
0	London, Monrovia, Lisbon, Dublin, Casablanca, Edinburgh
1	Cape Verde Island, Azores
2	Mid-Atlantic, Fernando de Noronha
3	Buenos Aires, Georgetown, Brasilia, Rio de Janeiro
4	Atlantic Time (Canada), Caracas, La Paz, Santiago
5	Eastern Time (US, Canada) Bogota, Lima, Arequipa
6	Central Time (US, Canada), Mexico City, Saskatchewan
7	Mountain Time (US, Canada), Edmonton
8	Pacific Time (US, Canada), Tijuana
9	Alaska
11	Midway Island, Samoa, Hawaii*
12	Fiji, Marshall Island, Wellington, Auckland, Kwajalein, Kamchatka

GMT	City/Time Zone
13	New Cadelonia
14	Guam, Sydney
15	Tokyo, Seoul
16	Hong Kong, Singapore
17	Bangkok, Hanoi
18	Dhaka, Almaty
19	Islamabad, Karachi
20	Abu Dhabi, Kazan
21	Moscow, Bagdad
22	Eastern Europe
23	Rome, Paris, Berlin

*Arizona, Hawaii, American Samoa, Guam, Puerto Rico, and the Virgin Islands do not observe daylight savings time.

LATCH SV NO **YES**

Latch Supervisory Zones

Selecting YES latches supervisory zone alarms on the keypad display until the sensor reset operation is performed. Selecting NO automatically clears the alarm from the keypad display when the supervisory zone restores to a normal condition. Default is **YES**.

PROG LANGUAGE

Programming Menu Language

Press **CMD** to select the programming language.

PRI LANG: **ENGLISH**

The current primary programming language displays. The default language is **English**. Press a Select key to change the primary programming language.

Select the primary programming language.

- ENG** = English (ENGLISH)
- SPN** = Spanish (ESPANOL)
- FRN** = French (FRANCAIS)
- CZE** = Czech (CESKY)
- GRE** = Greek (EΛΛΗΝΙΚΑ)
- DUT** = Dutch (NEDER)

SEC LANG: **NONE**

The current secondary programming language displays. Selecting a secondary language allows the installer to view programming in English, Spanish, or French. When the Programming Menu is accessed, the installer is prompted to choose the programming display language. If SEC LANG: is set to NONE, the option to choose a language does not display. To select a secondary language, press the select key or area below the language. Default is **NONE**.

Select the secondary programming language.

- NONE** = No secondary language options are displayed
- ENG** = English (ENGLISH)
- SPN** = Spanish (ESPANOL)
- FRN** = French (FRANCAIS)
- CZE** = Czech (CESKY)
- GRE** = Greek (EΛΛΗΝΙΚΑ)
- DUT** = Dutch (NEDER)

USER LANGUAGE
PRI LANG: **ENGLISH**

User Menu and Status List Language

Press **CMD** to select User Language.

The current primary user language displays. The default language is **English**. Press any select key or area to change the primary User language.

Select the primary user language.

ENG = English (ENGLISH)

SPN = Spanish (ESPAÑOL)

FRN = French (FRANCAIS)

CZE = Czech (CESKY)

GRE = Greek (ΕΛΛΗΝΙΚΑ)

DUT = Dutch (NEDER)

SEC LANG: **NONE**

The current secondary user language displays. Selecting a secondary user language allows the user to view the User Menu and Status List text in English, Spanish, or French. When the User Menu is accessed, the user is prompted to choose the display language. Status List text displays in the selected language until another language is chosen. If SEC LANG: is set to NONE, the option to choose a language does not display. To select a secondary language, press the select key or area below the language. Default is **NONE**.

Select the secondary user language.

NONE = No secondary language options are displayed

ENG = English (ENGLISH)

SPN = Spanish (ESPAÑOL)

FRN = French (FRANCAIS)

CZE = Czech (CESKY)

GRE = Greek (ΕΛΛΗΝΙΚΑ)

DUT = Dutch (NEDER)

BYPASS LIMIT **0**

Bypass Limit

Enter the maximum number of zones (0 to 8) that can be bypassed in any single area when that area is being armed at a keypad. If more zones than the limit are in a non-normal state or already bypassed at arming, arming does not occur and Arming Stopped displays. The Bypass limit does not affect auto arming, keyswitch arming, or remote arming. Entering 0 (zero) allows no limit. Default is **0 (zero)**.

WIRELESS
HOUSE CODE: **0**

House Code

When using a DMP wireless system, enter a house code between 1 and 50. Default is **0** indicating no wireless system is being used. The DMP house code identifies the panel, DMP receiver, and DMP transmitters to each other. The DMP receiver listens for transmissions that have the programmed house code and transmitter serial number. The transmitters may take up to two minutes to learn the new house code and continue operation.

1100 ENCRYPTION
ALL BOTH **NONE**

Wireless Encryption

Encryption allows the panel to communicate with encrypted 1100 Series wireless devices. Select ALL to allow encryption for all the wireless devices programmed into the panel. Select BOTH to allow encryption for selected wireless devices programmed into the panel. Select NONE to don't allow encryption for wireless devices programmed into the panel. The default is **NONE**.

1100 PASSPHRASE

Enter Passphrase

ENTER PASSPHRASE displays if you select ALL or BOTH for wireless encryption. In order for the panel to support encrypted 1100 Series wireless devices, a passphrase must be entered. The passphrase must be an 8-digit hexadecimal number which determines the system's encryption key.

DETECT WIRELESS
JAMMING: **NO** YES

Detect Wireless Jamming

This option displays when the House Code entered is for a DMP 1100 Series Wireless system (1-50). When enabled and the wireless receiver detects jamming, a jammed trouble (when disarmed) or jammed alarm (when armed) message displays in the Status List and is sent to the central station receiver. Select YES to enable jamming messages to display in the Status List. Select NO to disable jamming messages. Default is **NO**.

TRBL AUDIBLE: **DAY**

Trouble Audible Annunciation

This option allows you to choose when trouble audibles will annunciate from the keypad. This also includes AC Trouble for Fire Keypads, Battery Trouble, Panel Tamper, and other System Troubles.

Press any top row key to select the keypad buzzer annunciation method for wireless low battery and missing messages. Select ANY to enable annunciation anytime. Select DAY to enable annunciation except during sleeping hours (9 PM to 9 AM). Select MIN (minimum) to annunciate only Fire and Fire Verify zones during daytime hours (9 AM to 9 PM). Default is **DAY**.

KEYPAD PANIC KEYS
ENABLED: NO **YES**

Enable Keypad Panic Keys

This option allows the panic key operation selected at the keypad to send the Panic, Emergency, or Fire message to the central station receiver. Select YES to enable the two-button panic operation to operate. To disable the panic operation, select NO. Default is **YES**.

OCCUPIED
PREMISES: NO **YES**

Occupied Premises

For All/Perimeter or Home/Sleep/Away systems, select YES to allow the panel to automatically disarm the interior area(s) when arming all areas and a perimeter zone is not tripped during the exit delay.

This False Alarm Reduction feature will keep a user from arming the entire system when they do not exit and remain in the premises. Select NO to disable this feature. Default is **YES**.

With a Home/Sleep/Away with Guest arming system, this feature only applies to the main system.

ENHANCED ZONE
TEST: **NO** YES

Enhanced Zone Test

Select YES to allow enhanced zone test operation for Walk Test (8144), Panic Test, and Burglary Zone Test in the User Menu. The default is **NO**.

Enhanced operation allows:

- A Verify message to be sent each time a zone is tested. If a zone is tripped multiple times, a Verify message is sent for each trip. This allows the Central Station to record the number of devices per zone.
- The Verify message for each zone test to be sent at the time the trip occurs instead of at the end of Walk Test.
- The System Test Begin and System Test End Central Station messages indicate the type of zone being tested. The System Test Begin message also includes the user name and number.

SEND 16 CHAR
NAMES: NO **YES**

Send 16 Character Names

This option allows central stations to select being sent either the first 16 characters of the name field or the entire programmed name, up to 32 characters, for user name, user profile, zone name, area name, output name, and group name.

Select YES to have the first 16 characters of the name field sent to the central station. Select NO to send the exact number of characters entered in the name field from 1 up to the maximum of 32 characters. Default is **YES**.

Before using names longer than 16 characters, determine whether the Host Automation System of your Central Station can accept 17 to 32 character names. If not, only use 16 character names.

KEYPAD ARMED LED
ANY **ALL**

Keypad Armed LED

This option displays only when using an Area system. Press any top row key to select the operation of the Armed LED on the keypad. Select ALL to require all keypad display areas to be armed before the keypad Armed LED turns on. Select ANY to turn on the keypad Armed LED when any keypad display area is armed. Default is **ALL**.

USE FALSE ALARM
QUESTION NO **YES**

Use False Alarm Question

This option allows users to investigate a burglary alarm prior to disarming the system and send an Alarm Verified or Alarm Cancelled message to the Central Station.

Select YES to display IS THIS A FALSE ALARM? NO YES when a burglar alarm occurs. Select NO to display CANCEL VERIFY. Default is **YES**.

When a burglar alarm occurs in an area system and a user code is entered at a keypad Status List, keypads programmed as KPD in Device Setup display IS THIS A FALSE ALARM? NO YES or CANCEL VERIFY. The option is not displayed at devices programmed as DOOR. Selecting NO or Verify sends an alarm message to the Central Station. Selecting YES or CANCEL sends an alarm cancelled message to the Central Station and disarms the areas that the user has the authority to disarm. This display remains on the keypad until a selection is made, the Back Arrow is pressed, or the internal system bell cutoff timer expires.

ALLOW OWN USER
CODE CHG? **NO** YES

Allow Own User Code Change

This option allows users without user code authority to change their own user code. When YES is selected, the User Code menu displays USER CODE: ***** at the keypad to allow that user to change their own code. If NO is selected, the user cannot change their personal user code. Default is **NO**.

PANIC SUPERVISION
NO YES

Panic Supervision

Select YES to enable a 30 day supervision of the Model 1145-1-B-PSV key fob. Default is **NO**.

This option allows a key fob that is lost or has a dead battery to be identified at the Central Station host automation system as a missing transmitter, without the need to apply a supervision time in zone information programming. A supervision message is automatically sent from the key fob to SCS-VR every four hours, resetting the 30 day countdown timer for that key fob serial number. If the 30 day timer expires for a key fob serial number, SCS-VR will generate a zone missing message to the host automation system.

ENTER WEATHER
ZIP CODE: **0**

Weather Zip Code

This option allows local U.S.A. weather updates to display on the keypad. Enter the zip code of the user at this option. When no number is entered weather conditions are not displayed. Default is **0**.

If using a 7800 Series keypad, the current weather conditions and the next day's forecast display as graphics on the Main Screen. All other DMP keypads display the weather information in the Status List.

EOL VALUE: XXXX

EOL Selection

Select the resistance value in kOhms that the system will expect for end of line resistors. Values can be set at either 1k, 2.2k, 3.3k, or 4.7k. This adjusts the voltage threshold used to determine open, short, or normal zone conditions for zones 1-8 on XR International Series panels. Default is **1k**.

Zones 9-10 on XR International Series panels are defaulted to 3.3k.

CELSIUS: **NO** YES

Celsius Temperature Option

This option determines whether the panel should use Celsius Units for displayed temperatures and for sending temperatures to Z-Wave thermostats. The default is **NO**.

INTRUDER VERIFY
TIME: XXX

Intruder Confirmation Time

If two zones trip within the specified time frame, then it is considered a verified alarm and authorities will respond. Intruder confirmation times can be from 30-60 minutes. The default is **0**.

HOLD UP VERIFY
TIME: XXX

Hold Up Confirmation Time

If two panic type zones trip within the specified time frame, then it is considered a verified alarm and authorities will respond. Holdup confirmation times can be from 8-20 hours. The default is **0**.

BELL OPTIONS

BELL OPTIONS

Bell Options

This section allows you to program the panel bell output functions.

BELL CUTOFF:	15
--------------	----

Bell Cutoff Time

Enter the maximum time from 1 to 99 minutes the Bell Output remains on. If the area is disarmed, the cutoff time resets. Enter 0 (zero) to provide continuous bell output. The default is **15 minutes**. To support the Cancel Verify feature on an All/Perimeter or Home/Sleep/Away system, set the Bell Cutoff Time to greater than 0.

BELL TST	NO	YES
----------	----	-----

Automatic Bell Test

Select YES to turn on the Bell Output for 2 seconds each time the system is armed from a keypad. This test is delayed until the Closing Wait acknowledge is received (if programmed). If the Closing Wait acknowledge is not received within 90 seconds, the bell test does not occur. Arming performed from an Arming zone does not activate the Bell Test.

BELL OUTPUT:	0
--------------	---

Bell Output

Enter the output/Favorite number when needed to follow the panel Bell Output operation for all action and off conditions. Enter 0 (zero) to disable.

BELL ACTION

Bell Action

This section defines the type of Bell Output for zone alarms. Press **CMD** to display the default Bell Output for each zone type. Press any select key or area and enter S for a Steady Bell Output, P for a Pulsed output, T for a Temporal Code 3 output, 4 for a Temporal Code 4 output, and N for no Bell Output (default). Enable this feature to latch a bell action to a keypad for Panic zones. Trouble conditions do not activate the Bell Output.

FIRE TYPE:	T
------------	---

Fire Bell Action

Defines Bell Action for Fire Type zones. The default is **T**.

BURGLARY TYPE:	S
----------------	---

Burglary Bell Action

Defines Bell Action for Burglary Type zones and Exit Error output. The default is **S**.

SUPRVSRY TYPE:	N
----------------	---

Supervisory Bell Action

Defines Bell Action for Supervisory Type zones. The default is **N**.

PANIC TYPE:	N
-------------	---

Panic Bell Action

Defines Bell Action for Panic Type zones. The default is **N**.

EMERGNCY TYPE:	N
----------------	---

Emergency Bell Action

Defines Bell Action for Emergency Type zones. The default is **N**.

AUXLRY 1 TYPE:	N
----------------	---

Auxiliary 1 Bell Action

Defines Bell Action for Auxiliary 1 Type zones. The default is **N**.

AUX 2 TYPE:	N
-------------	---

Auxiliary 2 Bell Action

Defines Bell Action for Auxiliary 2 Type zones. The default is **N**.

CO TYPE:	4
----------	---

Carbon Monoxide (CO)

Defines Bell Action for Carbon Monoxide (CO) Type Zones. The default is set at **4**.

STROBE:	NO	YES
---------	----	-----

Strobe

Defines whether or not a system is using a strobe on site. The default is **NO**.

OUTPUT OPTIONS

OUTPUT OPTIONS

Output Options

This section allows you to program panel output options. The panel provides two Form C relays (1 and 2) and four switched ground (open collector) outputs numbered 3 to 6. Expand the system up to 500 additional relay outputs using any LX-Bus on the panel, or multiple 716 Output Expander Modules. In addition, 45 wireless outputs are available when using the 1100XINT Series wireless receiver. Refer to the XR150INT/XR550INT Series Installation Guide ([LT-1233INT](#)) for complete information.

Select from the following output numbers:

- 1 to 6 — Onboard panel outputs
- 450 to 474 — Slow response time* wireless outputs (activates within 15 seconds)
- 480 to 499 — Fast response time* wireless outputs (activates within 1 second)
- 500 to 999 — LX-Bus output, Relay output, Zone expansion output
- D01 to D16 — Keypad door strike relay for addresses 1-16
- F1 to F20 — To activate Z-Wave Favorites
- G1 to G20 — Output group

* The response time of a wireless output is the time it takes for a wireless output to activate once the panel event occurs. You determine whether a wireless output is a slow or fast response based on the output number assigned. A slow response output number extends battery life, but response time may be up to 15 seconds. A fast response output number responds within 1 second, but reduces battery life. Refer to the specific wireless output installation guide to determine battery life. Output response times are programmed in **Output Information**.

CO OUTS: - - - - -

Cutoff Output

Outputs 1 to 6 can be entered here to turn off after a time specified in CUTOFF TIME. To disable this option, press any select key or area to clear the display then press **CMD**. The Cutoff Output displays dashes when no outputs are selected.

CUTOFF TIME: 0

Output Cutoff Time

If a Cutoff Output (1-6) is assigned, enter a Cutoff Time of 1 to 99 minutes for the output to remain on. Enter 0 (zero) for continuous output.

COM FAIL OUT: 0

Communication Trouble Output

Enter the output/Favorite number to turn on when a DD system fails to communicate on three successive dial attempts or if the backup communication line transmits a report. The Communication Trouble Output also turns on when NET is selected as the primary communication method and NET communication fails after one minute. When NET communication is restored the Communication Trouble Output automatically turns off. To manually turn the output off, disarm any area or select Off for the output number in the User Menu Outputs On/Off section. Enter 0 (zero) to disable this output.

FIRE ALR OUT: 0

Fire Alarm Output

Enter the Output/Favorite number to turn on when a fire type zone is placed in alarm. The output is turned off using the Sensor Reset option while no additional fire type zones are in alarm. Enter 0 (zero) to disable. This output is not compatible with Cutoff Outputs.

FIRE TRB OUT: 0

Fire Trouble Output

Enter the output number to turn on when a fire type zone is placed in trouble, when a supervisory type zone is placed in trouble, or when any system monitor (AC, Battery, Phone Line 1 or Phone Line 2) is placed in trouble. The output turns off when all fire and supervisory type zones, or system monitors are restored to normal. Enter 0 (zero) to disable this output. This output is not compatible with Cutoff Outputs. This output can be connected to a lamp, LED, or buzzer using the DMP Model 716 Output Expansion Module.

PANIC ALM OUT:	0
----------------	---

Panic Alarm Output

Enter the output/Favorite number to turn on when any Panic type zone is placed in an alarm condition. The output is turned off after all Panic zones are restored from an alarm condition and a Sensor Reset is performed. Enter 0 (zero) to disable.

Wireless Outputs

- The Panic Alarm is compatible with the Model 1118 Wireless Remote Indicator Light and the Model 1116 Wireless Relay Output connected to a Model 572 Indicator LED.
- When a Panic Alarm occurs, the LED turns on steady for five minutes and then turns off.
- When a Panic Test is initiated from the keypad, the LED flashes quickly for five minutes.
- For a Panic Alarm, a fast response wireless output number is recommended.

AMBUSH OUT:	0
-------------	---

Ambush Output

Enter the output/Favorite number to turn on when an Ambush code is entered at a keypad. The output is turned off using the Sensor Reset option. Enter 0 (zero) to disable.

ENTRY OUT:	0
------------	---

Entry Output

Enter the output/Favorite number to turn on at the start of the entry delay time. The output turns off when the area is disarmed or the entry delay time expires. Enter 0 (zero) to disable.

BEG EXIT OUT:	0
---------------	---

Begin Exit Output

This output/Favorite turns on any time an exit delay time starts. The output turns off when the system arms or when the arming has been stopped. Enter 0 (zero) to disable.

END EXIT OUT:	0
---------------	---

End Exit Output

This output/Favorite turns on any time an exit delay time ends. The output turns off when the system disarms. Enter 0 (zero) to disable.

READY OUT:	0
------------	---

Ready Output

Enter the output/Favorite number to turn on when all disarmed burglary zones are in a normal state. The output is turned off when any disarmed burglary type zone is in a bad state. Enter 0 (zero) to disable. This output is not compatible with Cutoff Outputs.

ARMED HOME:	0
-------------	---

ARMED SLEEP:	0
--------------	---

ARMED AWAY:	0
-------------	---

ARMED ALL:	0
------------	---

ARMED PERIM:	0
--------------	---

ARMED OUT:	0
------------	---

Armed Output

The entered output turns on any time the system is armed. The programming prompt displayed is dependent on the system's arming type.

For Home/Away systems, only the HOME and AWAY screens display. If a Bedroom area is programmed into the panel, the SLEEP screen also displays. For All/Perimeter systems, the ALL and PERIM screens display. For Area systems, the ARMED OUT screen displays.

All options are defaulted to 0 (zero). The output turns off when the system completely disarms. Enter 0 (zero) to disable this output.

DISARMED OUT:	0
---------------	---

Disarmed Output

This output/Favorite turns on when all areas of the panel are disarmed. The output turns off when an area is armed.

PH TRBL OUT:	0
--------------	---

Telephone Trouble Output

Enter the output/Favorite number to turn on when the phone line monitor on the panel phone line is lost. Enter 0 (zero) to disable this output.

LATE CLS OUT:	0
---------------	---

Late To Close Output

Enter the output/Favorite number to turn on at the expiration of a Closing schedule. The output activates simultaneously with the CLOSING TIME! keypad display. The output is turned off when the area is armed, the Closing is extended, or the schedule is changed. Enter 0 (zero) to disable this output.

DVC FAIL OUT: 0

Device Fail Output

Enter the output/favorite number to turn on when an addressed device fails to respond to polling from the panel. A Missing Device report is sent to the receiver and is stored as an event in the panel. The output is turned off when the device responds to polling or is removed from programming in the system. Enter 0 (zero) to disable this output and LX-Bus™ device fail reporting to the receiver. If any addressed device is unsupervised, this output cannot be used.

SNSR RST OUT: 0

Sensor Reset Output

Enter the output/Favorite number to turn on when a Sensor Reset is performed at a keypad. The output turns off automatically 5 seconds later. This function can be used to reset smoke detectors that are operated by an external power supply through a Model 716 Output Expander Module. Enter 0 (zero) to disable this output.

CLS WAIT OUT: 0

Closing Wait Output

Enter the output/Favorite number to turn on for approximately four (4) seconds when Closing Wait is programmed as YES and the panel successfully communicates the closing message at arming. If the closing message does not communicate successfully, this output does not turn on.

ARM-ALARM OUT: 0

Arm-Alarm Output

Enter the output/Favorite number to turn on steady when any area of the system is armed. If an alarm occurs causing the keypads to turn Red, this output pulses and continues to pulse for approximately five (5) minutes after the panel is disarmed. Enter 0 (zero) to disable.

To operate the Arm-Alarm output within one second, program a fast response number from 480 to 499. Fast response operation reduces overall wireless output battery life.

To operate the Arm-Alarm output within 15 seconds, program a slow response number from 450 to 474. Slow response operation increases overall wireless output battery life.

SUPV ALM OUT: 0

Supervisory Alarm Output

Enter the output/Favorite number to turn on when a supervisory zone type is placed into an alarm. The output turns off when all supervisory type zones are restored to normal. Enter 0 (zero) to disable. Default is 0.

HEAT SAVER
TEMPERATURE: 0

Heat Saver Temperature

Enter the desired temperature setting for all Z-Wave thermostats when the system is armed ALL or AWAY. When the system is disarmed the thermostats return to their previous settings. The range is 1-99 degrees. Enter 0 (zero) to disable.

COOL SAVER
TEMPERATURE: 0

Cool Saver Temperature

Enter the desired temperature setting for all Z-Wave thermostats when the system is armed ALL or AWAY. When the system is disarmed the thermostats return to their previous settings. The range is 1-99 degrees. Enter 0 (zero) to disable.

OUTPUT OPTIONS
CO ALRM OUT: XXX

Carbon Monoxide Alarm Output

This output turns on any time a Carbon Monoxide Zone (CO) is placed in alarm. The output is turned off using Sensor Reset option while no additional CO type zones are in alarm.

OUTPUT OPTIONS
LOCKDOWN OUT: XXX

Lockdown Output Alarm Output

This output turns on any time a Lockdown Output Zone is placed in alarm. The output is turned off using Sensor Reset option while no additional Lockdown type zones are in alarm.

OUTPUT OPTIONS
ZN MNTR OUT: XXX

Zone Monitor Output

This output turns on momentarily when a zone monitor tone is activated on keypads. If zone monitoring is turned off, the zone monitor output will not trigger. When a sensor reset is performed, the alert message will be cleared from the status list.

OUTPUT INFORMATION

OUTPUT NUMBER

Output Number

Enter an output number. Entry range is 1 to 6, 450 to 474, 480 to 499, 500 to 999. In order for wireless output troubles to display at a keypad, the keypad address must be specified at the Auxiliary 1 Zones option in the Status List programming.

OUTPUT NAME

Output Name

This section allows you to define a 32 character alphanumeric name for any output numbers. See the XR150INT/XR550INT Users Guide ([LT-1278INT](#)) Appendix for browser operation.

OUTPUT REAL-TIME STATUS	NO	YES
-------------------------	-----------	-----

Output Real-Time Status

Selecting YES allows Real-Time Status reports of a hardwire device, such as Output ON, OFF, PULSE, or TEMPORAL to be sent using PC Log reports. Selecting NO disables Real-Time Status for this output device. Default is **NO**.

SERIAL#: XXXXXXXX

Serial Number

If a house code is programmed in system options, then this option and the next option only display when the output number entered is for a wireless output. Enter the eight-digit serial number found on the wireless device.

ALREADY IN USE OUTPUT NO: XXX

Already In Use displays when the serial number is already programmed for another output. The programmed output number displays.

SUPERVSN TIME:	240		
0	3	60	240

Supervision Time

Press any select key or area to select the supervision time required for the wireless output. Press **CMD** to accept the default time. Default is **240 minutes**.

Select the required number of minutes. The transmitter must check in at least once during this time or a missing condition is indicated for that zone. Zero (0) indicates an unsupervised transmitter. The 3 minute supervision time is only available if using an 1135 Wireless Siren.

When the panel is reset, a receiver is installed or powered down and powered up, or programming is complete, the supervision timer restarts for all wireless outputs.

TRIP WITH PANEL BELL	NO	YES
----------------------	----	------------

Trip with Panel Bell Option

This option displays when the wireless device is an 1135 wireless siren. Select YES to have the 1135 wireless siren follow the panel's bell output cadence for the zone type and bell cutoff time up to 15 minutes. Default is **YES**.

OUTPUT GROUPS

OUTPUT GROUPS

Output Groups

This function allows you to assign outputs to groups. Output groups can be assigned to other areas of programming such as Output Options or Alarm Action of Zone Information, just like single outputs are assigned. This allows the entire group of outputs to turn on and off as required by the programming option.

GROUP NO: -

Group Number

Enter a group number from 1 to 20. Up to 20 different groups may be assigned.

GROUP NAME X X

Group Name

The group name displays. To change the default name, press any select key or area then enter up to 32 characters for the group name. Press **CMD** to enter the outputs to be assigned to the group.

OUTPUT NO: 1

Output Number

Enter the Output number. Entry range is 1 to 6, 450 to 474, 480 to 499, 500 to 999 (outputs), F1 to F20 (favorites), D01 to D16 (doors), and G1 to G20 (groups). The maximum number of outputs that can be assigned to a specific group is eight.

An output group may be assigned as one of the output numbers in another output group. Output groups 1 to 10 can be assigned by a user profile for applications such as elevator control. See the XR150INT/XR550INT Users Guide ([LT-1278INT](#)) Output Group section for additional information.

Output groups 11 to 20 cannot be assigned to a profile and are available for installation applications such as special lighting, etc.

MENU DISPLAY

MENU DISPLAY

Menu Display

Menu Display allows you to select at which keypad addresses the user can access the following functions.

To select a keypad, enter the device number (keypad address) using the digit keys on the keypad. When a keypad is selected, an asterisk appears next to the keypad address. Enter the number again to deselect the keypad. Press **CMD** to display the next set of keypads (9 through 16). Refer to the Multiple Displays section at the beginning of this document.

ARMED STATUS

*1	*2	*3	*4
*5	*6	*7	*8

*9	*10	*11	*12
*13	*14	*15	*16

Armed Status

Enter the keypad addresses (1 through 16) that show the armed areas. The User Menu Armed Areas function also displays the custom area name you enter in Area Information.

When only areas one to eight are used, the Armed Status display is 1 2 3 4 5 6 7 8. When areas nine or higher are used the system Armed Status display reads ALL SYSTEM ON or SYSTEM ON. Press **CMD** to display additional areas.

TIME DISPLAY

*1	*2	*3	*4
*5	*6	*7	*8

*9	*10	*11	*12
*13	*14	*15	*16

Time

Enter the keypad addresses that can display the time and day of the week.

ARM/DIS DISPLAY

*1	*2	*3	*4
*5	*6	*7	*8

*9	*10	*11	*12
*13	*14	*15	*16

Arm/Disarm

Enter the keypad addresses from which users can arm and disarm areas.

STATUS LIST

STATUS LIST

Status List

This function allows you to select the zone alarms and troubles, and system monitor troubles displayed at the keypads. The Status List function operates automatically when the keypad is not performing any other function.

The keypad stays in the Status List until the user arms, disarms or selects a menu option.

Status List alternates with the Armed Status on keypad addresses selected in the **Menu Display - Armed Status** section. You can choose to have System Monitor troubles placed in the list, the different zone types placed in the list, and at which keypad addresses they display.

To select a keypad, enter the device number (keypad address) using the digit keys on the keypad. When a keypad is selected, an asterisk appears next to the keypad address. Enter the number again to deselect the keypad. Press **CMD** to display the next set of keypads (9 through 16). Refer to the Multiple Displays section at the beginning of this document.

DISPLAY KEYPADS

Display Keypads

This option defines which keypad addresses display the various status information. Any combination of addresses can be entered to display the status items that follow. If you do not want a particular status item to display, do not enter any addresses.

SYSTEM TROUBLES

System Monitor Troubles

Specifies the keypad addresses (1 through 16) where any trouble on a System Monitor displays. The System Monitors include the following:

*1	*2	*3	*4
*5	*6	*7	*8
*9	*10	*11	*12
*13	*14	*15	*16

- AC Power
- Battery Power
- Closing Check
- Panel Box Tamper
- Phone Line 1
- Phone Line 2 (requires the 893A Dual Phone Line Module)
- Wireless Receiver Trouble
- Wireless Jamming Trouble or Alarm

The System Monitor name is placed in the Status List and the keypad steady trouble buzzer sounds. The buzzer remains on until any select key or area is pressed. The name remains in the list until the condition is restored. The buzzer sounds at 10:00 am daily until the system trouble is cleared from the Status List.

FIRE ZONES:

Fire Zones

Specifies the keypad addresses (1 through 16) where all fire zone alarms and troubles display. The zone name displays and, if it is a trouble condition, the keypad steady trouble buzzer sounds. The buzzer remains on until any select key or area is pressed and a user code is entered. If a trouble condition remains in the display, the buzzer sounds at 10:00 am daily until the trouble is cleared from the Status List.

BURGLARY ZONES:

Burglary Zones

Specifies the keypad addresses (1 through 16) where all burglary zone alarms and troubles display. Burglary zones include Night, Day, and Exit type zones. Burglary zone troubles remain in the list until the zone restores. All keypads are selected by default.

For zone alarms, only the last burglary zone tripped remains in the list. The alarm remains in the list until another burglary zone goes into alarm, any area of the system is disarmed, or 10 minutes elapse without an alarm. This ensures that if a burglary is in progress the last zone tripped remains in the list even if the zone is restored.

The keypad buzzer sounds for one second on burglary alarms.

You can further define which keypad address shows a Burglary Zone event by entering that area number in the Display Areas menu during Device Setup.

SPRVISORY ZONES:

Supervisory Zones

Specifies the keypad addresses (1 through 16) where all supervisory zone alarms and troubles display. Supervisory zones are entered in the status list and sound the keypad buzzer until a valid user code is entered at any keypad address. If a trouble condition remains in the display, the buzzer sounds at 10:00 am daily until the supervisory trouble is cleared from the Status List.

PANIC ZONES:

Panic Zones

Specifies the keypad addresses (1 through 16) where all panic zone alarms and troubles display. The name of the zone remains in the list until a Sensor Reset is performed. The keypad will sound if the Bell Action is enabled in Bell Options.

EMERGENCY ZONES:

Emergency Zones

Specifies the keypad addresses (1 through 16) where all emergency zone alarms and troubles display. The name of the zone remains in the list until the zone restores. The keypad buzzer does not sound for emergency alarms or troubles.

AUX 1 ZONES:

Auxiliary 1 Zones

Specifies the keypad addresses (1 through 16) where all Auxiliary 1 zone alarms and troubles display. The name of the zone remains in the list until the zone restores. The keypad buzzer does not sound for Auxiliary 1 alarms or troubles. You can further define which keypad address shows an Auxiliary 1 Zone event by entering that area number in the Display Areas menu during Device Setup.

AUX 2 ZONES:

Auxiliary 2 Zones

Specifies the keypad addresses (1 through 16) where all Auxiliary 2 zone alarms and troubles display. The name of the zone remains in the list until the zone restores. The keypad buzzer does not sound for Auxiliary 2 alarms or troubles. You can further define which keypad address shows an Auxiliary 2 Zone event by entering that area number in the Display Areas menu during Device Setup.

CO ZONES:

Carbon Monoxide Zones

Specifies the keypad addresses (1 through 16) where all carbon monoxide zone alarms and troubles display. Carbon monoxide zones are entered in the status list and sound the keypad buzzer until a valid user code is entered at any keypad address. If a trouble condition remains in the display, the buzzer sounds at 10:00 am daily until the carbon monoxide trouble is cleared from the Status List.

COMM PATH TRBL:
NO YES ALL

Communication Trouble

Specifies when communication troubles are displayed on keypads that are programmed to display System Monitor Troubles. Default is **NO**.
Select YES to display communication trouble when any communication path fails.
Select ALL to display communication trouble only when all paths have failed.

PC LOG REPORTS

PC LOG REPORTS

PC Log Reports

This section allows you to program the types of PC Log Reports the panel sends through the ETHERNET Port directly on the panel. The reports include information such as the type of activity, time and date of the activity, and user name and number. These data reports can be accessed from a PC using the Advanced Reporting Module. See the XR150INT/XR550INT Series Installation Guide ([LT-1233INT](#)) for detailed Ethernet setup information or the XR150INT/XR550INT Users Guide ([LT-1278INT](#)) for more information.

If there is trouble with the network connection, the panel continues to attempt to send the PC Log Reports until the connection is reestablished. The panel then sends the reports. A Network Trouble message is NOT sent if the connection is lost since this report tool is not designed to be monitored by a receiver. The PC Log Reports have the lowest priority of panel reports sent.

The PC Log Address String entered CANNOT be the same as that entered in Communication. The PC Log Reports option should NOT replace the primary communication method or act as a backup communication method.

NET IP ADDRESS
000.000.000.000

Net IP Address

This option displays when the Communication Type for PC Log Reports is NET. Enter the IP address containing up to 16 characters. The Net IP Address must be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods. The default is **0.0.0.0**.

NET PORT **2001**

Net Port

This option displays when Communication Type for PC Log Reports is Net. Enter the Port number. Valid numbers are from 0 to 65535. Default is **2001**.

ARM/DIS **NO** YES

Arm and Disarm Reports

Sends arming, disarming and Late to Close events. Includes the area number, name and action, the user number and name, and the time and date.

ZONE **NO** YES

Zone Reports

Sends changes in the status of active zones. Includes the zone number, name, type, the action (alarm, trouble, bypass, etc.), user number (if applicable), and area name. For a Walk Test, zone verify and zone fail messages are sent for each zone.

USR CMDS **NO** YES

User Command Reports

Sends user code changes, schedule changes, and door access denied events.

DOOR ACS **NO** YES

Door Access Reports

Sends door access activity: door number, user number and name, and time and date.

SUPV MSG **NO** YES

Supervisory Reports

Sends system monitor reports, such as AC and battery, and system event reports. Supervisory Reports also sends the following reports:

- Abort
- Exit Error
- Ambush
- System Recently Armed
- Alarm Bell Silenced
- Unauthorized Entry
- Late to Close*

*Only sent as a Supervisory Report if **Area Schedules** is not enabled, **Closing Check** is enabled, and an opening/closing schedule has been programmed.

To send these reports to the PC Log, you must enable SUPV MSG.

PC LOG REAL-TIME
STATUS **NO** YES

PC Log Real-Time Status

Select YES to send Real-Time Status reports for zones, doors, and outputs. The specific reports must also be selected by individual zone or output. The Real-Time Status messages are sent to a PC running a graphic display software. Default is **NO**.

The messages that can be sent are:

- Door Open with zone number
- Door Closed with zone number
- Door Open with door number
- Door Closed with door number
- Output On
- Output Off
- Output Pulse
- Output Temporal

AREA INFORMATION

AREA INFORMATION

Area Information

Allows you to activate areas and assign functions to the different areas in the system. All non-24-hour zones must be assigned to an active area. See Zone Information. You activate an area by assigning it a name.

EXIT DELAY: 60

Exit Delay

Enter the exit delay time for all Exit type zones in this area. When the exit delay time starts, all activity on that zone and other non-24-hour zone types in the area is ignored until the exit delay expires. The keypad displays the Exit Delay time countdown and annunciates the Exit Delay tone at 8 second intervals until the last 10 seconds when annunciation is at 3 second intervals.

The exit delay can be from 30 to 250 seconds. Default is **60 seconds**.

During Exit Delay, if an exit zone trips, then restores, and trips again, the Exit Delay timer restarts. This restart can occur only once.

Exit Error Operation: At arming, when an entry/exit zone (EX) is **faulted** at the end of the exit delay then one of two sequences occur:

For Entry Delay 1 EX type zones:

- The bell sounds for the length of time set in Bell Cutoff programming
- The Entry Delay operation starts requiring code entry to disarm
- If not disarmed, a zone alarm and an exit error are sent to the receiver

For Entry Delay 2-4 EX type zones:

- The zone is force armed and a zone force arm message is sent to the receiver
- An Exit Error is sent to the receiver
- The bell sounds for the length of time set in Bell Cutoff programming

CLS CHK **NO** YES

Closing Check

Select YES to enable the panel to verify that all areas in the system are armed after permanent or extended schedules expire. If the Closing Check finds any areas disarmed past the scheduled time, the keypads selected to display System Trouble Status displays CLOSING TIME! and emits a steady beep. When Area Schedules is set to YES in Area Information, the specific area and name display followed by — LATE.

When Auto Arm is NO, if within ten minutes the system is not armed or if the schedule is not extended, a Late to Close report is sent to the SCS-1R Receiver. When Auto Arm is YES, the area arms.

If the area becomes disarmed outside of any schedule, the Closing Check sequence occurs after the Late Arm Delay time.

When Closing Check is NO and Auto Arm is YES, the system immediately arms when the schedule expires. No warning tone occurs.

In addition, when Closing Check is NO, the option to extend a schedule does not display when the schedule expires.

CLS CODE **NO** YES

Closing Code

When YES is selected, a code number is required for system arming. If NO is selected, a code number is not required for system arming.

ANY BYPS **NO** YES

Any Bypass

When YES is selected, zones can be bypassed without a code number during the arming sequence. A code number is always required to use the Bypass Zones option from the menu.

AREA SCH **NO** YES

Area Schedules

Select **YES** to allow each area to follow individual sets of area schedules programmed in the User Menu. Select **NO** for all areas to follow only one set of schedules in the User Menu. See the panel User Guide ([LT-1278INT](#)) to add schedules to the panel. Area Schedules are not designed to operate with All/Perimeter or Home/Sleep/Away systems.

EARLY AMBUSH: 0

Early Morning Ambush (Network Panels Only)

Enter the number of minutes (1 to 15) before a silent alarm (Early Morning Ambush S33) is sent to the central station using the area 1 account number. Enter 0 (zero) to disable this option.

When a user code is entered to disarm area 1 at a keypad or reader with Access Areas assigned to area 1, the same or different user code must be entered within the programmed number of minutes to prevent an ambush message from being sent to the receiver. The second user code also must have authority to disarm area 1.

In addition, a zone activation with Alarm Action Message C also cancels the Early Morning Ambush timer and stops an Ambush message from being sent to the receiver. See Report to Transmit section in Zone Information.

The keypad does not display any indication that the ambush timer is running.

Indications can be provided by assigning an output number to Entry Out and Ambush Out in Output Options. Entry Out turns on one minute before the timer expires and turns off at expiration. Ambush Out turns on at the timers' expiration and turns off when Sensor reset is performed.

AREA NO: -

Area Number

Enter the number of the area to program. Press **CMD** to continue. Only Area systems allow the area name to be changed. When All/Perimeter or Home/Sleep/Away is selected as the system type, the Area Number does not display.

INT PERIM

All/Perimeter Programming

When All/Perimeter is selected as the system type, program the Interior and Perimeter areas as needed.

INT BDRM PERIM

Home/Sleep/Away Programming

When Home/Sleep/Away is selected as the system type, program the Interior, Bedroom, and Perimeter areas as needed.

* UNUSED *

Area Name

The area name can be up to 32 alphanumeric characters. To add an area name to the system, press any select key or area and then enter up to 32 characters for the new area name. Press **CMD** to continue. Inactive areas are marked * UNUSED *. Only systems programmed for Area arming have the option available to change the area name.

To mark an active area unused, press any select key or area to delete the old name, then press **CMD**. The programmer automatically programs the name as *UNUSED*. If you have already cleared Area Information during Initialization, all areas are marked * UNUSED *.

Home/Sleep/Away with Guest systems display the area name, but the names cannot be changed. The following are the display names that appear on the keypad:

Area	Display
1	Perimeter
2	Interior
3	Bedrooms

Area	Display
4	Guest1 Perimeter
5	Guest1 Interior
6	Guest1 Bedrooms

Area	Display
7	Guest2 Perimeter
8	Guest2 Interior
9	Guest2 Bedrooms

ACCOUNT NO: 12345

Account Number

Enter the account number to be sent to the receiver for this area. Choose an account number compatible with the Communication Type selected in Communications. The default Account Number is the one previously entered in Communications. This account number is used when sending area messages and events to the central station.

O/C RPTS NO YES

Opening/Closing Reports

This option allows an Opening/Closing report to be sent to the receiver when this area is disarmed or armed.

AUTO ARM **NO** YES

Automatic Arming

Select YES to allow this area to arm automatically according to permanent, temporary, or extended schedules. If no schedules are programmed, the area auto arms every hour. If closing check is selected as YES, the automatic arming function does not take place until the expiration of a ten minute Closing Check delay. If the area has been disarmed outside of any permanent or temporary schedule, the closing check sequence occurs one hour after the area is disarmed.

At arming, bad zones are handled according to the option selected in section Bad Zones. If a closing report is sent, the user number is indicated as SCH on the SCS-1R Receiver. NO disables automatic arming for this area.

For ANSI/SIA CP-01 UL installations, Automatic Arming cannot be used for arming.

BAD ZONES: **BYP**

Bad Zones

At the time of automatic arming, some zones in the area may not be in a normal condition. This option allows you to program the panel response to these bad zones. This option does not display if AUTO ARM is NO.

BYP FORC REF

BYP - All bad zones are bypassed. A report of the bypass is sent to the receiver if Bypass Reports is YES. The report indicates SCH as the user number.

FORC - All bad zones are force armed. Zones force armed in a bad condition are capable of restoring and reporting an alarm if tripped. A forced zone report is transmitted if Bypass Reports is YES. The report indicates SCH as the user number.

REF - The automatic arming is refused and no arming takes place. A No Closing report is sent to the receiver regardless of the Closing Check selection.

AUTO DIS **NO** YES

Automatic Disarming

NO disables automatic disarming by schedule for this area. When YES is selected, the area automatically disarms according to permanent or temporary schedules. If an opening report is sent to the receiver, the user number is indicated as SCH.

BURG BELL OUT: 0

Burglary Bell Output

Enter the output number (0 to 6, 500 to 999, G1 to G20, D01 to D16, or F1 to F20) that is turned on any time a Burglary type zone is placed in alarm. The output is turned off when you disarm any area and no other Burglary type zones are in alarm. The output can also be turned off using the Alarm Silence option in the User Menu or by entering a user code with the authority to silence alarms. The duration of this bell output follows the time entered in the System Options > Bell Cutoff Time option. The Burglary Bell Output entered here is turned on for two seconds each time the system is armed.

ARMED OUTPUT: 0

Armed Output Number

Enter the output to turn on when this area is armed. If an exit delay is used for this area, the Armed Output turns on at the start of the exit delay. The output is turned off when this area is disarmed. The output cannot be turned on from the User Menu Outputs On/Off option.

LATE OUTPUT: 0

Late Output Number

Enter the output to turn on when this area is not armed by its scheduled time and Area Late or Closing Time displays at a keypad and the keypad buzzer is on. The output is turned off when the keypad buzzer is silenced by pressing any key. Default is 0.

LATE/ARM DLY: 60

Late Arm Delay

Enter 4 to 250 minutes to delay before automatic re-arming occurs after the area becomes disarmed outside of schedules. See Closing Check. Default is **60 minutes**.

The Late Arm Delay can be superseded by the Re Arm Delay setting of the User Profile assigned to the user who disarmed the area.

BANK/SAF **NO** YES

Bank Safe & Vault (XR550INT with Network or Encryption Only)

NO disables the Bank Safe & Vault feature for this area. Select **YES** to ensure that schedules set for any area and the time of day cannot be changed while the area is armed.

Program schedules before arming: A Bank Safe & Vault area can only be disarmed during scheduled times. If the area becomes armed before programming a schedule, the panel must be reset before the area can be disarmed from a keypad or the **Bank Safe & Vault** option in **Area Information** must be set to **NO**.

Zones assigned to Bank Safe & Vault areas cannot be bypassed or force armed. Do not assign Bank Safe & Vault area to an Arming zone. Arming zones can disarm Bank Safe & Vault areas outside of a schedule.

COMMON **NO** YES

Common Area

Select **YES** to enable this area to operate as a common area. This area is armed when the last area in the system is armed and is disarmed when the first area in the system is disarmed. You can have multiple common areas in each system. For the common area to work properly, do not assign the common area to any user code.

ARM FIRST **NO** YES

Arm First Area

Select **YES** to enable this area to operate as an Arm First area. This area is automatically armed when any non-Arm First area assigned to the same keypad is armed but does not disarm when other areas become disarmed. Assign areas to keypads using the Display Areas option in Device Setup programming. You can have multiple Arm First areas in a system and divide them among keypads if needed. If an Arm First area has faulted zones that cannot be bypassed, arming stops and the areas are not armed. Correct the problem with the Arm First area and then begin the arming process again. Default value is **NO**.

The Arm First automatic arming only occurs when arming from a keypad. Arming from a zone, schedule, or remotely is not affected and Arm First areas do not automatically arm.

NO ARM DIS ALL

Dual Authority (XR550INT with Network or Encryption Only)

Dual Authority requires two user codes to be entered at a system keypad to disarm and/or arm this area. Dual Authority must be enabled per user in User Profiles in order to use this feature. When a user presents a user code to a keypad requesting to disarm or arm this area, 2ND CODE displays and requires the entry of a different user code with at least the same authority. The second user code must be entered within 30 seconds.

Select ARM to require two user code entries in order to arm this area. Select DIS (disarm) to require two user code entries in order to disarm this area. Selecting the DIS option also enables Dual Authority for Access Control. Select ALL to require two user code entries in order to both arm and disarm this area, or select NO to disable Dual Authority for this area. The default is **NO**.

CARD+PIN **NO** YES

Card Plus Pin (XR550INT with Network or Encryption Only)

Card Plus Pin requires users to present both a credential and enter their 4-6 digit pin number before the desired action for the specific areas will occur. If Card Plus Pin is set to YES in an area and a profile, then the user is required to use card and pin to gain access. All areas are defaulted to **YES**, while all profiles are defaulted to **NO**.

ZONE INFORMATION

ZONE INFORMATION

Zone Information

Zone Information allows you to define the operation of each protection zone used in the system. All protection zones are programmed the same way.

ZONE NO: -

Zone Number

Enter the number of the zone you intend to program. Available zone numbers are shown in the table below.

Panel	Programming Zone Number
Onboard	1-10
Keypad Bus	Programming Zone Number
1	11-14
2	21-24
3	31-34
4	41-44
5	51-54
6	61-64
7	71-74
8	81-84
9	91-94
10	101-104
11	111-114
12	121-124
13	131-134
14	141-144
15	151-154
16	161-164
1100 Series Wireless	Programming Zone Number
1144 Series Key Fob	400-449
LX-Bus	Programming Zone Number
LX-Bus 500	500-599
LX-Bus 600	600-699
LX-Bus 700	700-799
LX-Bus 800	800-899
LX-Bus 900	900-999

Press **CMD** to enter a zone name.

* UNUSED *

Zone Name

Zone names can have up to 32 alphanumeric characters. A name must be given to each zone in the system. The name can display at the keypads during arming and disarming so the user does not have to memorize zone numbers. A zone that is not part of the system must be marked unused.

To add a zone name to the system, press any select key or area and then enter up to 32 characters for the new zone name. Press **CMD** to continue.

To mark a zone unused, delete the old name by pressing any select key or area, then press **CMD**. The programmer automatically programs the name as * UNUSED *. If you have already cleared Zone Information during Initialization, the zones is marked * UNUSED *.

ZONE TYPE: BLANK

Zone Type

The panel contains 12 default zone types for use in configuring the system. These zone types provide the most commonly selected functions for their applications. All zone types except the Arming zone type can be customized by changing the options listed below.

The Zone Type defines the panel response to the zone being opened or shorted. This is called the Alarm Action. There are up to 13 possible alarm action responses depending on the zone type and any restrictions it may have. See the Zone Type chart in the Appendix. When you assign a Zone Type to a zone, automatic alarm actions are made. There are 12 Zone Types to choose from.

To enter a new Zone Type, press any select key or area. The display lists all of the available Zone Types four at a time.

Blank (--), Night (NT), Day (DY), or Exit (EX). Press **CMD** for additional zone types.

Fire (FI), Panic (PN), Emergency (EM), or Supervisory (SV). Press **CMD** for additional zone types.

Auxiliary 1 (A1), Auxiliary 2 (A2), Fire Verify (FV), or Arming (keyswitch, AR). Press **CMD** for additional zone types.

Carbon Monoxide (CO), Instant (IN), Doorbell (DB), or Final Exit (FX). Press **CMD** for additional zone types.

Tamper (TP).

If you select Blank, Night, Day, Exit, Auxiliary 1, Auxiliary 2, Arming, Final Exit, or Tamper as the Zone Type, the zone must be assigned to an active area. If you select Fire, Fire Verify, Panic, Emergency, Supervisory, or CO as the Zone Type, it is a 24-hour zone that is always armed and no area assignment is needed.

AREA NO: -

Area Assignment

Enter the area number where the Night, Day, Exit, Auxiliary 1, Auxiliary 2, or Instant zone is being assigned. For an Area system, area numbers 1-32 can be assigned. For a Home/Sleep/Away with Guest system, area numbers 1-9 can be assigned.

AREA: PERIMETER

In an All/Perimeter or Home/Sleep/Away system, the currently selected area, Perimeter, Interior, Bedroom displays.

INT PERIM

On an All/Perimeter system, select INT to program zones for the interior area and select PERIM to program zones for the perimeter area.

INT BDRM PERIM

On a Home/Sleep/Away system, select INT to program zones for the interior area, select BDRM to program zones for the bedroom area, and select PERIM to program zones for the perimeter area.

NO. EOLS
1 2 3

Number of EOL

Select 1 to enable single EOL operation. This allows Normal/Open/Short conditions. Select 2 to enable dual EOL operation. This allows reporting and voltage thresholds on the zone terminals to allow for a fourth zone state. Select 3 to enable triple EOL operation. This allows the previous operation as well as a fifth anti-masking zone state. Default is **2**. For additional information on anti-masking, refer to the Anti-Masking Feature section in the Appendix.



Note: Triple EOL operation only works with Optex FLX Series Anti-Masking PIRs. All other products use single or dual EOL operation.

FIRE BELL OUT: 0

Fire Bell Output

This output (1 to 6, 500 to 999, F1 to F20, G1 to G20, or D01 to D16) is turned on any time a Fire, Fire Verify, or Supervisory zone is placed in alarm. The output is turned off by any of the following actions:

- When the User Menu Alarm Silence function is performed.
- When a valid user code is entered to silence the bell.
- When the Silence key is pressed on the 630F Remote Fire Command Center.
- Using the Outputs On/Off function in the User Menu.
- The expiration of the Bell Cutoff time.

This output can be connected to a lamp, LED, or buzzer using the DMP Model 716 Output Expansion Module.

ARM/DIS AREAS

Arming Zone Area Assignment

In an Area or Home/Sleep/Away with Guest system, if the zone has been programmed as an Arming Type (AR), enter the areas that the zone controls.

When the zone changes from normal to shorted, the programmed areas toggle between the armed or disarmed condition using the Style programming below. When restored to normal, no action occurs. When the zone is opened from a normal (disarmed) state, a trouble is reported. When opened from a shorted (armed) state, an alarm is reported and the zone is disabled until you disarm the area(s) from either a keypad or Virtual Keypad..

ARM AREAS: PERIM

To visually indicate the armed state of the area(s), you can assign an Armed Output to individual areas and use remote LEDs at the keyswitch. The LED turns on or off to indicate to the user the armed state of the area(s).

PERIM ALL

Perimeter/All - Specify whether the arming zone arms just the Perimeter (PERIM) or the Perimeter and Interior areas (ALL) for All/Perimeter systems. When disarming, all areas are disarmed.

HOME SLEEP AWAY

Home/Sleep/Away - Specify whether the arming zone arms the Perimeter (HOME), the Perimeter and Interior (SLEEP), or all three areas (AWAY). When disarming, all areas are disarmed.

Arming Zone Operation

If any bad zones are present when the Arming zone is shorted, the LED delays lighting for 5 seconds. If during the 5-second delay the Arming zone is shorted again no arming takes place. If 5 seconds expire without the zone shorting again or restoring to normal, the areas arm and bad zones are force armed. To allow bad zones to be force armed, the Any Bypass option must be set to YES. If Any Bypass option is set to NO, arming does not occur. See the Area Information - Any Bypass section. A priority zone cannot be force armed.

STYLE:

Style

This option specifies the style for the arming/disarming operation. The default style is TGL (toggle). Press any select key or area to display the STYLE options. To view more style options press **CMD**.

TGL ARM DIS STEP

TGL (Toggle) - When the zone changes from disarmed to armed, the programmed areas toggle between the armed or disarmed condition. When restored to disarmed, no action occurs. When the zone is opened from a disarmed state, a trouble is reported. When opened from a armed state, an alarm is reported and the zone is disabled until you disarm the area(s) from either a keypad or Virtual Keypad.

ARM - When the zone is armed, the programmed areas are armed. When restored to disarmed, no action occurs. When the zone is opened from a disarmed state, a trouble is reported. When opened from a armed state, an alarm is reported.

DIS (Disarm) - When programmed as an Area system, a short will disarm the programmed areas. When programmed as a ALL/PERIM or HOME/AWAY system, a short will disarm ALL areas. When restored to normal, no action occurs. When the zone is opened from a normal (disarmed) state, a trouble is reported.

STEP - When programmed as an AREA system, the Arming Type areas will arm and beep the keypads once. When programmed as ALL/PERIM or HOME/AWAY, on the first short HOME will arm and beep the keypad once. On the second short, SLEEP will arm and beep the keypads twice. On the third short, AWAY will arm and beep the keypad three times. A normal condition will cause no action. An open condition will disarm the programmed areas and beep the keypads for one second.

MNT

MNT (Maintain) - When the zone is shorted, the programmed areas are armed. When restored to normal, the programmed areas are disarmed and any alarm bells are silenced. When the zone is opened from a normal (disarmed) state, a trouble is reported. If opened from a shorted (armed) state, an alarm is reported and the zone is disabled until you disarm the area(s) from either a keypad or Virtual Keypad.

EXP SN:

Expander Serial Number

If using a zone expansion module, enter the 10 character serial number found on the module. Press **CMD** to move to the next prompt.

Already In Use displays when the serial number is already programmed for another zone. The programmed zone number displays.

NEXT ZN? NO YES

Next Zone

Select YES to terminate zone programming. The display returns to Zone Number, allowing you to enter a new zone number. Select NO to make alterations to the Alarm Action for a zone.

To program zones for wireless operation, select NO at the NEXT ZONE - NO YES option. The WIRELESS NO YES option displays. If the zone you are programming is intended for wireless devices, select YES. Select NO to continue programming non-wireless zones in the 500 to 999 range.

- Zones 400 to 449 can be programmed for 1144 Series Key Fobs
- Zones 500 through 599 can be programmed for DMP 1100 Series Wireless on an XR150INT Series panel
- Zones 500 through 999 can be programmed for DMP 1100 Series Wireless on an XR550INT Series panel

ZONE INFORMATION
WIRELESS? NO YES

Wireless

Select YES to program this zone as a DMP wireless zone. You must program the wireless House Code prior to adding DMP wireless zones to the system.

See House Code programming in System Options. Default is **NO**.

TRANSMITTER
SERIAL#: XXXXXXXX

Serial Number Entry

Enter the eight-digit serial number found on the DMP wireless device. Already In Use displays when the serial number is already programmed for another zone. The programmed zone number displays.

TRANSMITTER
CONTACT: XXXXXXXX

Contact

Transmitter Contact displays if the serial number entered is for an 1101, 1103, or 1106 Universal Transmitter or 1114INT Wireless Four-Zone Expander. Press any select key or area to select the contact.

TRANSMTR CONTACT
INT EXT

Select INT to use the internal reed switch contacts. Select EXT to connect an external device to the 1101, 1103, or 1106 terminal block. Default is **INT**.

By allowing both of the transmitter contacts (INT and EXT) to be used at the same time, two zones may be programmed from one transmitter. When using both contacts, you must use consecutive zone numbers. The same serial number is used for both zones.

TRANSMTR CONTACT
1 2 3 4

Contact Selection option displays when programming the 1114 Wireless Four-Zone Expander with four input contacts. The same serial number is used for all four contacts. Select the contact number to program. When using the contacts, you must use consecutive zone numbers. Default is **Contact 1**.

A tamper on the 1114 is transmitted as the zone number assigned to Contact 1.

ALREADY IN USE
ZONE NUMBER: XXX

Already In Use message displays when the Contact is already programmed for another zone. The programmed zone number displays.

ZONE INFORMATION
NORM OPN NO YES

When EXT is selected as the Contact type, external devices connected to the 1101, 1103 or 1106 terminal block, select NO to use normally closed (N/C) contacts. Select YES to use normally open (N/O) contacts. Default is **NO**.

TRANSMITTER
SUPRVSN TIME: 240

Supervision Time

Press any select key or area to select the supervision time required for the wireless zone. Press CMD to accept the default time. Default is **240 minutes**.

Refer to the Wireless Check-in and Supervision Time Definitions section of the Appendix for supervision information.

SELECT MINUTES:
0 3 60 240

Press the select key or area under the required number of minutes. The transmitter must check in at least once during this time or a missing condition is indicated for that zone. 1100 Series transmitters automatically checkin based on the supervision time selected for the wireless zone, no additional programming is needed. If two zones share the same transmitter, the last programmed supervision time is stored as the supervision time for both zones. Zero (0) indicates an unsupervised transmitter.

The 3 minute supervision time is only available for zone types of Fire (FI), Fire Verify (FV), Supervisory (SV), and Carbon Monoxide (CO).

When the panel is reset or a receiver is installed or powered down and powered up, the supervision timer restarts for all wireless zones.

LED OPERATION
NO YES

LED Operation

Select YES to turn on an 1142 Hold-up transmitter LED during Panic or Emergency operation. Select NO to turn the LED off during Panic or Emergency operation. The LED always operates when the transmitter case is open and the tamper is faulted. Default is **YES**.

DISARM DISABLE
NO YES

Disarm/Disable

Select YES to disable the Zone Tripped message from 1101/1102/1106 Universal Transmitters (Version 108 or higher software), 1103 Universal Transmitters (Version 107 or higher software) or 1122/1126/1127 PIRs during the disarmed period. When disarmed, the transmitter or PIR only sends Supervision, Tamper, and Low Battery messages to extend transmitter battery life. For transmitters, a Zone Tripped message is sent if the zone remains tripped for 20 seconds. Select NO to always send Zone Tripped messages in addition to Supervision, Tamper, and Low Battery. Default is **YES**.

WIRELESS PIR
PULSE COUNT: **4**

PIR Pulse Count

Select the number of infrared pulses (2 or 4) the 1122, 1126, or 1127 PIR should sense before sending a short message to the 1100XINT Series Receiver. Default is **4**.

WIRELESS PIR
SENSITIVITY: **LOW**

PIR Sensitivity

Select the sensitivity setting for an 1122, 1126, or 1127 PIR. Selecting LOW sets the PIR to operate at 75% sensitivity for installations in harsh environments. Selecting HIGH sets the PIR to maximum sensitivity. Default is **LOW**.

WIRELESS PIR PET
IMMUNITY: **NO** YES

Pet Immunity

This option displays for the 1122 Wireless PIR Motion Detector. Select whether or not to enable pet immunity. Selecting YES allows pet immunity for animals up to 55 pounds. Default is **NO**.

NEXT ZONE NO YES

Next Zone

Select YES to return to the ZONE NO: - option to program a new zone. Select NO to display the Alarm Action option. Press **CMD** to continue.

ALARM ACTION

Alarm Action

This option allows you to change any Zone Type standard definitions. When the Zone Type is specified, the Alarm Action for that zone is stored in memory.

DISARMED OPEN

Disarmed Open

Defines the action taken by the panel when the zone is opened while the area is disarmed. There are three actions to define: Report to transmit, Relay Output to activate, and Relay Output action.

You must also make these selections for the Disarmed Short, Armed Open, and Armed Short zone conditions. Press **CMD** to continue.

MSG: TROUBLE
A T L -

Report to Transmit

Press any select key or area to display the following report options: A, T, L, S, C, and - (dash).

ALARM - Select Alarm (A) to send an alarm report to the receiver and activate the bell output according to zone type. The zone name appears in the panel alarmed zones and status lists.

TROUBLE - Select Trouble (T) to send a trouble report to the receiver. The zone name appears in the panel alarmed zones and status lists.

UL requirements prevent the Alarm (A) and Trouble (T) action for Fire (FI), and Fire Verify (FV) zone types from being changed.

LOCAL - When you select Local (L), an alarm report is NOT sent to the receiver. The bell output activates and the zone name appears in the panel alarmed zones and status lists.

- (Dash) - When you select a - (dash), reports are NOT sent to the receiver. The bell output does not activate and there is no display in the panel alarmed zones or status list. Only the relay output selected in the next section operates.

D S C

DOOR PROPPED - Selecting D allows the ENTRY DLY 4 in the System Option section to begin to count without displaying on keypad. If the time expires and the zone has not returned to normal, the keypad trouble buzzer starts and CLOSE THE DOOR appears on the keypads programmed into the PREWARN ADDRESS section. The time programmed into ENTRY DLY 4 begins to count down again internally. If the time expires a second time, and the zone has not returned to normal, the output (if programmed in zone information) triggers and a fault report is sent to the receiver and the zone name - OPEN message displays on the keypads until a code is entered.

SENSOR RESET - When the zone state changes, the bell is silenced, a Sensor Reset is performed and a Alarm Bell Silenced Message (S34) is sent.

CANCEL AMBUSH - Select C for the zone to cancel the Early Morning Ambush timer and stop an Ambush message from being sent to the receiver. Faulting the zone takes the place of a second user code being entered at the keypad and is only available for non-fire type zones. Area assignment for the zone does not affect this option. See Early Morning Ambush in Area Information programming.

OUTPUT NO: 0

Output Number

You can specify any of the Relay Outputs on the panel to be activated by a zone condition (1 to 6, 500 to 999 if Model 716 used, D01 to D16, G1 to G20). The output can be activated regardless of the report to transmit or whether or not the zone is programmed as local. An output activated by an armed zone is turned off when the zone area is disarmed by a user. To enter an output number, press any select key or area followed by the output number. Press **CMD**.

OUTPUT: NONE

Output Action

Output Action allows you to assign an output action to the relay: Steady, Pulse, Momentary, or Follow.

STD PLS MOM FOLW

STEADY - The output is turned on and remains on until the area is disarmed, an output cutoff time expires, or the output is reset from the keypad menu.

PULSE - The output alternates one second on and one second off.

MOMENTARY - The output is turned on only once for one second.

FOLLOW - The output is turned on and remains on while the zone is in an off normal, or bad condition. When the zone restores, the output is turned off.

For Day Zone types, when an output is turned on, a user code with silence authority can turn the output off.

Disarmed Short, Armed Open, and Armed Short

After you make the three selections in the sections above, the display prompts for the same three selections for **Disarmed Short**, **Armed Open**, and **Armed Short** conditions. If the zone is a 24-hour type, only the Armed Open and Armed Short conditions will display. When you have programmed all of the zone conditions, the Swinger Bypass selection then displays.

SWGR BYP NO YES

Swinger Bypass

Selecting YES allows the zone to be swinger bypassed by the panel according to the specifications programmed in Swinger Bypass Trips and Reset Swinger Bypass. The Bypass condition displays in the keypad Status List. Selecting NO disables swinger bypassing for this zone.

If within one hour, a zone trips the total number of times as specified in Swinger Bypass Trips, the panel bypasses it until the following conditions occur;

- The area in which the zone is assigned is disarmed
- The zone is manually reset through the Bypass Zones? keypad User Menu function
- The zone remains normal for one hour and the Reset Swinger Bypass is YES.

If the zone trips fewer than the specified times within one hour, the bypass trip counter returns to 0 (zero) and the process must be repeated.

A report of the swinger bypass is sent to the receiver if Bypass Reports is YES.

PREWARN KEYPADS:

Prewarn Keypad Addresses

At the entry delay start, all keypad addresses selected here display ENTER CODE:-. If you want the prewarn to sound at all 16 addresses, leave the default setting.

To delete an address, press the matching number on the keypad. To disable prewarning at all keypads, press any select key or area to clear the addresses shown. Press **CMD** when the address selection is complete.

The prewarn tone stops at the keypad where the first user code digit is entered. If no keys are pressed for five seconds or an invalid user code is entered, the prewarn tone resumes at that keypad.

CHIME: **DOORBELL**

Chime

Option is only shown for Night, Exit, and Instant zones. Select either NONE, DB (doorbell), ASC (ascend), or DSC (descend) to assign that tone to a zone. Default is **DOORBELL** for Exit zones and NONE for Night zones.

ENTRY DELAY: 1

Entry Delay

Select the entry timer for this zone. Entry timers 1 to 4 are programmed in System Options.

RETARD **NO** YES

Zone Retard Delay

When you select YES, the zone operates with the zone retard delay. The retard functions only in zone short conditions. The zone must remain shorted for the full length of the retard delay before the panel recognizes its condition. If you select NO, the zone operates without a retard delay.

The zone must remain shorted for the full length of the retard delay before the panel recognizes its condition. If you select NO, the zone operates without a retard delay.

PRESGNL KEYPADS:

Presignal Keypad Addresses

You can enable any combination of keypad addresses to sound a presignal tone during the time a zone is in retard delay. The presignal tone silences when the zone restores or the retard delay expires. To enable a presignal address, press any select key or area followed by the number of the keypad address. You can enable the presignal for all 16 keypad addresses. To disable a presignal address press the matching number digit again. Press **CMD** when the address selection is complete. The Presignal option is only displayed when Retard is selected as YES.

FAST RSP **NO** YES

Fast Response

Select YES to provide a zone response time of 167ms. Select NO to provide a normal zone response time of 500ms. Zones 500 to 999 have a fixed response time and do not display this option.

CRS ZONE **NO** YES

Cross Zone

Select YES to enable cross zoning for this zone. Cross zoning requires one or more armed zones to fault within a programmed time before an alarm report is sent to the receiver.

When the first cross zoned zone trips, the cross zone time specified in System Options begins to count down. When a second cross zoned zone trips or the first zone trips a second time before the end of the count down, the bell action assigned to the zone activates and the panel sends an alarm report for both zones.

If no other cross zoned zone trips before the cross zone time expires, the panel sends only a zone fault report to the receiver.

Cross zoning is not compatible with all zone types: You can not enable cross zoning for Fire verify zones or for any Fire zones that have Retard Delay enabled.

PRIORITY **NO** YES

Priority

Select YES to provide additional protection for the premises by requiring this zone to be in a normal condition before its assigned area can be armed.

FIRE PANEL SLAVE
INPUT: **NO** YES

Fire Panel Slave Input

This option is available on Fire Zones (FI) only and allows a fire zone the ability to provide slave communication operation for a separate fire alarm control panel. If YES, this zone will transmit a restoral immediately when restored by the fire panel being monitored. A sensor reset is not required to generate the restoral message.

If NO, this zone will operate as a standard fire type zone and a sensor reset is required before the zone will return to normal. Default is **NO**.

FOLLOW AREA: **0**

Area Follower

Allows Night, Day, Aux 1, or Aux 2 burglary zones to be delayed by following any exit or entry delay that is currently running in the area that is specified. Default is **0**.

ZONE REAL TIME
STATUS **NO** YES

Zone Real-Time Status

Selecting YES allows Real-Time Status reports, such as Door Open or Closed with zone number, to be sent using PC Log reporting. Selecting NO disables Real-Time Status for this zone. Default is **NO**.

TRAFFIC COUNT
NO YES

Traffic Count

Traffic Count is only displayed for NT, EX, and IN type zones. Select YES to provide reporting to the receiver of the number of zone trips while in a disarmed state. The number of trips will be included with the area closing message and reported to the central station automation system. Traffic Count data for the 10 lowest numbered zones with Traffic Count set to YES is also sent to the Virtual Keypad™ App if enabled at dealer.securecomwireless.com. Default is **NO**.

ZONE AUDIT DAYS:

Zone Audit Days

Enter the number of days (0 to 365) allowed to elapse without the zone being tripped before a fault message is sent. The message is sent to the receiver(s) programmed to receive Supervisory/Trouble Reports at 10:00 am following the expiration of the timer. Each time the zone is tripped, the Zone Audit Days timer restarts and begins to countdown the number of days programmed. After the countdown expires, a fault message is sent and the Zone Audit Days timer restarts and begins to countdown the number of days programmed. Available for all zone types except fire and fire verify. Enter 0 (zero) to disable this function. Default is **0**.

REPORT WITH ACCT
NO. FOR AREA: **0**

Report with Account Number for Area

This option is only available for 24-hour zone types (Fire, Fire Verify, Panic, Emergency, or Supervisory).

Enter the area number (1-32) to assign as a 24-hour zone type. This option sends the account number of the programmed area with messages. If the entered area number does not exist or is not valid, the account number programmed in the Communication section is sent. Select 0 (zero) to have the report sent with the account number programmed in Communication. Default is **0**.

LOCKDOWN:
NO YES

Lockdown

This option is available when programming a Panic type zone. Selecting YES triggers a lockdown when a panic zone is tripped. Default is **NO**.

1144INT SERIES KEY FOBS

For an 1144INT Series Key Fob set the House Code from 1 to 50. See House Code programming in System Options. Only zones 400 to 449 can be programmed as 1144 Series Key Fob zones. Refer to the 1100INT Series Key Fob Programming Sheet ([LT-0706INT](#)) supplied with the 1100XINT Series Wireless Receiver and the 1144INT Series Key Fob Install Guide ([LT-1449INT](#)) as needed.

To operate arming and disarming properly, the Key Fob should be assigned to a User Number with appropriate area assignments, however, the User Number does not have to exist at the time the Key Fob is programmed. The Key Fob User Number can be added later by the User.

The following programming continues from the Zone Number section when zone 400-449 is selected.

KEY FOB USER
NUMBER: XXXX

Key Fob User Number

Enter the User Number (1-9999) used to identify the key fob user and their arming and disarming authority. Default is **blank**.

USER XXXX
NOT IN USE

User Not in Use displays when the User Number entered does not exist in User Code programming. The key fob can be added, but the user must eventually be added to cause the key fob to operate.

TRANSMITTER
SERIAL#: XXXXXXXX

Key Fob Serial Number

Enter the eight-digit serial number found on the wireless device.

TRANSMITTER
SUPRVSN TIME: 0

Key Fob Supervision Time

Press any select key or area to select the supervision time required for the key fob zone. Press **CMD** to accept the default time. Default is **0** for key fobs.

SELECT MINUTES:
0 60 240

Press the select key or area under the required number of minutes. The key fob must check in at least once during this time or a missing condition is indicated for that zone. 1144 Series key fobs automatically checkin based on the supervision time selected for the wireless zone, no additional programming is needed. Zero (0) indicates an unsupervised transmitter.

When the panel is reset or a receiver is installed or powered down and powered up, the supervision timer restarts for all wireless zones.

NO. OF KEY FOB
BUTTONS: X

Number of Key Fob Buttons

Enter the number of buttons (1, 2, or 4) on the key fob being programmed.

If the key fob is a one-button model, programming continues at the Button Action section. Default button assignment for one-button key fobs is a Panic Alarm (PN) with no output assigned.

BUTTON:
TOP BTM LFT RGT

Key Fob Button Selection (Four Buttons)

If the key fob being programmed is a four-button model, press the select key or area under the key fob button to program. The following list identifies the default button assignments:

TOP	Arming with no areas assigned
BTM	Disarming with no areas assigned
LFT	Panic Alarm (PN) with no output assigned
RGT	Arming with Area 1 assigned

BUTTON:
TOP BTM

Key Fob Button Selection (Two Buttons)

If the key fob being programmed is a two-button model, press the select key or area under the key fob button to program. The following list identifies the default button assignments:

TOP	Arming with no areas assigned
BTM	Disarming with no areas assigned

BUTTON ACTION
YYY: XXXXXXXX

Button Action

Specify the Button Action for an individual key fob button. The default action for the button selected is displayed. Press any select key or area to display the Button Action options. To view more options press **CMD**.

yyy = the name of the button being programmed (TOP, BTM, LFT, RGT).

BUTTON ACTION
ARM DIS TGL STA

ARM (Arm) - Arms selected areas and force arms bad zones.

DIS (Disarm) - Disarms selected areas.

TGL (Toggle Arm) - Toggles arm/disarm for selected areas and force arms bad zones when arming.

STA (Status) - Causes the key fob LED to indicate the arm/disarm status of the system.

BUTTON ACTION
PN PN2 EM EM2

PN (Panic) - Triggers a Panic zone type alarm with no restoral.

PN2 (Panic 2) - Triggers a Panic zone type alarm with no restoral when pressed simultaneously with any other Panic 2 button. No action occurs when pressed alone.

EM (Emerg) - Triggers an Emergency zone type alarm with no restoral.

EM2 (Emerg 2) - Triggers an Emergency zone type alarm with no restoral when pressed simultaneously with any other Emergency 2 button. No action occurs when pressed alone.

BUTTON ACTION
OUT RST UN

OUT (Output) - Causes an output to turn on steady, pulse, momentary, toggle, or off.

RST (Sensor Reset) - Causes the panel to perform a standard Sensor Reset.

UN (Unused) - The button is not used and performs no action.

BUTTON
PRESS TIME: XXXXX

Button Press Time

Button Press Time specifies the amount of time (SHORT or LONG) the user must press the button before the key fob sends a message to the wireless receiver. The default press time displays. Press any select key or area to set the Button Press Time for Arm, Disarm, Toggle, Status, Output, and Sensor Reset.

PRESS TIME:
SHORT LONG

SHORT - Press the button for one-half (1/2) second to send the message to the wireless receiver.

LONG - Press the button for two (2) seconds to send the message to the wireless receiver.

ARM/DIS AREAS

Arm/Disarm Area Selection

In an Area system or Home/Sleep/Away with Guest system, this specifies the areas to be armed/disarmed by the Key Fob button being programmed. To select an area between 1 and 32, enter the area number using the keypad digit keys. Default is no areas enabled.

In order to arm or disarm selected areas, the Profile assigned to the User Number needs to have the same area numbers selected. Any area may be selected at Arm/Disarm Areas but only matching area numbers are armed or disarmed when the specific button is pressed.

When more areas are selected at Arm/Disarm Areas than are authorized in the User Profile, in the future the user can be given access authority to additional areas through the User Profile without requiring additional panel programming to select Arm/Disarm Areas.

ARM AREAS: PERIM

In an All/Perimeter or Home/Sleep/Away system, this specifies the area to be armed by the Key Fob button being programmed. For All/Perimeter systems, choose PERIM or ALL, for Home/Sleep/Away or Home/Away systems, choose HOME, SLEEP, or AWAY.

Areas 3 and higher in an All/Perimeter system, and areas 4 and higher in a Home/Sleep/Away system are not available for use.

After selecting the areas, for one-button key fobs the Zone No.: option displays. For two-button or four-button key fobs, the Key Fob Button Selection option displays to program additional buttons.

OUTPUT NO: XXX

Output Number

You can specify any relay Output/Favorite to operate when OUT (Output), PN (Panic), PN2 (Panic 2), EM (Emergency), or EM2 (Emergency 2) is selected for a key fob Button Action and the button is pressed. Valid range is 1 to 6, 500 to 999, D01 to D16, F1 to F20, or G1 to G20. For an output turned on by a PN, PN2, EM, or EM2 button action, the output turns off when any area is disarmed.

To enter an output/Favorite number, press any select key or area followed by the output/Favorite number. Press **CMD**.

OUTPUT ACTION:
yyy: XXXXXXXX

Output Action

Output Action allows you to define the output action (STD, PLS, MOM, TGL, OFF) for the selected output number. The default is Steady.

yyy = the name of the button being programmed (TOP, BTM, LFT, RGT).

xxxxxxx = the currently defined output action.

STD (Steady) - The output is turned on and remains on.

PLS (Pulse) - The output alternates one second on and one second off.

Pulse is not available for key fob button output programmed D1 to D16 or G1 to G20.

MOM (Momentary) - The output is turned on only once for one second.

TGL (Toggle) - The output alternates between the on state and off state. Each button press toggles the output state.

OFF (Off) - The output is turned off. If programmed, the output was turned on by some other means such as another button press, a zone action, or a schedule.

OUTPUT ACTION?
STD PLS MOM TGL

OUTPUT ACTION?
OFF

STOP

STOP

Stop

Save Programming

When any panel programming is changed, the stop routine must be run and “Saving Program” must display on the keypad in order to save the programming changes.

At the STOP option, pressing any select key or area allows you to exit the Programmer function of the panel. When selected, the panel performs an internal reset and exits the programmer.

The STOP routine causes the following conditions to occur:

- All 1100 Series DMP Wireless transmitters are reset to NORMAL
- The panel Status List is cleared and all programming changes are saved

The STOP option does not disarm the system. Any new areas or zones that were added during programming are not armed until the system is disarmed and armed again.

Missing LX-Bus™ Modules Displayed

The Programmer includes a feature following the STOP routine that displays the name of any programmed LX-Bus module not currently connected to the panel.

Power Up

When the panel is powered up after an AC power failure, any zone transitions are not recognized for 60 seconds. Normal zone processing resumes at the end of the 60 seconds.

SET LOCKOUT CODE

SET LOCKOUT CODE

Set Lockout Code

Pressing **CMD** at the STOP option displays SET LOCKOUT CODE. This allows you to program a code that is then required to gain access to the panel internal Programmer through the keypad. You can change this code at any time to any combination of numbers from three to five digits long. You do not need to enter leading zeros when using the lockout code. Initializing the panel does not clear a Lockout Code. Lockout Codes can be changed through Dealer Admin or Virtual Keypad.

Once you have changed the code, it is important to write it down somewhere and store it in a safe place. Lost Lockout Codes require the panel to be sent back to DMP for repair. You may cancel a Lockout Code by entering 00000 at the Set Lockout Code command.

Lockout Code restriction

Do not set a Lockout Code higher than 65535.

FEATURE UPGRADE

FEATURE UPGRADE

Feature Upgrade

In the Programming Menu, pressing **CMD** at the SET LOCKOUT CODE option displays FEATURE UPGRADE. This allows you to enable additional features in the panel. Press any select key or area to display the first available feature. ENABLED or DISABLED displays indicating whether this feature is currently used in this panel. Press **CMD** to display additional feature(s).

ENTER KEY

-

Enter the factory-supplied feature key for the specific panel and press **CMD**. The feature specific to the key displays as ENABLED.

If the feature key entered is not accepted, the ENTER KEY option displays again. Re-enter the feature key and press **CMD**.

ENCRYPTION
DISABLED

Encryption

Enable this feature to provide 128-bit or 256-bit AES data encryption. This feature upgrade can only be enabled on an XR550INT panel with network. To verify encryption installation, access System Status in the User Menu to verify the encryption status (OFF, ON). If the status displays OFF, a Passphrase has not been entered in Network Options and data transmissions are not encrypted. See Network Options to set up a Passphrase.

ALL NO YES OPTIN
DISABLED

All No Yes Option

This feature offers the ability to disable the ALL NO YES option at arming or disarming. When this feature is enabled, the ALL NO YES option does not display at any system keypad during arming or disarming. Each area assigned to the user profile is chosen to be armed or disarmed independently.

SVC USER AUTH
DISABLED

Service User Authentication

This feature offers the ability to authenticate service personnel before allowing access to panel programming or performing any user operations. When this feature is enabled and a valid Service User code is entered for system operation or 6653 is entered for programming, the Service Code entry option displays.

When the service person enters the Service Code, the panel authenticates the code with the Service Code preprogrammed in the SCS-1R receiver, and access to panel programming or the User Menu is granted. The Service Code can be used for system operation for 30 minutes before authenticating again. If the code entered is not validated, access to programming or the User Menu using the Service User code is denied. The Service User code is user number zero (0) and can only be created in the panel remotely.

32 DOOR ADD ON A
DISABLED

32 Door Add On A/ 32 Door Add On B

This feature upgrade is only compatible with XR550INT Series panels operating with Version 111 firmware or higher. Enable this feature to increase the door capacity for a maximum of 64 or 96 doors by applying purchased feature keys. XR150INT Series control panels are incompatible with this feature upgrade.

32 Door Add On A adds 32 more doors available on the AX-Bus for a total of 64 doors.

32 Door Add On B adds another 32 doors to the AX-Bus for the maximum of 96 doors.

32 DOOR ADD ON B
DISABLED

Purchasing Feature Upgrades

If you would like to purchase a feature upgrade, the authorized purchasing agent for your company may contact DMP Customer Service in writing via e-mail (CustomerService@DMP.com) or call (866) 266-2826 from 8 AM to 5 PM CST. Include the upgrade feature(s) to enable and the panel serial number(s) on the request. A separate feature key is issued for each panel. The feature key only enables the requested feature on the specified panel. The panel serial number can be located in several different ways:

- Printed on a label located on the right side of the PCB.
- Using Dealer Admin
- Using panel diagnostics. See the Appendix.

EN 50131 GRADE

EN 50131 GRADE

EN 50131 Grade

This option can be enabled for higher security Grade 3 Operation. Selecting 3 enables Grade 3 operation. Selecting 0 enables standard DMP operation. Default is GRADE 0.

GRADE	0	
GRADE	0	3

The following operations are provided.

Keypads

Blank Display Screen

When the keypad is not being used, the display will time out to a blank screen in 60 seconds. In addition, the Power and Armed LEDs are turned off.

Asterisk and Attention Display

Thinline™ Keypads:

When the display is blank and there are keypad messages in the Status List an asterisk (*) will blink in the bottom right corner of the display screen. Press a top row select key and enter a user code to display Status List. The asterisk will not display if any areas are armed.

Graphic Touchscreen Keypads:

When the display is blank and the system has placed keypad messages in the Attention List, the keypad flashes ATTENTION to alert you to tap the screen and enter your user code. The Attention List will not display if any areas are armed.

TRY AGAIN or INVALID CODE

If an invalid user code is entered 10 consecutive times, the keypad will be disabled for 90 seconds. INVALID CODE displays and an alert is sent to the Central Station.

User Menu

Service User? NO YES

After navigating past REQUEST SERVICE in the User Menu, SERVICE USER? NO YES is displayed to determine the authority level of the service user to access PROG, DIAG and User Menu.

When Yes is selected the Service User can add, edit and delete users. Service User can enter panel programming. When EN50131 GRADE option is set to 3, any code assigned profile 99 operates as a Level 3 user.

Only a Level 3 (Service User or user code with profile 99) user can arm the system if any of the following conditions exist:

- Panel Tamper
- Zone or Wireless Device Tamper
- Bell Circuit Trouble
- Transmitter Missing
- Device Missing
- Communication path trouble

If any of those conditions exists, any other user that attempts to Arm or Disarm the system will prompt Invalid Level to display on the keypad.

Closing Code

If AC POWER or BATTERY troubles exist in the Status List, a code is required to arm, regardless of the Closing Code setting.

Default User Number

The Default User Number is changed to 0 with a user code of 99.

LED Indication

If there is more than 1 item other than time, weather, or ready status in the Status List, the Status LED blinks at 1 sec off, 1 sec on.

System Restart Trouble Message

When a processor restart is logged in the event log, the Status List displays: SYS_RESET_-TRBL_. This display does not clear until the service user performs a sensor reset.

APPENDIX

FALSE ALARM REDUCTION

System Recently Armed Report

The System Recently Armed Report (S78) is sent to the receiver when a burglary zone goes into alarm within two minutes of the system being armed.

ANTI-MASKING FEATURE

The triple EOL configuration is only designed to work with Optex FLX Series Anti-Masking PIRs. Although this device is normally closed, it should be programmed in the following ways:

Disarmed/Armed Short - The alarm contact is faulted on the PIR, and the normally closed contact is open.

Disarmed/Armed Open - The trouble contact is faulted on the PIR, and the normally closed contact is open.

Tamper/Anti-Masking Detection - Both alarm and trouble contacts are faulted, and both contacts are open.

Tamper -The zone wires connected to the PIR are cut or shorted.

DIAGNOSTICS FUNCTION

The panel contains a Diagnostics function that allows you to test the communication integrity of the LX-Bus™, identify individual zones, and also display the present electrical state of any zone. The Diagnostics function also allows you to test the integrity of the cellular communication, and cellular signal.. To use Diagnostics, reset the panel, enter the Diagnostics code 2313 (DIAG), and press **CMD**.

Test LX-Bus

This function allows you to test the ability of the panel to communicate with zone and output expander modules connected to the LX-Bus circuits.

To continue, press any select key or area. The keypad displays LX-BUS:. Using the digit keys, enter the LX-Bus number, 1 to 5, to test that LX-Bus circuit. The keypad now displays ADDRESS: - . Enter a 2-digit LX-Bus device address and press **CMD**. When testing LX-Bus devices, enter only the addresses to which the modules have been set. Press any select key or area when TEST LX-BUS displays.

A device address is not the same as a zone number. If you are testing 714 or 715 Zone Expander Modules, which each contain four zones, the device address is the first zone number. When the panel polls a 714 on the LX-Bus, it recognizes it as a four zone device and does not poll the remaining three zones. The 714 module internally polls the remaining zones and transmits any status changes to the panel. This greatly reduces the amount of time it takes the panel to poll all LX-Bus devices.

The keypad next displays TESTING . . . STOP during the device testing. At any time, you can select STOP to end polling. The panel records the number of no responses from the device. If all polls are received back by the panel correctly, the keypad displays 00000/65535 FAIL.

If one or more polling attempts fail, the keypad displays * * * */65535 FAIL with the * representing the number of failed polling attempts. A display of 65535/65535 FAIL indicates a problem with the interface card or its LX-Bus wiring such as a bad or broken wire, harness not properly connected, or excessive noise or distance. It can also mean that a zone number was entered that did not match a device address. Press the Back Arrow key to enter a new device address or press **CMD** to exit the TEST LX-BUS.

Zone Finder

The second Diagnostic function is the Zone Finder. Press **CMD** to display ZONE FINDER. This function allows you to identify individual zones on devices connected to the LX-Bus of an interface card, the panel, or any zones on the keypad data bus. To use ZONE FINDER, press any select key or area. The display changes to FAULT ZONE. The next zone on the system that changes from a normal to an open or shorted state is displayed as ZONE NO: * * *. To continue, press the Back Arrow key.

Zone State

Press **CMD** to display the third Diagnostic function: ZONE STATE. This function allows you to enter any zone number and check its current electrical state (Normal, Open, or Shorted). Press any select key or area. The display changes to ZONE NUMBER: _ . Enter in the zone number you want to check and press **CMD**. The panel displays the current state of the zone as NRML (normal), OPEN, or SHORT.

LX-Bus Status

The fourth Diagnostic function is the LX-BUS STATUS. This function allows the panel to poll all devices connected to the LX-Bus of an interface card and check for any Overlapped, Missing, or Extra addresses. Below is a description of each status item:

Overlap - An overlap occurs when one device address is the same as any of the last three zones on another 714 or 715. The overlap feature cannot determine when two devices have the same address.

Missing - A missing occurs when a zone between 500 and 999 has been programmed in ZONE INFORMATION and no device with that zone address has been installed on the LX-Bus. To correct the problem, check your zone programming and zone expansion module addressing.

Extra - A device is installed on the LX-Bus but none of its zones are programmed into the system.

MAC Address

Short for Media Access Control address. This hardware address uniquely identifies each network node. Not to be confused with an IP address, which is assignable. In the Diagnostics function, the MAC address is the panel on-board network hardware address. Press any select key or area to display the panel MAC address. Press **CMD** to view the next option.

Serial Number

This number is the network communicator serial number. Reference this number for communicator date-of-manufacture, hardware version, etc. Press any select key or area to display the Serial Number. Press **CMD** to view the next option.

Loader Version

This display is for factory use only. Press any select key or area to display the factory Loader Version. Press **CMD** to view the next option.

Current Flash

This option displays Flash 1 or Flash 2 indicating which physical flash chip the panel is currently using. Press select key or area to display the current flash information. Press **CMD** to view the next option.


Communication Status

This option tests the individual components of cellular or network communication. The displayed results are shown below.

Cellular Results:

Successful Display	Failure Display
MODEM OPERATING	NO MODEM FOUND
IDENTIFIED	NO SIM CARD
TOWER DETECTED	NO TOWER
REGISTERED	NOT REGISTERED

SIGNAL: 
CONTINUE? NO YES

This displays the cellular signal strength of the nearest tower for the SIM card carrier. The s represent the signal strength 0-7. Select YES to continue through the remaining component tests. Select NO to stop testing and return to the COMM STATUS option.


Successful Display	Failure Display
CONNECTED	CONNECT ERROR
	NOT ACTIVATED
COMM PATH GOOD	NO ACK RECEIVED

Network Results:

Successful Display	Failure Display
LINK OK	LINK ERROR
DHCP OK	DHCP ERROR
GATEWAY FOUND	NO GATEWAY
DEST FOUND	NO DESTINATION
COMM PATH GOOD	NOT CONNECTED NO ACK RECEIVED


Cellular Signal Strength (CELL SIGNAL)

-XX dBm
SIGNAL: 

This option provides a way to test the cellular signal strength of the nearest tower for the SIM card carrier. Press any select key or area to display cell signal strength. The X's represent the numerical value of the cell signal strength in -dBm. The s represent the signal strength 0-7.

Wi-Fi Signal Strength (Wi-Fi SIGNAL)

SSID: HOMENET123


This option tests the signal strength of the selected SSID. Press any select key or area to display Wi-Fi signal strength. The s represent the signal strength 0-7.

Wi-Fi Signal Strength	
Number of Bars	Indication
7	Good Signal (Excellent for consistent operation)
6	
5	
4	Average Signal (Expect consistent operation)
3	
2	
1	Weak Signal (Will not operate reliably. Relocate Wi-Fi equipment or add a Wi-Fi extender for better reception.)
0	No Signal

PC Programming

This allows the user to Remote Program the panel through Dealer Admin, or by using a 399 cable attached to LX500. When the select key or area is pressed, the panel displays PROGRAMMING... at the keypad for the duration of the Remote Session. Once the session has ended, the keypad displays RECONNECT LX BUS.

When using the 399 cable to program the panel, the connection type should be "Direct" and the baud rate set to 38400. This connection may be used for all Remote Programming, including Remote Update.

Z-Wave Information

This option allows the installer to view the hardware and software level of the 738Z that is connected to the system.

Test Z-Wave Option

This feature allows the installer to test panel communication with Z-Wave devices. A successful test indicates a response from a device. Press any select key or area to view the Z-Wave Device List.

Press **CMD** to advance through each Z-Wave device and press any select key or area to begin the test on the device displayed.

The name of the device displays above the device number. The current number of successful communications followed by the total number of attempts displays to the right of the device number. The test stops after 99 attempts.

Press **CMD** to view the final number of successful communications.

Exiting the Diagnostics program

Press **CMD** until **STOP** displays. Press any select key or area. The keypad returns to the Status List display.

KEYPAD DISPLAYS

When the PICKUP option is used, the keypad displays LINE SEIZED. This indicates that the panel has seized the line and is executing its program. If the line cannot be accessed, or if the PICKUP option is used before all connect attempts are made, the keypad displays SYSTEM BUSY.

USING THE WALK TEST

The panel provides a walk test feature that allows a single technician to test the protection devices connected to zones on the system. Conduct the Walk Test within 30 minutes of resetting the panel. The Walk Test automatically ends if no zones are tripped for 20 minutes. TEST IN PROGRESS displays at all keypads programmed with the same Display Areas features. When five minutes remain, TEST END WARNING displays. The Walk Test only tests zones assigned to the areas programmed into the keypad in Display Areas. If any areas are armed the Walk Test does not start and SYSTEM ARMED displays.

If the Panic Supervision option is enabled in SYSTEM OPTIONS, the panic button on any programmed key fob can be tested during the Walk Test. When the panic button is pressed a verification message is sent by the receiver.

WALK TEST

Walk Test

To conduct the Walk Test, reset the control panel by momentarily placing a jumper on RESET. From the keypad, enter the code 8144.

The keypad displays WALK TEST for four seconds. If the system is monitored and the communication type is DD or NET, the system sends a System Test Begin report to the central station. After four seconds, the keypad displays the zone type choices for testing.

BG FI PN SV

Zone Types

Select the zone type you want to test. An asterisk next to the zone type indicates the zone type chosen for testing. Press the select key or area again to deselect the zone type. When you have selected all the zone types you want for testing, press **CMD** to display the next Walk Test option.

BG (Burglary zones) - Select BG to test hardwired burglary zones. Includes all NT, DY, EX, A1, and A2 zones.

FI (Fire zones) - Select FI to test hardwired fire zones. Includes all FI and FV zones.

PN (Panic zones) - Select PN to test hardwired panic zones. Includes all PN and EM zones.

SV (Supervisory zones) - Select SV to test hardwired supervisory zones. Includes all SV zones.

During the Walk Test, trip each zone device or button on the system for 1 to 2 seconds. You do **NOT** have to hold the zones for 2 seconds in normal mode for PN type zones. You are only required to hold the panic during the Walk Test because the zone takes additional time to report when the system is in test mode.

WLS PIR

WLS (Wireless Check-in Test) - Select WLS to automatically test wireless transmitter communications. Includes all wireless devices except key fobs and transmitters programmed for a supervision time of 0 (zero).

PIR (Wireless PIR Walk Test) - The PIR Walk Test allows the installer to verify the 1122, 1126, or 1127 operation. When enabled, the PIR LED flashes each time motion is detected for up to 30 minutes. This is a local test only and no messages are sent to the Central Station.

BELL NO YES PULS

Bell Action

This option selects the bell output action when a zone under test faults. This option allows the panel bell, and/or burglary bell, and/or fire bell to turn ON and then OFF each time a zone is tripped (opened or shorted).

NO - Select NO for no bell output action during Walk Test.

YES - Select YES to turn on any bell output for 2 seconds during Walk Test.

PULS - Select PULS to turn on any bell output for 1/4 second during Walk Test. Any LX-Bus device output turns on for 1.6 seconds due to the polling cycle.

TRIPS: XXX END

Trip Counter For Walk Test

Once in the Walk Test, walk around and trip each protective device. Continue tripping devices until the entire system is tested.

With each zone trip during the Walk Test:

- Keypad display increments each time a selected zone is opened or shorted
- The keypad buzzes for two seconds
- The panel sounds the alarm bells as programmed in Bell Action
- Each time a FI, FV, or SV zone trips, a Sensor Reset occurs.

If ENHANCED ZONE TEST is selected as YES:

A Verify message is sent at the time the zone trip occurs instead of at the end of the Walk Test.

For FI, FV, SV, or CO zone types, the Verify message is sent at the initial trip.

For all other zone types, the Verify message is sent when the zone restores. This allows the Central Station to count the number of devices per zone.

END - Select END to stop the Walk Test. When the Walk Test ends or a 20-minute time-out expires, a final Sensor Reset occurs. The System Test End message is sent to the receiver along with Verify and Fail messages for each zone under test. Faulted zones then display on the keypad.

IN PROGRESS XMIN
CHECKIN: CC/TT END

Trip Counter For DMP Wireless Check-in Test (WLS)

Displays the number of wireless zones that automatically communicate a supervisory check-in message. The test will run for a total of 5 minutes. During the 5 minutes the transmitters are being tested multiple times. At the end of the 5 minutes the results will be displayed. A timer will be displayed at the keypad to indicate that the test is in progress. In order for a transmitter to pass it must have checked in 3 or more times. The results will display which transmitters have failed the test.

- The number of zones that check in. (CC in the example).
- The total number of wireless zones programmed for supervision that should check in. (TT in the example).

CKIN:XXX/ZZZ END

END - Select END to stop the Wireless Test. When the test ends or a 5-minute time-out expires, normal wireless zone processing returns. If all transmitters check-in, both numbers match within five (5) minutes. If a transmitter has multiple zones (1101, 1114, etc.), all zones are included in the counts. Failed wireless zones display on the keypad.

TEST END WARNING

Test End Warning

When five minutes remain on the 20 minute Walk Test timer, the keypad displays TEST END WARNING. If no additional test zone trips occur, the test ends and a final Sensor Reset automatically occurs. The System Test End message is sent to the receiver along with Verify and Fail messages for each zone under Walk Test. Faulted zones then display on the keypad.

Key fobs do not send failure messages in order to prevent functioning key fobs that are not present at the time of the test from being reported as MISSING.

ZONE: 10 -FAIL
SOUTH LOBBY

Failed Zones Display

For each zone that did not trip (failed), except key fobs, at least once during the Walk Test, all keypads with matching Display Areas display the zone name and number and buzz for one second. Any selected (*FI *PN *CO *SV) 24-hour zone that is faulted at the end of the Walk Test displays a trouble condition for that zone regardless of the message programmed for the open or short condition of the zone and a zone trouble is sent to the receiver. Press **CMD** to display the next failed zone.

For the Wireless Check-in Test, failed wireless zones display only on the keypad. Zone Verify/Fail reports are not sent to the central station receiver for the wireless check-in test.

WIRELESS CHECK-IN AND SUPERVISION DEFINITIONS

DMP 1100 Series Supervision Time Explained

The supervision time programmed for DMP 1100 Series wireless is the number of minutes that must elapse before a transmitter missing message is generated for a transmitter that is not sending its automatically generated supervision message. The supervision time is programmable to 3, 60, 240 minutes. Selecting 0 (zero) disables supervision time.

KEYPAD SPEAKER OPERATION

When using LCD Keypads, the panel provides distinct speaker tones from the keypad for Fire, Burglary, Zone Monitor, and Prewarn events. The list below details the conditions under which the speaker is turned on and off for each event.

Fire	On - Fire zone alarm and Bell Output or Fire Bell Output is ON. Off - Alarm Silence.
Burglary	On - Burglary zone alarm and Bell Output or Burglary Bell Output is ON. Off - Alarm Silence.
Zone Monitor	On - One time only when a monitored zone is tripped. Off - After one tone.
CO	On - CO zone alarm and Bell Output are ON. Off - Using Sensor Reset option while no additional CO type zones are in alarm.
Prewarn	On - During Entry Delay. Off - When Entry Delay expires.

CROSS ZONING

Caution must be taken when cross zoning devices to ensure that the Cross Zone Time is long enough to allow an intruder to trip both devices before it expires. A Cross Zone Time that is too short may allow an intruder to trip the devices and allow only a zone fault report be sent to the central station.

When a Cross Zoned zone trips a FAULT report is sent to the SCS-1R or SCS-VR Receiver. When two Cross Zoned zones trip within the Cross Zone Time, both zones send ALARM signals to the receiver.

USER PROFILES

A profile defines the authority of each user code in the system. Profiles are programmed in the Keypad User Menu. Several characteristics associated with each User Profile define its authority within the system. To effectively program an XR150INT/XR550INT Series system, you must understand the interrelationship between profiles, devices, output groups, and areas. Below is a brief explanation of the User Profile elements. For more information about user profiles, refer to the User Profiles Record and the XR150INT/XR550INT Users Guide ([LT-1278INT](#)).

Profiles cannot be changed via keypad in an All/Perimeter or Home/Sleep/Away system. Use the default profiles 1 through 10.

Profile Number - Each profile may be assigned a unique number from 1 to 99.

Profile Name - Each profile may be assigned a 32-character name. The Profile Number is the default name.

Area Number - Each profile may be assigned specific areas of the system for arming and disarming. When creating profiles 1 to 98, NO areas are assigned by default. The default for profile 99 is ALL areas assigned. Profile 99 is preprogrammed in the system at the factory.

Access Area Number - Each profile may be assigned door access area assignments. Default for profile 1 to 98 is NO areas assigned. Default for profile 99 is ALL areas assigned. Profile 99 is preprogrammed at the factory.

Output Group Assignment - Each profile may be assigned an output group number from 1 to 10. Default for profile 1 to 98 is NO output group assigned. Default for profile 99 is output group **10**. Your system may be programmed to turn on an output group at certain keypads when door access occurs.

User Menu Assignments - Each user profile may have any of the menus assigned to it as shown in the following User Profile Record. The User Profile Record lists the user menu profile assignments and the system functions users are allowed to access based on the profile numbers assigned to their codes. Always make sure that at least one administrator in your system has a profile with **all** authorities and areas.

First Access/Second Access - Each profile may be assigned two schedules to allow or restrict access and disarming times.

Inactive User Code Audit - This option allows you to choose the number of days a user code can remain unused before the panel sends an Inactive User Code message to the receiver and changes the user code to inactive. The range is 0-425 days. The default is 0. This feature is only available for XR550INT Series panels.

ZONE TYPE DESCRIPTIONS

This section describes applications for the default Keypad and LX-Bus zone types in Zone Information programming.

-- (Blank Zone)

Customizable zone type. By default, no actions are programmed to occur with Blank Zone. A zone name must be entered to use this zone type: This zone type is not the same as an *UNUSED* zone.

NT (Night Zone)

Controlled instant zone used for perimeter doors and windows and interior devices such as PIRs and Glassbreak detectors.

DY (Day zone)

Used for emergency doors or fire doors to sound the keypad buzzer and display the zone name when the zone is faulted. Day zones also send alarm reports to the receiver during the system armed periods.

EX (Exit zone)

Initiates the entry delay timer when its assigned area is fully armed. Also, can initiate an exit delay timer to allow a user to exit an area after the arming process starts.

FI (Fire zone)

Used for any type of powered or mechanical fire detection device. Typical applications are for smoke detectors, sprinkler flowswitches, manual pull stations, and beam detectors. Retard, cross zoning, and presignal options are available for the Fire zone type.

PN (Panic zone)

Used for connecting to mechanical devices that allow a user to signal an emergency alarm. Panic zones can provide either a silent or audible alarm with or without reporting to a central station receiver.

EM (Emergency zone)

These are used for reporting medical or other non-panic emergencies to the central station receiver.

SV (Supervisory zone)

Used to provide 24-hour zone supervision to devices associated with fire systems. Typical applications are tamper switches on Post Indicator Valves (PIVs), gate valves, and low and high temperature gauges.

A1 and A2 (Auxiliary 1 and Auxiliary 2)

These zones are similar to a Night zone and are typically used to protect restricted areas within a protected premises.

FV (Fire Verify zone)

Used primarily for smoke detector circuits to verify the existence of an actual fire condition. When a Fire Verify zone initiates an alarm, the panel performs a Fire Reset. If any Fire Verify zone initiates an alarm within 120 seconds after the reset, an alarm is indicated. If an alarm is initiated after 120 seconds, the cycle repeats.

AR (Arming zone)

This zone allows you to connect a keyswitch to a zone and use it to arm and disarm one or more areas.

CO (Carbon Monoxide)

This output turns on any time a Carbon Monoxide Zone (CO) is placed in alarm. The output is turned off using Sensor Reset option while no additional CO type zones are in alarm.

IN (Instant)

This provides a zone that does not follow entry or exit zones. Choose Instant if you need a zone that will not follow Entry or Exit delay.

DB (Doorbell)

This zone type is intended for use for zones that are assigned to doorbells.

FX (Final Exit)

This zone type is used to identify a zone that must be tripped before the system will arm.

TP (Tamper)

This zone type is used to identify zones that are being used for enclosure tamper switches.

COMMON KEYPAD MESSAGES

There are several common keypad messages that the keypad displays to inform the technician and end-user. The common messages are described below. Possible solutions are also provided.

Message	Meaning	Possible Solutions
INVALID AREA	The user has attempted a door access for an area they are not assigned.	Change the user access areas if access to the area is needed. If access is not needed, the user cannot enter the area.
INVALID CODE	The user code you entered is not recognized by the system.	Check the user code and try again.
INVALID PROFILE	A user attempted a function that is outside of the assigned profile.	Check the user profile settings.
INVALID TIME	A user code assigned to a specific schedule has entered outside of the valid schedule.	See Schedules and User Codes.
ENTER 2ND CODE	The area you are attempting to disarm or access is a Two Man Area.	A second and different user code must be entered.
CLOSING TIME	The scheduled has expired but the area is not armed.	Users still on the premise should arm the system or extend the schedule to a later time.
LATE TO CLOSE	The system was not armed at its scheduled closing time.	Users still on the premise should arm the system or extend the schedule to a later time.
FAILED TO EXIT	A user assigned the anti-passback option has attempted to re-enter an area from which they did not exit properly.	The user must exit the area through the proper door. If not possible, your system administrator should select the Forgive option in the User Codes menu.
AC TROUBLE	The system AC is low or missing.	Check that all AC connections are good.
BATTERY TROUBLE	The System battery is either low or missing.	Check that the battery connections are good and the battery is still good.
PHONE LINE 1 TROUBLE	There is trouble with the phone line supervision.	Plug in the phone line.
SYSTEM TROUBLE or SERVICE REQUIRED	There is a problem with one or more components in the system.	Make sure the RESET jumper is removed from the panel. Make sure there is not a short or open condition on the green data wire to the keypad. You may also need to check that all of the keypads and expansion modules on the bus are good.
SYSTEM BUSY	The system is performing another task with a higher priority.	Wait a few moments for the system to complete the task. Make sure the RESET jumper is not on the panel. If the message displays for a long period of time, the processor could be locked up.
4-WIRE BUS TROUBLE	There is not a supervised device on the bus.	Program a device to be supervised.
	There is low voltage or an open yellow wire.	Make sure all wires are connected.
	Two devices share the same address.	Program one of the devices to a unique address.
TRANSMIT FAIL	The panel has attempted to communicate with the central station 10 times and has not succeeded.	Verify your communication type, account number, and phone number. Make sure the telephone line is connected and working properly.
NON-POLLED ADDRESS	The device is not set to DOOR, KEYPAD or FIRE in Device Setup during programming.	Program the device as DOOR, KEYPAD or FIRE in Device Setup.
ENTER CODE (to enter Programming)	A lockout code has been programmed for the panel.	Enter the lockout code.
WIRELESS TROUBLE	The panel is unable to communicate with the wireless receiver.	Verify the receiver is properly connected to the panel. Verify the correct House Code is programmed in System Options. Satisfy the front and/or rear tamper.
	The wireless receiver's tamper may be faulted.	

AREA ACCOUNT NUMBER MESSAGES

XR150INT/XR550INT systems send an area account number instead of the system account number with the following panel messages/events based on the area assigned to the zone that initiated the alarm:

- WARNING: Alarm Bell Silenced (S34)
- Abort Signal Received (S45)
- Cancel Signal Received (S49)
- ALERT: System Recently Armed (S78)
- ALERT: Exit Error (S80)
- ALARM: Verify Signal Received (S96) (not currently sent on area arming systems)
- The panel has always sent the area account number for the following messages:
 - Zone event messages for all non-24 hour zones assigned to an area
 - Arming
 - Disarming

The panel sends the following messages using the area account number based on the lowest area number in Display Areas programming from the keypad being used:

- User Code Add/Change/Delete
- Door Access/Denied
- User 1 Ambush and Early Morning Ambush
- System Test Begin/End
- Unauthorized Entry
- Service Code and Service Request

The panel sends the following messages using the area account number based on the area number:

- Late to Arm for area schedules

SPECIFICATIONS

Power Supply	Type A
Security Grade	3
EN 50131-1	
Notification Requirements	Grade 3, Option A, B, C
Environmental Class	II
Operating Temperature	0°C - 49°C
Relative Humidity	80%
Weight	6.1 kg
Dimensions	26 cm W x 14 cm H
Max Ripple Voltage	50 mV

INTERNATIONAL CERTIFICATIONS

INTERTEK (ETL) LISTED

EN 50130-4:2011+A1:2014	Alarm systems. Electromagnetic compatibility. Product family standard: Immunity requirements for components of fire, intruder, hold up, CCTV, access control and social alarm systems.
EN 50130-5:2011	Alarm systems. Environmental test methods.
EN 50131-1:2006+A1:2009	Alarm systems. Intrusion and hold-up systems. System requirements.
EN 50131-3:2009	Alarm systems. Intrusion and hold-up systems. Control and indicating equipment.
EN 50131-5-3:2005+A1:2008	Alarm systems. Intrusion systems. Requirements for interconnections equipment using radio frequency techniques.
EN 50131-6:2008	Alarm systems. Intrusion systems. Power supplies.
EN 50136-1:2012	Alarm systems. Alarm transmission systems and equipment. General requirements for alarm transmission systems.
EN 50136-2:2013	Alarm systems. Alarm transmission systems and equipment. Requirements for Supervised Premises Transceiver (SPT).
EN 61000-3-2:2006+A1+A2	Electromagnetic compatibility (EMC) — Part 3 - 2: Limits — Limits for harmonic current emissions.
EN 61000-3-3:2013	Electromagnetic compatibility (EMC) - Part 3-3: Limits- Limitation of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, for equipment with rated current ≤ 16 A per phase and not subject to conditional connection.
EN 61000-6-4:2007	Emission standard for industrial environments.



Designed, engineered, and manufactured in Springfield, MO using U.S. and global components.

LT-1232 1.01 24301

© 2025

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard
Springfield, Missouri 65803-8877

800.641.4282 | DMP.com