


TANE ALARM PRODUCTS



Installation instructions for SM-20 WG family of Commercial - Surface Mount - Door and Window Contacts

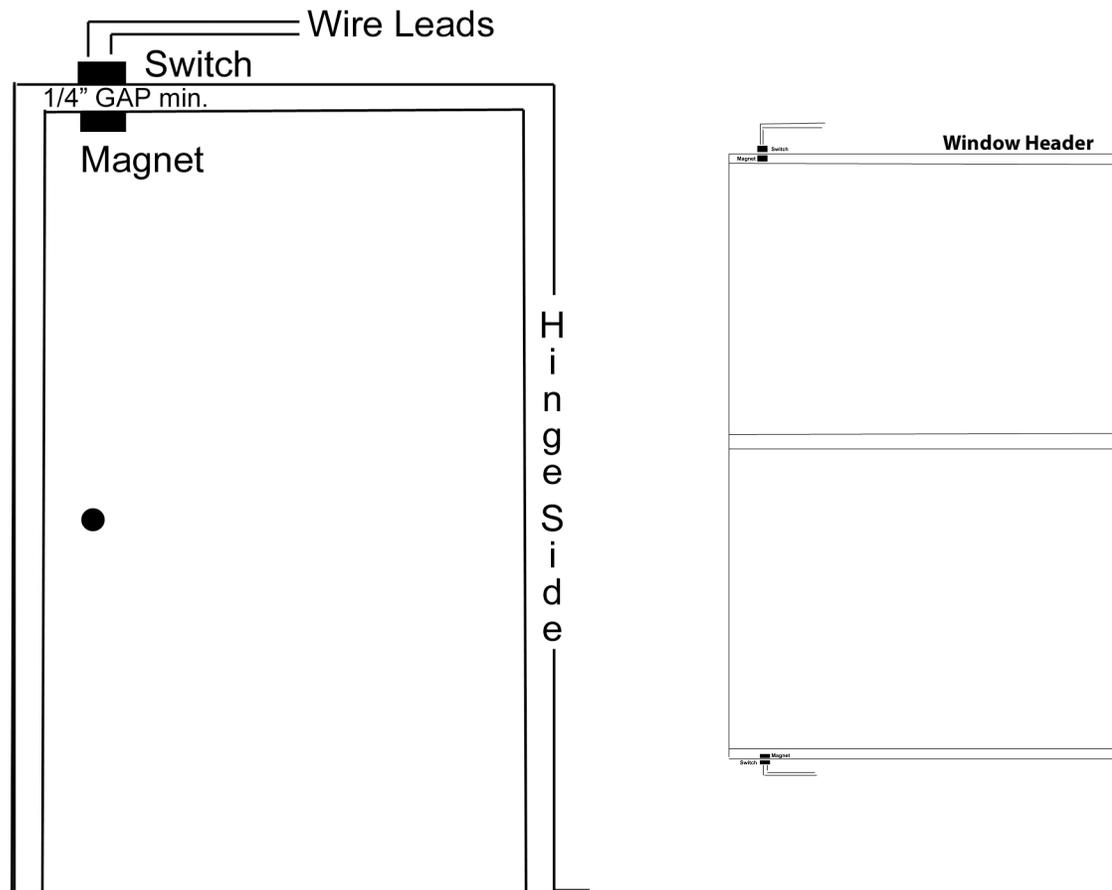

- Surface mount switch at top or side (NOT on hinge side) of door or hinged window frame
- On double hung window, surface mount the switch at top, side or bottom of window frame
- Surface mount the magnet parallel to the switch
- Make sure Gap is not less than 1/4" between switch and magnet
- Splice leads from switch into alarm circuit
- NOT intended for Steel doors or windows

WWW.TANEALARM.COM

906 Jericho Turnpike
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050
Fax: 516-326-9125 Email: info@tanealarm.com