Remote Link and System Link Feature Update
August 2008

Version 1.44 Software Update

Effective August 2008, all Remote Link and System Link software is being manufactured as Version 1.44 (8/1/08). This version is an update from the 1.43 (7/11/08) software previously shipped and contains new features.

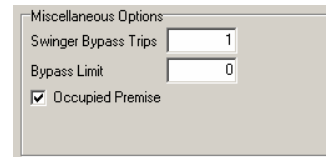Remote Link updates are available for download free of charge on the DMP Dealer Direct Website at http://dmp.com/dealer.

Features

Occupied Premise

System Options now offers an option that allows the panel to automatically disarm interior areas when the entire system is armed but the end user does not exit the premises.

Occupied Premise (XR500 Series/XR2500F/XR100 Series Version 201 or higher):

For All/Perimeter or Home/Sleep/Away systems, select this option to allow the panel to automatically disarm the interior area(s) when arming all areas and a perimeter exit zone is not tripped during the exit delay. Select NO to disable this feature. Default is checked.

Easy Arm/Disarm

A new option has been added to XR100/XR500 Series Version 201 User Profiles to simplify arming and disarming.

When entering a code that has Easy Arm/Disarm enabled, the system will automatically arm or disarm all areas that are assigned to the code. The ALL NO YES? option does not display on the keypad when this option is enabled in the user profile.

Use Secondary Language

A new option has been added to XR100/XR500 Series Version 201 User Profiles to set a programmed secondary language. This option allows the programmed secondary user language to display when the Easy Arm/Disarm option is enabled and the user presents their credential or enters their user code at the Status List.
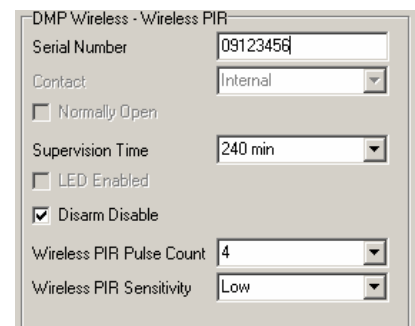
1126 Series Wireless PIRs

The next three XR100/XR500 Series Version 201 panel options have been added to support the soon to be released 1126 Series Wireless PIRs:

- 1126C-W Wireless Ceiling Mount Curtain PIR
- 1126R-W Wireless Ceiling Mount 360 PIR
- 1126W-W Wireless Ceiling Mount Wide Angle PIR

Disarm/Disable

Select this option to disable the zone tripped message (short) to the 1100X Series Receiver from the 1126 PIR transmitter during the disarmed period. When disabled, the 1126 only sends supervision, tamper and low battery messages during the disarmed period to extend the transmitter battery life. Select NO to always send zone tripped messages in addition to supervision, tamper and low battery. Default is checked.

PIR Pulse Count

Select the number of infrared pulses (2 or 4) the 1126 PIR counts before sending a short message to the 1100X Series Receiver. The first infrared pulse starts a timer and count. If no additional infrared pulses occur in 25 seconds, the timer and count are reset. Default is 4.

PIR Sensitivity

Select the sensitivity setting for the 1126 PIR. Selecting LOW sets the 1126 to operate at 75% sensitivity for installations in harsh environments. Selecting HIGH sets the PIR to maximum sensitivity. Default is LOW.

Obtaining the New Software

Remote Link Version 1.44 (8/1/08) is available for download free of charge on the DMP Dealer Direct Website at http://dmp.com/dealer. Hard copy updates on CD can be obtained from buy.dmp.com or by calling DMP Customer Service at 1-800-641-4282.